



PLAY BACK	1	1-7	10-15	17-19	21-21	22-21
RECORDING	1	2-8	9-16	18-20	22-22	23-23
PLAY BACK	2	1-2	18-18	18-12	20-21	22-23
RECORDING	2	10-10	10-11	11-11	12-12	13-13
PLAY BACK	3	15-15	15-15	15-15	15-15	15-15
RECORDING	3	15-15	15-15	15-15	15-15	15-15
PLAY BACK	4	302-302	305-305	307-307	309	309
RECORDING	4	301-301	304-304	307-307	308	308
AUT STOP	3					
PAUSE	5	301-401	401-401			

CONNECTION VOLTAGE ADAPTER			
110V	7-4	1-2	3-4
127V	7-6	1-2	3-4
220V	7-4	2-3	
240V	6-5	2-3	

3104 108 51220

3104 108 51220

3104 108 51250