


## ELECTRON TUBES

PART 5

**MAY 1971** 

Cathode-ray tubes
Associated accessories

Camera tubes Photo tubes

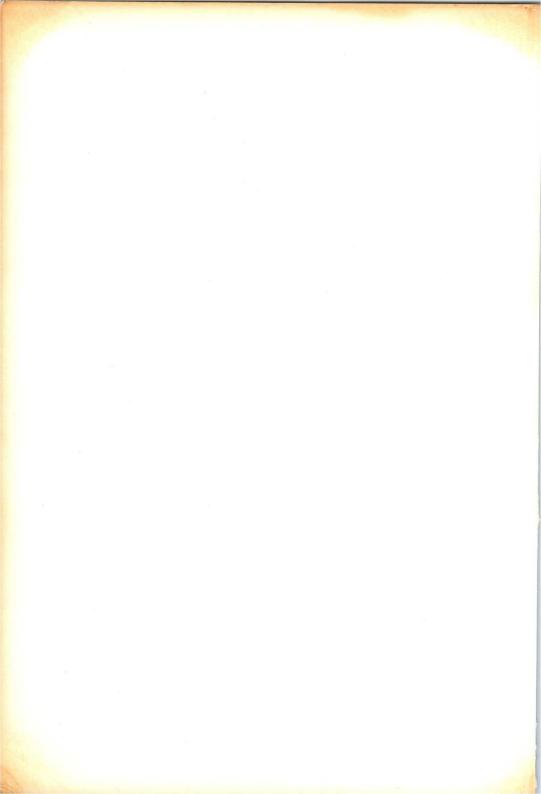

## **ELECTRON TUBES**

Part 5	May 1971
Cathode-ray tubes	
Associated accessories	
Camera tubes	
Photo tubes	
Photoconductive devices	

The Photoconductive Devices included in the previous edition of this Part will in future be incorporated in Part 4 of the Semiconductor Handbook (edition December 1970)

## DATA HANDBOOK SYSTEM

To provide you with a comprehensive source of information on electronic components, subassemblies and materials, our Data Handbook System is made up of three series of handbooks, each comprising several parts.

The three series, identified by the colours noted, are:

**ELECTRON TUBES** (9 parts)

BLUE

SEMICONDUCTORS AND INTEGRATED CIRCUITS (5 parts)

RED

COMPONENTS AND MATERIALS (5 parts)

GREEN

The several parts contain all pertinent data available at the time of publication, and each is revised and reissued annually; the contents of each series are summarized on the following pages.

We have made every effort to ensure that each series is as accurate, comprehensive and up-to-date as possible, and we hope you will find it to be a valuable source of reference. Where ratings or specifications quoted differ from those published in the preceding edition they will be pointed out by arrows. You will understand that we can not guarantee that all products listed in any one edition of the handbook will remain available, or that their specifications will not be changed, before the next edition is published. If you need confirmation that the pusblished data about any of our products are the latest available, may we ask that you contact our representative. He is at your service and will be glad to answer your inquiries.

## **ELECTRON TUBES (BLUE SERIES)**

This series consists of the following parts, issued on the dates indicated.

Part 1

January 1971

Transmitting tubes (Tetrodes, Pentodes)

Associated accessories

Part 2

March 1971

Tubes for microwave equipment

Part 3

March 1970

Special Quality tubes

Miscellaneous devices

Part 4

April 1971

Receiving tubes

Part 5

May 1971

Cathode-ray tubes Photo tubes Camera tubes Photoconductive devices Associated accessories

Part 6

June 1970

Photomultiplier tubes Scintillators Photoscintillators Radiation counter tubes
Semiconductor radiation detectors
Neutron generator tubes
Associated accessories

Part 7

July 1970

Voltage stabilizing and reference tubes Counter, selector, and indicator tubes Trigger tubes Switching diodes Thyratrons
Ignitrons
Industrial rectifying tubes
High-voltage rectifying tubes

Part 8

August 1970

T. V. Picture tubes

Part 9

January 1971

Transmitting tubes (Triodes)
Tubes for R.F. heating (Triodes)

Associated accessories

## SEMICONDUCTORS AND INTEGRATED CIRCUITS (RED SERIES)

This series consists of the following parts, issued on the dates indicated.

## Part 1 Diodes and Thyristors

September 1970

General Signal diodes Tunnel diodes Variable capacitance diodes Voltage regulator diodes

Rectifier diodes
Thyristors, diacs, triacs
Rectifier stacks
Accessories
Heatsinks

Part 2 Low frequency; Deflection

October 1970

General
Low frequency transistors (low power)
Low frequency power transistors

Deflection transistors Accessories

Part 3 High frequency; Switching

November 1970

General High frequency transistors Switching transistors Accessories

Part 4 Special types

December 1970

General
Transmitting transistors
Microwave devices
Field effect transistors
Dual transistors
Microminiature devices for
thick- and thin-film circuits

Beam lead devices for thick- and thin-film circuits Photo devices Accessories

Part 5 Integrated Circuits

March 1971

General
Digital integrated circuits
DTL (FC family)
TTL (FJ family)
MOS (FD family)

Linear integrated circuits

## COMPONENTS AND MATERIALS (GREEN SERIES)

This series consists of the following parts, issued on the dates indicated.

## Part 1 Circuit Blocks, Input/Output Devices

September 1970

Circuit blocks 100 kHz Series
Circuit blocks 1-Series
Circuit blocks 10-Series
Circuit blocks 20-Series
Circuit blocks 40-Series
Counter modules 50-Series
Norbits 60-Series, 61-Series

Circuit blocks 90-Series
Circuit blocks for ferrite core
memory drive
Input/output devices

## Part 2 Resistors, Capacitors

December 1970

Fixed resistors Variable resistors Non-linear resistors Ceramic capacitors Polyester, polycarbonate, polystyrene, paper capacitors
Electrolytic capacitors
Variable capacitors

## Part 3 Radio, Audio, Television

February 1971

FM tuners
Coils
Piezoelectric ceramic resonators
and filters
Loudspeakers
Audio and mains transformers

Television tuners
Components for black and white television
Components for colour television
Deflection assemblies for camera tubes

## Part 4 Magnetic Materials, White Ceramics

**April 1971** 

Ferrites for radio, audio and television Ferroxcube potcores and square cores Small coils, assemblies and assembling parts Ferroxcube transformer cores Piezoxide Permanent magnet materials

# Part 5 Memory Products, Magnetic Heads, Quartz Crystals, Microwave Devices, Variable Transformers, Electro-mechanical Components

Ferrite memory cores Matrix planes, matrix stacks Complete memories Magnetic heads Quartz crystal units, crystal filters Isolators, circulators Variable mains transformers Electro-mechanical components Technology relating to the products described in this publication is shared by the following companies.

Argentina

FAPESA I.y.C. Melincué 2594 Tel. 50-9941/8155 BUENOS AIRES

#### Australia

Philips Industries Ltd. Miniwatt Electronics Division 20, Herbert St. Tel. 43-2171 ARTARMON, N.S.W.

Austria WIVEG Zieglergasse 6 Tel. 93 26 22 A1072 VIENNA

Belgium M.B.L.E. 80, rue des Deux Gares Tel. 23 00 00 1070 BRUSSELS

Brazil IBRAPE S.A. Av. Paulista 2073-S/Loja Tel. 278-1111 SAO PAULO

Canada Philips Electron Devices 116, Vanderhoof Ave. Tel. 425-5161 TORONTO 17, Ontario

Chile Philips Chilena S.A. Av. Santa Maria 0760 Tel. 39-40 01 SANTIAGO

Colombia SADAPE S.A. Calle 19, No.5-51 Tel. 422-175 BOGOTA D.E. 1

Denmark Miniwatt A/S Emdrupvej 115A Tel. (01) 69 16 22 DK-2400 KØBENHAVN NV

Oy Philips A.B. Elcoma Division Kaivokatu 8 Tel. 10 915 HELSINKI 10

France R.T.C. La Radiotechnique-Compelec Avenue Ledru Rollin 130 Tel. 357-69-30 PARIS 11

Germany VALVO G.m.b.H. Valvo Haus Burchardstrasse 19, Tel. (0411) 33 91 31 2 HAMBURG 1

Greece
Philips S.A. Hellénique
Elcoma Division
52, Av. Syngrou
Tel. 915.311
ATHENS

Hong Kong
Philips Hong Kong Ltd.
Components Dept.
St. George's Building 21st Fl.
Tel. K-42 82 05
HONG KONG

India INBELEC Div. of Philips India Ltd. Band Box House 254-D, Dr. Annie Besant Road Tel. 45 33 86, 45 64 20, 45 29 86 Worli, Bombay 18 (WB)

Indonesia P.T. Philips-Ralin Electronics Eleoma Division Djalan Gadjah Mada 18 Tel. 44 163 DJAKARTA

Ireland
Philips Electrical (Ireland) Ltd.
Newstead, Clonskeagh
Tel. 69 33 55
DUBLIN 14

Italy Philips S.p.A. Sezione Elcoma Piazza IV Novembre 3 Tel. 69 94 MILANO

Japan NIHON PHILIPS 32nd Fl., World Trade Center Bldg. 5, 3-chome, Shiba Hamamatsu-cho Minato-ku, Tel. (435) 5204-5 TOKYO

Mexico
Electrónica S.A. de C.V.
Varsovia No.36
Tel. 5-33-11-80
MEXICO 6, D.F.

Netherlands Philips Nederland N.V. Afd. Elonco Boschdijk, VB Tel. (040) 43 33 33 EINDHOVEN

New Zealand EDAC Ltd. 70-72 Kingsford Smith Street Tel. 873 159 WELLINGTON

Norway Electronica A/S Middelthunsgate 27 Tel. 46 39 70 OSLO 3

Peru CADESA Ir. Jlo, No.216 Appartado 10132 Tel. 7 73 17 LIMA

Portugal Philips Portuguesa S.A.R.L. Rua Joaquim Antonio de Aguiar 66 Tel. 68 31 21/9 LISBOA South Africa EDAC (PTY) Ltd. South Park Lane New Doornfontein Tel. 24/6701-2 JOHANNESBURG

Spain COPRESA S.A. Balmes 22 Tel. 2 32 03 00 BARCELONA 7

Sweden ELCOMA A.B. Lidingövägen 50 Tel. 08/67 97 80 10250 STOCKHOLM 27

Switzerland Philips A.G. Edenstrasse 20 Tel. 051/44 22 11 CH-8027 ZUERICH

Taiwan Philips Taiwan Ltd. San Min Building, 3rd Fl. 57-1, Chung Shan N. Road Section 2 Tel. 559742, 512281 TAIPEI

Turkey Turk Philips Ticaret A.S. EMET Department Gümüssuyu Cad. 78-80 Tel. 45.32.50 Beyoglü, ISTANBUL

United Kingdom Mullard Ltd. Mullard House Torrington Place Tel. 01-580 6633 LONDON WC1E 7HD

United States
Amperex Electronic Corp.
Electron Tubes Div.
Tel. 516 WE 1-6200
HICKVILLE N.Y.
Sem. and Microcircuits Div.
Tel. 401-762-9000
SLATERSVILLE R.I. 02876
Electronic Components Div.
Tel. 516-234-7000
HAUPPAGE N.Y.


Ferroxcube Corp. (Memory Products) P.O. Box 359 Tel. (914) 246-2811 SAUGERTIES, N.Y. 12477

Uruguay Luzilectron S.A. Rondeau 1567, piso 5 Tel. 9 43 21 MONTEVIDEO

Venezuela C.A. Philips Venezolana Elcoma Department Colinas de Bello Monte Tel. 72.01.51 CARACAS

## Cathode-ray tubes



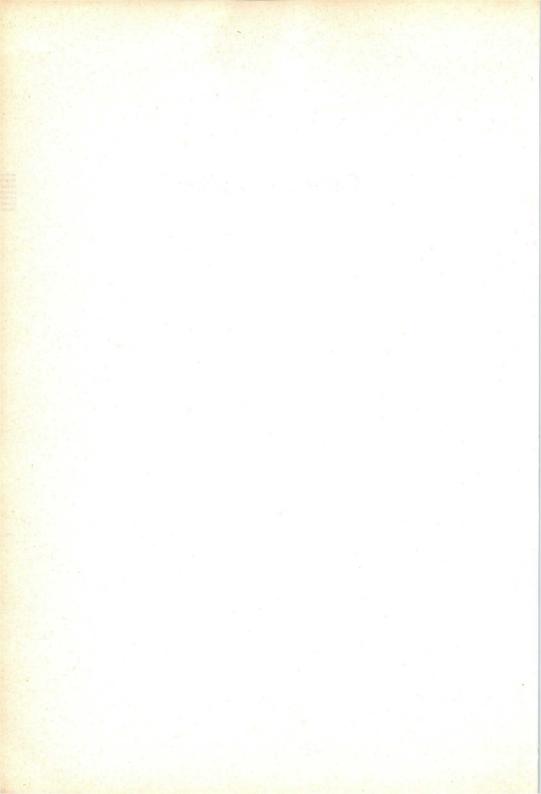

## LIST OF SYMBOLS

Symbols denoting electrodes and electrode connections	
Heater or filament	f
Cathode	k
Grid Grids are distinguished by means of an additional numeral; the electrode nearest to the cathode having the lowest number.	g
Deflection plates intended for deflection in horizontal direction.	x <sub>1</sub> , x <sub>2</sub>
Deflection plates intended for deflection in vertical direction.  Sectioned deflection plates are indicated by an additional decimal e.g. y <sub>1.1</sub> y <sub>1.2</sub> and y <sub>2.1</sub> y <sub>2.2</sub>	у1, у2
External conductive coating	m
Fluorescent screen	£
Tube pin which must not be connected externally	i.c.
Tube pin which may be connected externally	n.c.
Symbols denoting voltages	
Symbol for voltage, followed by an index denoting the relevant electrode.	V
Heater or filament voltage	$v_{f}$
Peak value of a voltage	Vp
Peak to peak value of a voltage	Vpp

Remark I	The positive electrical current is directed opposite to the direction of the electron current.	
Remark II	The symbols quoted represent the average values of the concerning currents unless otherwise stated.	
	current followed by an index denoting ant electrode.	I
Heater or fi	ilament current	$I_f$
Symbols de	noting powers	
Dissipation of the fluorescent screen		We
Grid dissipation		Wg
Symbols der	noting capacitances	
See I.E.C.	Publication 100.	
Symbols der	noting resistances	
Symbol for resistance followed by an index for the relevant electrode pair. When only one index is given the second electrode is the cathode.		
When R is read "imp	replaced by Z the "resistance should pedance"	
Symbols der	noting various quantities	
Brightness		
Frequency		
Magnetic field strength		
Deflection of	coefficient	M

## GENERAL OPERATIONAL RECOMMENDATIONS CATHODE-RAY TUBES

#### **GENERAL**

Unless otherwise stated the data are given for a nominal tube.

#### LIMITING VALUES

Unless otherwise stated the tubes are rated according to the absolute maximum rating system.

#### HEATER

## Parallel operation

The heater voltage must be within  $\pm 7~\%$  of the nominal value when the supply voltage is at its nominal value, and when a tube having the published heater characteristics is employed.

This figure is permissible only if the voltage variation is dependent upon more than one factor. In these circumstances the total tolerance may be taken as the square root of the sum of the squares of the individual deviations arising from the effect of the tolerances of the separate factors, providing no one of these deviations exceeds  $\pm 5$  %. Should the voltage variation depend on one factor only, the voltage variation must not exceed  $\pm 5$  %.

## Series operation

The heater current must be within  $\pm 5\,\%$  of the nominal value when the supply voltage is at its nominal value and a tube having the published heater characteristics is employed. This figure is permissible only if the current variation is dependent upon more than one factor. In these circumstances the total tolerance may be taken as the square root of the sum of the squares of the individual deviations arising from the effects of the tolerances of the separate factors, providing no one of these deviations exceeds  $\pm 3.5\,\%$ . Should the total current variation depend upon one factor only, the current variation must not exceed  $\pm 3.5\,\%$ .

When calculating the tolerances of associated components, the ratio of the change of heater voltage to the change of heater current in a typical series chain including a cathode ray tube is taken as 1.8, both deviations being expressed as percentages.

February 1969

### **HEATER** (continued)

With certain combinations of valves and tube, differences in the thermal inertia may result in particular heaters being run at exceedingly high temperature during the warming up period. During this period unless otherwise stated in the published data, it is permissible for the heater voltage of the tube to rise to a maximum value of  $50\,\%$  in excess of the nominal rated value when using a tube with the published heater characteristics. A surge limiting device may be necessary in order to meet this requirement. When measuring the surge value of heater voltage, it is important to employ a peak reading device, such as an oscilloscope.

In addition to the quoted above, fluctuations in the mains supply voltage not exceeding  $\pm 10\,\%$  are permissible. These conditions are, however, the worst which are acceptable and it is better practise to maintain the heater as close to its published ratings as possible. Furthermore in all types of equipment closer adjustment of heater voltage or current will react favourably upon tube life and performance.

#### CATHODE

The potential difference between cathode and heater should be as low as possible and in any case must not exceed the limiting value given on the data sheets for individual tubes. Operation with the heater positive with respect to cathode is not recommended. In order to avoid excessive hum the A.C. component of the heater-to-cathode voltage should be as low as possible e.g. less than 20  $V_{\rm rms}$ . When the heater is in a series chain or earthed, the 50 c/s impedance between heater and cathode should not exceed 100 k $\Omega$ . If the heater is supplied from separate transformer windings the resistance between heater and cathode must not exceed 1 M $\Omega$ .

#### ELECTRODES

In no circumstances should the tube be operated without a D.C. connection between each electrode and the cathode. The total effective impedance between any electrode and the cathode should be as low as possible and must never be allowed to exceed the published maximum value.

#### **ELECTRODE VOLTAGES**

Reference point for electrode voltages is the cathode. For cathode drive service the reference point is grid No.1.

#### Grid cut-off voltages

Values are given for the limits of grid cut-off voltage per unit of the first accelerator voltage. The brightness control voltage should be arranged so that it can handle any tube within the limits shown, at the appropriate first accelerator voltage.

## First accelerator voltage

The first accelerator electrode of a so called unipotential lens provides by applying a fixed voltage independent focus and brightness controls. Care should be taken not to exceed the maximum and minimum limits for reasons of reliability and performance.

## Deflection blanking electrode voltage

The mean potential of the deflection blanking electrode should be equal to that of the first accelerator.

If applicable the voltage difference ( $\Delta V_{g_3}$ ) given in the data should be applied to the beam blanking electrode to obtain beam blanking of a stated beam current for all tubes of the relevant type.

## Focusing voltage

The focusing electrode voltage limits are given in the data. The focus voltage supply should be arranged such that it can handle these limits, so that in any tube the cross-sectional area of the electron-beam on the screen can be optimally displayed. As the focus current is very limited a high resistance series chain may be used.

## Astigmatism control electrode voltage

To achieve optimum performance under all conditions it is desirable to apply a voltage for control of astigmatism (a difference in potential of this electrode and the y plates). The required range to cover any tube is given in the relevant data.

## Beam centring electrode voltage

The beam centring electrode facilitates the possibility to centre the scan in x-direction with respect to the geometric centre of the faceplate by applying a voltage, the limits of which are given in the relevant data, to this electrode. Optimum condition is obtained when the brightness at both left and right edges of the scan are equal.

## Deflection plate shield voltage

It is essential that the deflection plate shield voltage equals the meany plates voltage.

## Geometry control electrode voltage

By varying the potential of this electrode the necessary range of which is given in the relevant data the possible occurrence of pin-cushion and barrel-pattern distortion can be controlled.

February 1969

3

## Deflection voltages

For optimum performance it is essential that true symmetrical voltages are applied. It should further be noted that the mean x and y plate potentials must be equal. Moreover the deflection plate shield voltage, the mean astigmatism control voltage, if applicable the mean beam centring electrode voltage and the geometry electrode voltage should also be equal to the mean x and y plate potentials. If use is made of the full deflection capabilities of the tube, the deflection plates will intercept part of the electron beam near the edge of the scan. Therefore a low impedance deflection plate drive is necessary.

#### Raster distortion and its determination

Limits of raster distortion are given for most tubes.

A graticule, consisting of concentric rectangles is aligned with the electrical x axis of the tube. The edges of a raster will fall between these rectangles with optimum correction potentials applied.

### Measuring procedure:

- a) Shift the x-trace to the centre of the graticule.
- b) Align horizontal centre line of graticule with the centre line of the x-trace.
- c) Shift x-trace vertically between resp. upper and lower two horizontal lines of graticule.
  - The centre of the x-trace now will not fall outside the area bounded by the horizontal graticule lines.
- d) Without moving the graticule, switch to a vertical trace and shift this trace horizontally (resp. left and right) between the pairs of vertical lines of the graticule, and also now the centre of the y-trace will not fall outside the area bounded by the vertical graticule lines.
- e) Focus and astigmatism will be adjusted for optimum performance.
- f) Pattern geometry correction will be adjusted for optimum performance in the sense of minimizing simultaneously the deviation of the centre of x-respectively y-trace.

## Linearity

The linearity is defined as the sensitivity at a deflection of 75% of the useful scan with respect to differ from the sensitivity at a deflection of 25% of the useful scan. These sensitivities will not differ by more than the indicated value.

## Post deflection shield voltage

In order to optimize contrast in mesh tubes a fixed negative voltage with respect to the geometry control electrode voltage should be applied. The range is given in the data.

### Helix resistance

In order to calculate the high tension supply a minimum resistance is given in the data.

## Final accelerator voltage

Tubes with PDA are designed for a given final accelerator voltage to astigmatism control electrode voltage ratio. Operation at higher ratio may result in changes in deflection uniformity and pattern distortion.

## High tension supply

In order to avoid damage of the screen it is important that prior to the high tension a deflection voltage e.g. the time base voltage is applied.

#### LINE WIDTH

Shrinking raster method. Conditions as given in the relevant data.

Focus and astigmatism potentials should be adjusted for optimum performance. Optimum performance is that adjustment which will simultaneously minimize the horizontal and vertical trace widths at the centre of the useful scan.

The raster shall be compressed until the line structure first disappears or begins to overlap or show reverse line structure.

The line width is equal to the quotient of the width of the compressed pattern transverse to the line structure divided by the number of lines which are being scanned.

In older types the line width is measured on a circle with the aid of a microscope.

#### CAPACITANCES

Unless otherwise stated the values given are nominal values measured on a cold tube on the tube contacts. The contacts and measuring leads or sockets being screened.

#### MOUNTING

Unless otherwise stated the mounting position is any. However, the tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

To avoid dangerous glass strain care should be taken when installing the tube.

## Shielding

The tubes must be shielded against electrical and magnetic fields.

Special attention should be paid to the mounting of transformers, coils etc.

#### SCREEN

To prevent screen burn stationary or slow moving spots together with high screen currents should be avoided.

If measurements are to be made under high ambient light conditions it is advisable to use a contrast improving filter and or a light hood.

#### TRACKING ERROR

Tracking is the ability of a multigun tube to superimpose simultaneously information from each gun.

Tracking error is the maximum allowable distance between the displays of any two guns.

## RATING SYSTEMS

( in accordance with I.E.C. publication 134 )

## Absolute maximum rating system

Absolute maximum ratings are limiting values of operating and environmental conditions applicable to any electronic device of a specified type as defined by its published data, which should not be exceeded under the worst probable conditions.

These values are chosen by the device manufacturer to provide acceptable serviceability of the device, taking no responsibility for equipment variations, environmental variations, and the effects of changes in operating conditions due to variations in the characteristics of the device under consideration and of all other electronic devices in the equipment.

The equipment manufacturer should design so that, initially and throughout life, no absolute-maximum value for the intended service is exceeded with any device under the worst probable operating conditions with respect to supply voltage variation, equipment component variation, equipment control adjustment, load variations, signal variation, environmental conditions, and variations in characteristics of the device under consideration and of all other electronic devices in the equipment.

## Design-maximum rating system

Design-maximum ratings are limiting values of operating and environmental conditions applicable to a bogey electronic device of a specified type as defined by its published data, and should not be exceeded under the worst probable conditions.

These values are chosen by the device manufacturer to provide acceptable serviceability of the device, taking responsibility for the effects of changes in operating conditions due to variations in the characteristics of the electronic device under consideration.

The equipment manufacturer should design so that, initially and throughout life, no design-maximum value for the intended service is exceeded with a bogey device under the worst probable operating conditions with respect to supply-voltage variation, equipment component variation, variation in characteristics of all other devices in the equipment, equipment control adjustment, load variation, signal variation and environmental conditions.

February 1969

## Design-centre rating system

Design-centre ratings are limiting values of operating and environmental conditions applicable to a bogey electronic device of a specified type as defined by its published data, and should not be exceeded under normal conditions.

These values are chosen by the device manufacturer to provide acceptable serviceability of the device in average applications, taking responsibility for normal changes in operating conditions due to rated supply-voltage variation, equipment component variation, equipment control adjustment, load variation, signal variation, environmental conditions, and variations in the characteristics of all electronic devices.

The equipment manufacturer should design so that, initially, no design-centre value for the intended service is exceeded with a bogey electronic device in equipment operating at the stated normal supply-voltage.

## TYPE DESIGNATION

Two type designation systems are currently in use for our C.R. tubes. All future tubes will have numbers in the "new system", earlier tubes will retain numbers in the "old system".

### NEW CODE SYSTEM (PRO-ELECTRON TYPE DESIGNATION CODE)

The type number consists of a single letter followed by two sets of figures, and ends with one or two letters.

The first letter indicates the prime appplication of the tube:

- A Television display tube for domestic application
- D Oscilloscope tube single trace
- E Oscilloscope tube multiple trace
- F Radar display tube direct view
- L Display storage tube
- M T.V. display tube for professional application direct view
- P Display tube for professional application projection
- Q Flying spot scanner

The first group of figures indicates the diameter or diagonal of the luminescent screen in cm.

The second group of figures is a two-figure or three-figure serial number indicating a particular design or development.

The second group of letters indicates the properties if the phosphor screen. The first letter denotes the colour of the fluorescence or phosphorescence in the case of long or very long afterglow screens.

The second letter of this group is a serial letter to denote other specific differences in screen properties.

For the standard television tube phosphors, the letters 'W' and 'X' are used without a second letter.

## TYPE DESIGNATION

- A Purple reddish purple bluish purple
- B Blue purplish blue greenish blue
- D Blue green
- G Green bluish green yellowish green
- K Yellow green
- L Orange Orange pink
- R Red reddish orange red purple purplish red pink purplish pink
- Y Yellow greenish yellow yellowish orange
- W White screen for T.V. display tubes
- X Three-colour screen for T.V. display tubes

#### OLD SYSTEM

The type number consists of two letters followed by two sets of figures. The first letter indicates the method of focusing and deflection:

- A Electrostatic focusing and electromagnetic deflection
- D Electrostatic focusing and electrostatic deflection
- M Electromagnetic focusing and electromagnetic deflection

The second letter indicates the properties of the phosphor screen.

See also section "Screen Phosphors"

The first group of figures:

for round tubes: screen diameter in cm

for rectangular tubes: screen diagonal in cm

The second group of figures denotes the serial number.

## SCREEN TYPES

new system	old system	fluorescent colour	phosphorescent colour	persistance	equivalent Jedec designation
BA	C	purplish-blue	-	very short	- //
BC	V	purplish-blue	-	killed	- 1
BE	В	blue	blue	medium short	P11
BF	U	purplish-blue	-	medium short	-10
GE	K	green	green	short	P24
GH	Н	green	green	medium short	P31
GJ	G	yellowish-green	yellowish-green	medium	P1
GK	G <sup>1</sup> )	yellowish-green	yellowish-green	medium	-
GL	N	yellowish-green	yellowish-green	medium short	P2
GM	P	purplish-blue	yellowish-green	long	P7
GP	-	bluish-green	green	medium short	P2
GR	-	green	green	long	P39
GU	_	white	white	very short	_
LA	D	orange	orange	medium	
LB	Е	orange	orange	long	-
LC	F	orange	orange	very long	-
LD	L	orange	orange	very long	P33
W	W	white	_	-	P4
X	X	tri-colour screen	_	-	P22
YA	Y	yellowish-orange	yellowish-orange	medium	-0

<sup>1)</sup> used in projection tubes

## SURVEY OF PERSISTENCE OF CATHODE-RAY TUBE SCREENS

Screen type		Application	Persistence		
New system	Old system		Relative 1	e level of brightness	
			10 %	1 %	0.1 %
BA GE GU	С К -	Flying spot scanners	0.13 μs 1.2 μs 0.16 μs	0.4 μs 110 μs 1 μs	10 ms
BE GH GJ GM GP	B H G P	Oscilloscopes	20 ms 600 µs 28 ms 60 ms 1.2 ms	70 ms 8 ms 75 ms 1.5 s 140 ms	120 ms 90 ms 120 ms 13 s 2 s
GR W	yellow blue	Monitors	100 ms 0.6 ms 0.4 ms	1.4 s 7 ms 4 ms	9 s 17 ms 14.5 ms
LA LC LD	D F L	Radar	32 ms 0.3 s 0.5 s	110 ms 22 s 45 s	200 ms 50 s 100 s

### **OPERATING CONDITIONS**


Final accelerator voltage

Oscilloscope types 4 kV Remaining types 10 to 15 kV


Screen current 5  $\mu A/cm^2$ 

Focusing defocused


Exitation sufficient for complete build-up

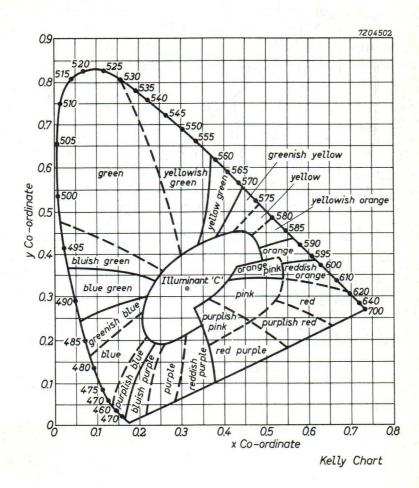


February 1971

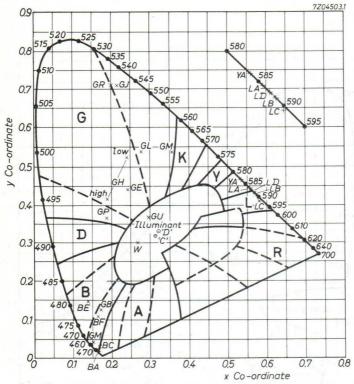



Co-ordinates of individual phosphors

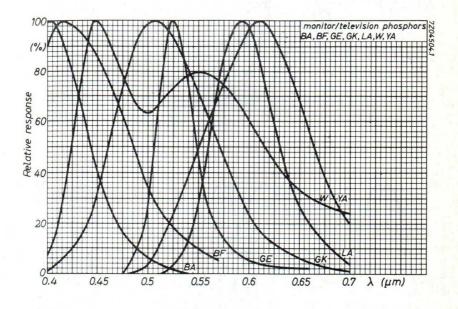



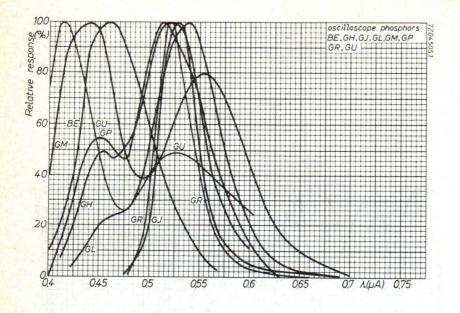


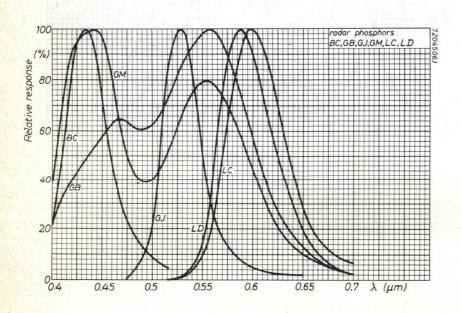

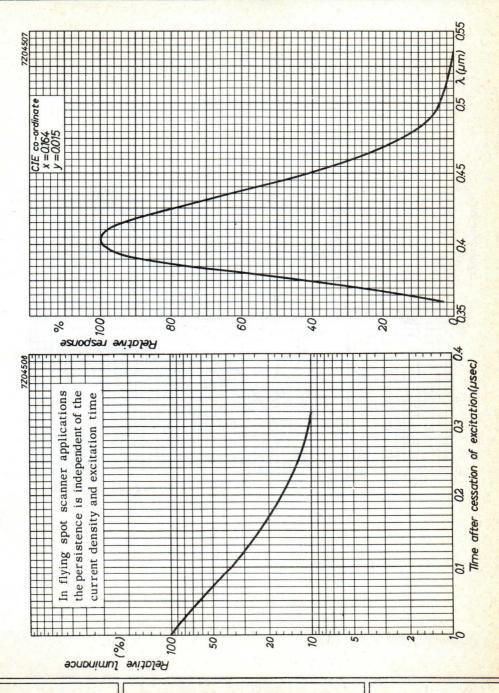







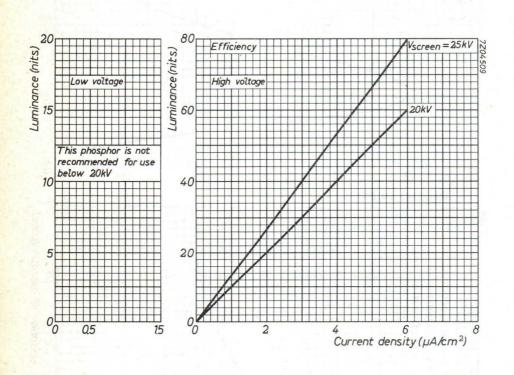




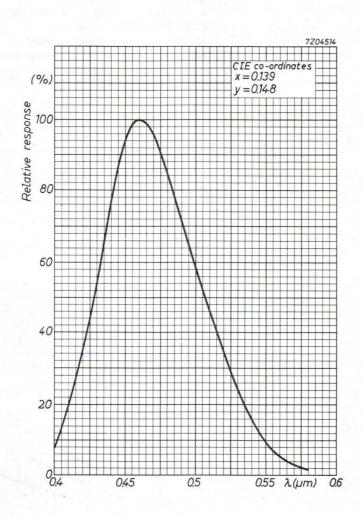


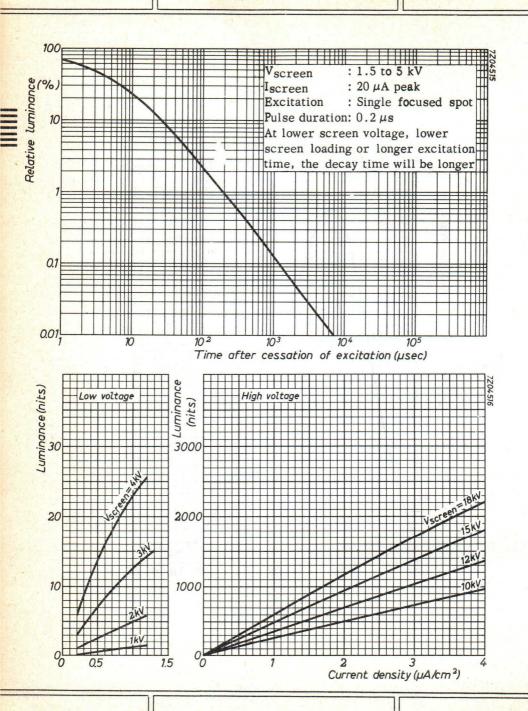




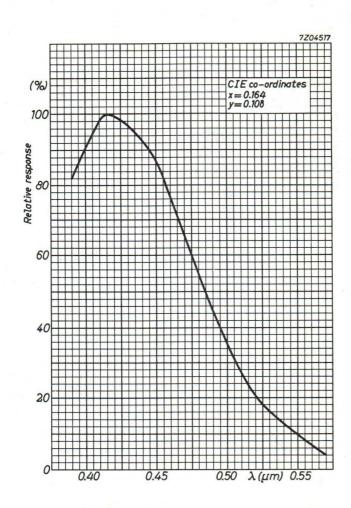




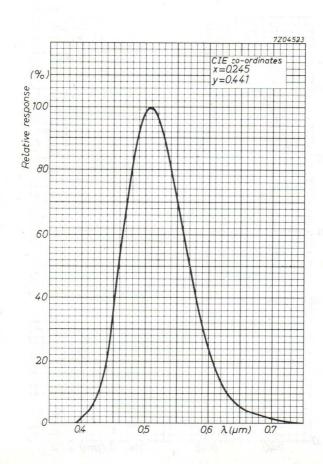




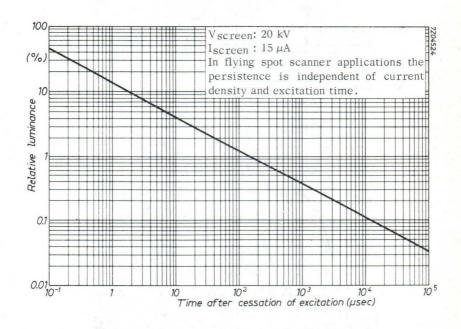




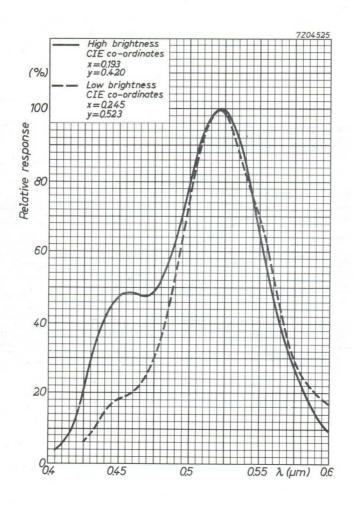



## GH screen

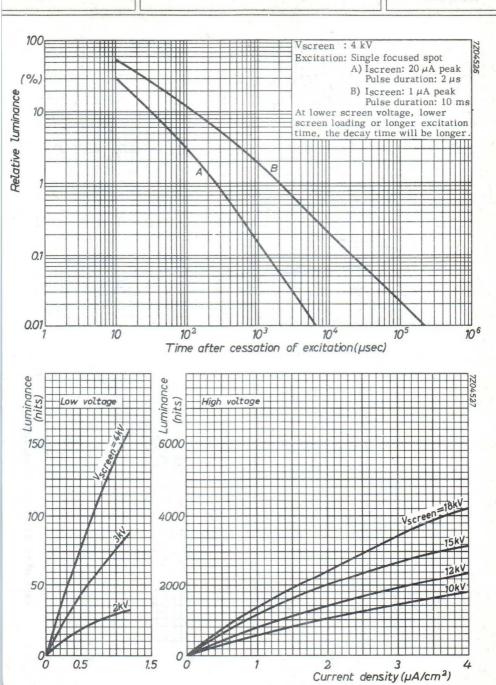





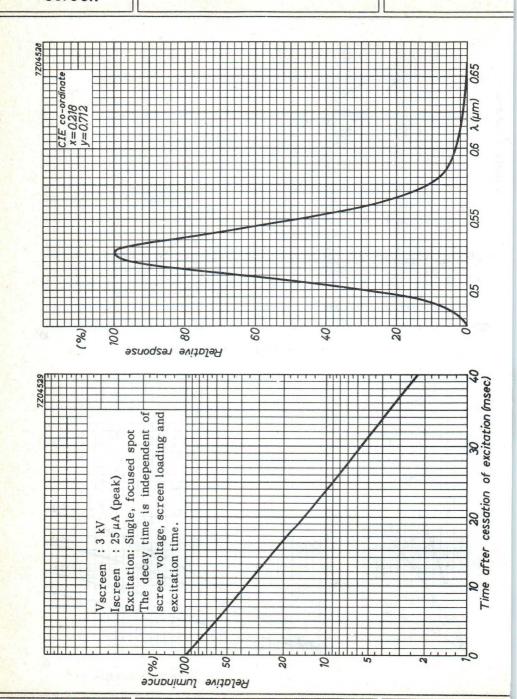


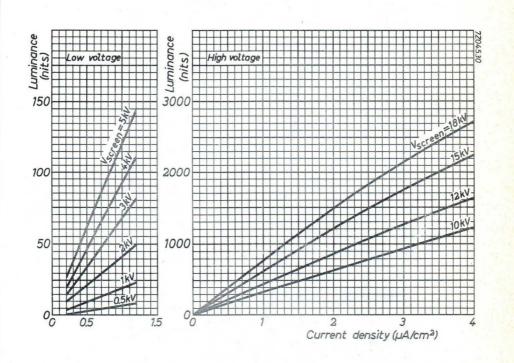


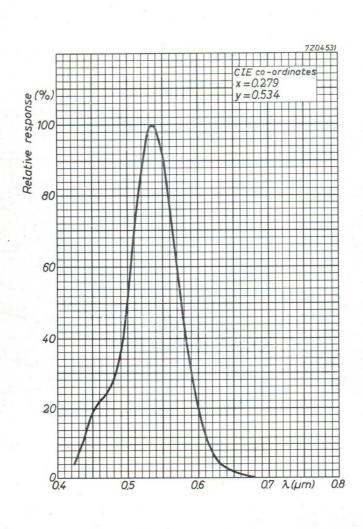

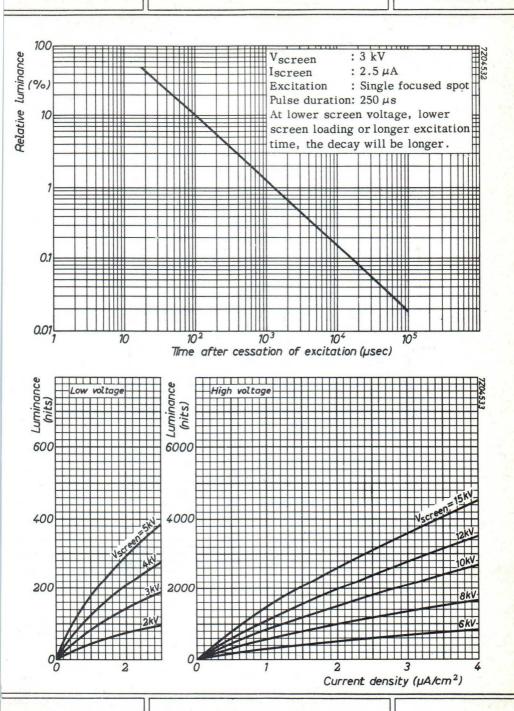


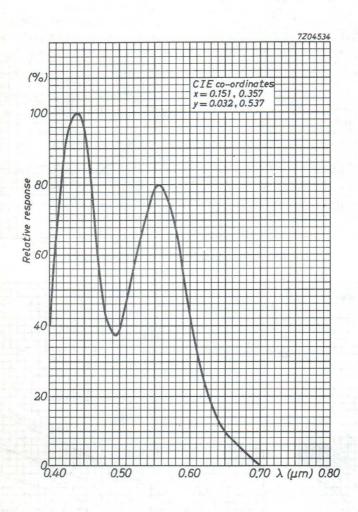


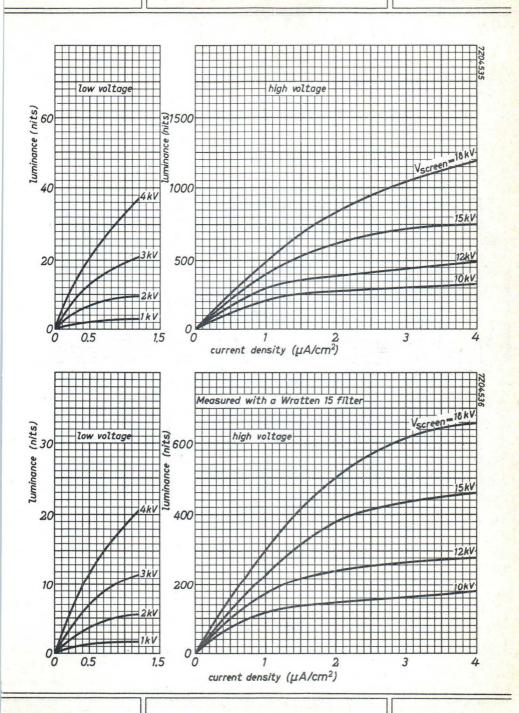

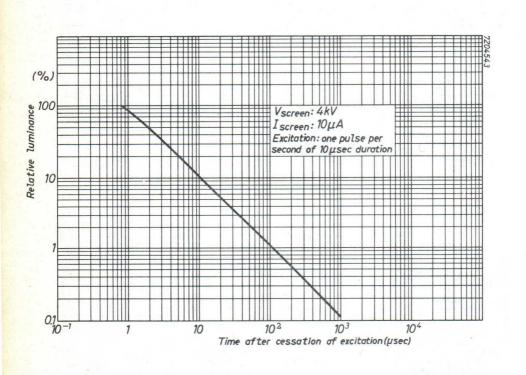


GP screen

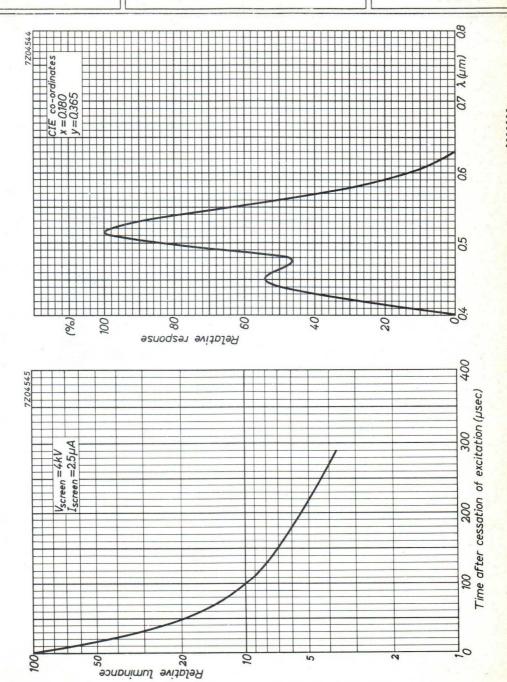


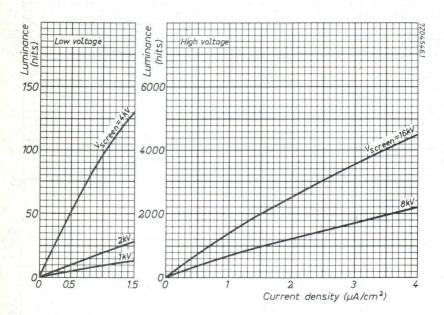


# GR screen




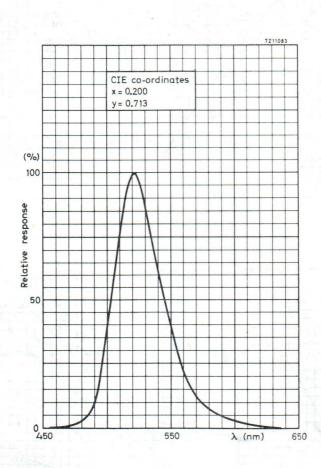

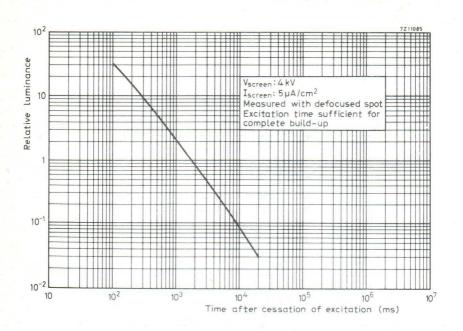


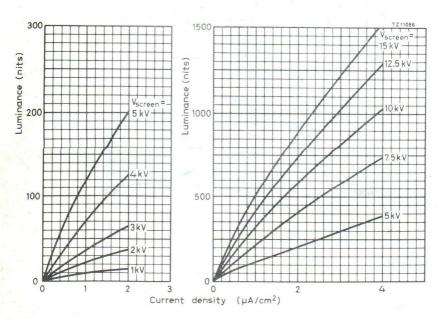


# GU. screen

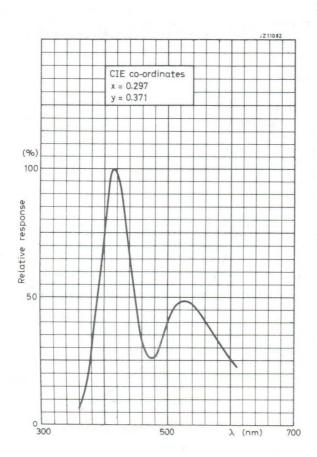




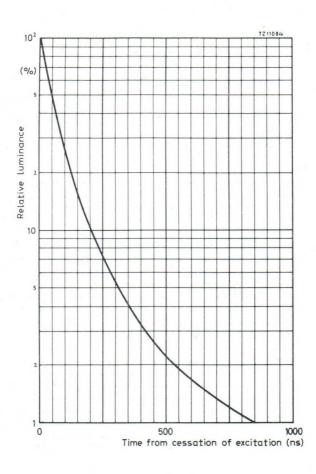





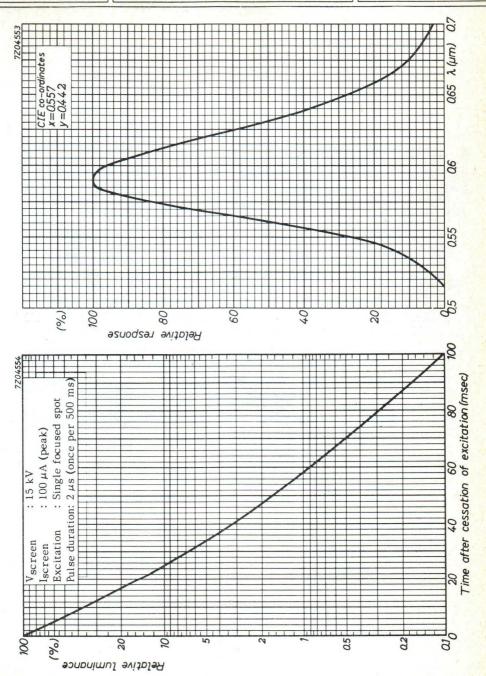


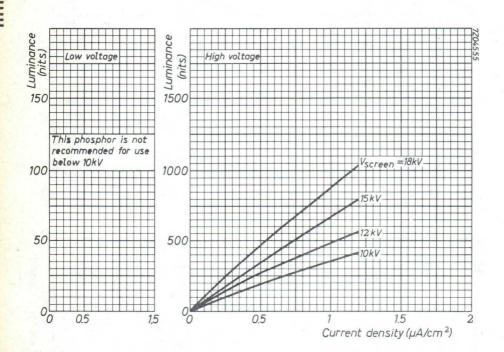




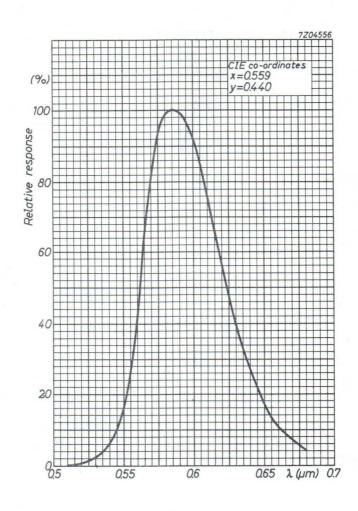

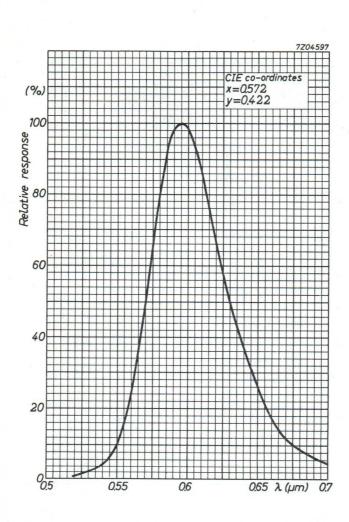


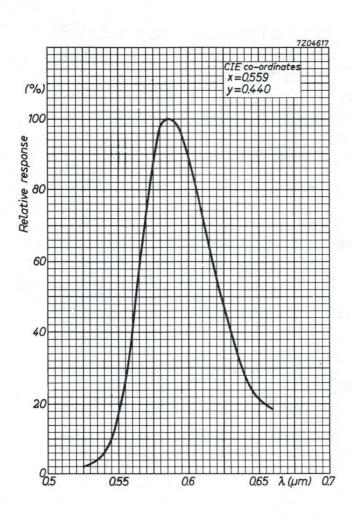





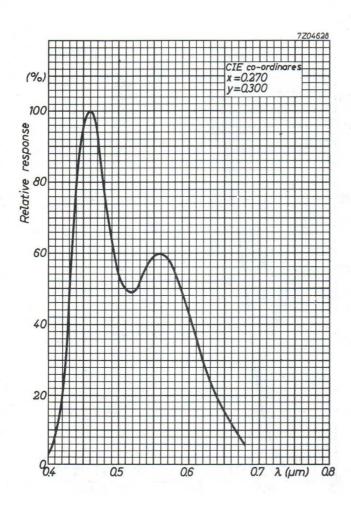



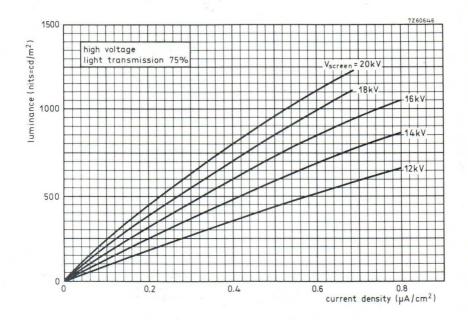


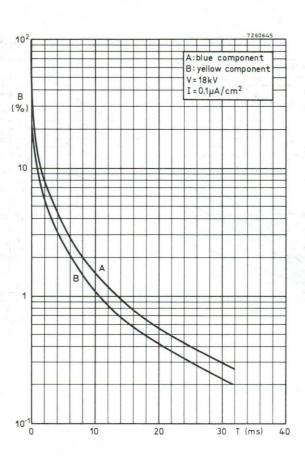

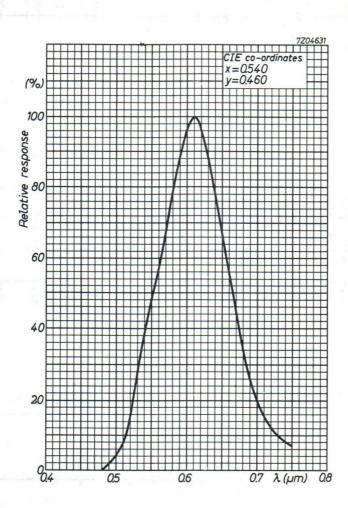



GH screen

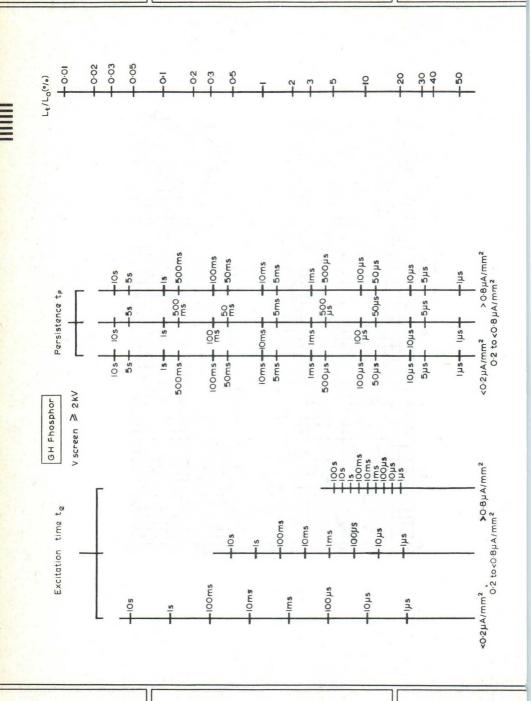



# INSTRUMENT CATHODE-RAY TUBES

PREFERED TYPES

(Recommended types for new designs)

	Mono-accelerator tubes	D7-190 D10-160 D13-480 DG7-32	
			100
		D10-170	
		D13-27	
		D14-120	
	Post-deflection accelerator tubes	D14-121	
		D14-160/09	
		D. 7-11	
		E10-12	
		E10-130	
		-	
		D10-200/07	
	Large bandwidth instrument tubes	D13-450/01	
9		D13-500/01	

Manager and a second contract to the

O message

## INSTRUMENT CATHODE-RAY TUBE

7 cm diameter flat faced monoaccelerator oscilloscope tube primarily intended for use in inexpensive oscilloscopes and monitoring devices.

QUICK REFE	RENCE DATA		4
Accelerator voltage	Vg2,g4,g5,l	1000	V
Display area		60 x 50	$mm^2$
Deflection coefficient, horizontal	$M_X$	29	V/cm
vertical	$M_y$	11.5	V/cm

#### **SCREEN**

	colour	persistence
D7-190GH	green	medium short
D7-190GM	yellowish green	long
D7-190GP	bluish green	medium short


Useful screen diameter	min.	64	mm
Useful scan			
horizontal	min.	60	mm
vertical	min.	50	mm

The useful scan may be shifted vertically to a maximum of 4mm with respect to the geometric centre of the faceplate.

**HEATING:** Indirect by A.C. or D.C.; parallel supply

Heater voltage	$V_{f}$	6.3	V	
Heater current	$I_{\mathbf{f}}$	300	mA	

## MECHANICAL DATA (Dimensions in mm)

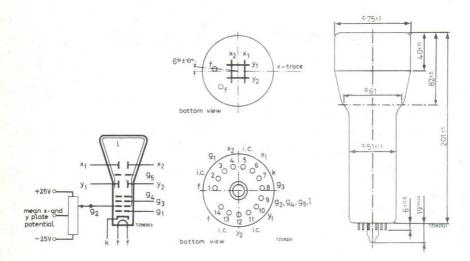

### Mounting position: any

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

#### Dimensions and connections

See also outline drawing

Overall length	max.	225	mm
Face diameter	max.	77	mm

Base 14 pin all glass

Net weight	approx.	260	g
------------	---------	-----	---

Accessories

Socket (supplied with tube)	type	55566
Mu-metal shield	type	55534

4.0

pF pF

pF

pF

x <sub>1</sub> to all other elements except x <sub>2</sub>	$C_{X1}(x2)$ 4
$\mathbf{x}_2$ to all other elements except $\mathbf{x}_1$	$C_{x2(x1)}$ 4
$y_1$ to all other elements except $y_2$	$C_{y1(y2)}$ 3.5

$$y_2$$
 to all other elements except  $y_1$   $C_{y2(y1)}$  3 pF  $x_1$  to  $x_2$   $C_{x1x2}$  1.6 pF

y<sub>1</sub> to y<sub>2</sub> 
$$C_{y1y2}$$
 1.1 pF Control grid to all other elements  $C_{g1}$  5.5 pF

FOCUSING electrostatic

Cathode to all other elements

## **DEFLECTION** 3) double electrostatic

x plates symmetrical y plates symmetrical

If use is made of the full deflection capabilities of the tube the deflection plates will intercept part of the electron beam, hence a low impedance deflection plate drive is desirable.

Angle between x and y traces

90 + 10

Ck

#### LINE WIDTH 3)

CADACITANCES

Measured with the shrinking raster method in the centre of the screen under typical operating conditions, adjusted for optimum spot size at a beam current I $\ell$  = 10  $\mu$ A.1)

Line width

1.W. 0.28 mm

<sup>1)</sup> As the construction of this tube does not permit a direct measurement of the beam current, this current should be determined as follows:

a) under typical operating conditions, apply a small raster display (no overscan), adjust  $\rm V_{g1}$  for a beam current of approx. 10  $\rm \mu A$  and adjust  $\rm V_{g3}$  and  $\rm V_{g2,g4,g5,l}$  for optimum spot quality at the centre of the screen.

b) under these conditions, but no raster, the deflection plate voltages should be changed to

 $<sup>\</sup>rm V_{y1} = \rm V_{y2} = 1000~V;~V_{x1} = 300~V;~V_{x2} = 700~V,$  thus directing the total beam current to x2.

Measure the current on  $x_2$  and adjust  ${\rm V}_{g1}$  for  ${\rm I}_{x2}$  =  $10\,\mu{\rm A}$  (being the beam current  ${\rm I}_{\ell})$ 

c) set again for the conditions under a), without touching the  $\rm V_{g1}$  control. Now a raster display with a true 10  $\rm \mu A$  screen current is achieved.

d) focus optimally in the centre of the screen (do not adjust the astigmatism control) and measure the line width.

<sup>3)</sup> See page 4

TIPICAL OPERATING CONDITIONS 3)				
Accelerator voltage	Vg2,g4,g5,l		1000	V
Astigmatism control voltage	$\Delta V_{g_2,g_4,g_5,\ell}$		± 25	V 1)
Focusing electrode voltage	$v_{g_3}$	100 t	to 180	V
Control grid voltage for visual			25	
extinction of focused spot	$v_{g_1}$	max.	-35	V
Grid drive for $10~\mu\mathrm{A}$ screen current		appro	x. 10	V
Deflection coefficient, horizontal	$M_X$	max.	29 31	V/cm V/cm
vertical	$M_y$	max.	11.5	,
Deviation of linearity of deflection		max.	1	% <sup>2</sup> )
Geometry distortion		see no	ote 4	
Useful scan, horizontal		min.	60	mm
vertical		min.	50	mm
LIMITING VALUES (Absolute max. rating	system)			
Accelerator voltage	$V_{g_2,g_4,g_5,l}$	max. min.	2200 900	V V
Focusing electrode voltage	$v_{g_3}$	max.	2200	V
Control grid voltage, negative	$-v_{g_1}$	max. min.	200	V
Cathode to heater voltage	$V_{\mathbf{k}f}$	max.	125	V
	$-V_{kf}$	max.	125	V
Grid drive, average		max.	20	V
Screen dissipation	We	max.	3	mW/cm <sup>2</sup>

<sup>1)</sup> All that will be necessary when putting the tube into operation is to adjust the astigmatism control voltage once for optimum spot shape in the screen centre. The control voltage will always be in the range stated, provided the mean x plate and certainly the mean y plate potential was made equal to  $V_{g2}$ ,  $g_4$ ,  $g_5$ , l with zero astigmatism correction.

<sup>2)</sup> The sensitivity at a deflection of less than 75% of the useful scan will not differ from the sensitivity at a deflection of 25% of the useful scan by more than the indicated value.

<sup>3)</sup> The mean x and certainly the mean y plate potential should be equal to  $V_{g2}$ ,  $g_4$ ,  $g_5$ ,  $\ell$  with astigmatism adjustment set to zero.

<sup>4)</sup> A graticule, consisting of concentric rectangles of 40 mm x 50 mm and 39.2 mm x 49 mm is aligned with the electrical x-axis of the tube. The edges of a raster will fall between these rectangles, with optimum correction potentials applied.

# INSTRUMENT CATHODE-RAY TUBE

Oscilloscope tube with 10 cm diameter flat face-plate and post deflection acceleration by means of a helical electrode. The low heater consumption together with the high sensitivity and short overall length render this tube suitable for transistorised equipment.

QUICK REFERENCE DATA					
Final accelerator volta	age	Vg6(1)	=	4	kV
Display area	horizontal		fu	ll scan	
	vertical		=	6	cm
Deflection coefficient,	horizontal	$M_{X}$	=	27.5	V/cm
	vertical	My	=	9.8	V/cm

#### SCREEN

	Colour	Persistence Persistence
D10-11GH D10-11GM D10-11GP	green yellowish green bluish green	medium short long medium short

Useful screen diameter

min. 85 mm

min. 60 mm

Useful scan at  $V_{g6(l)}/V_{g4} = 4$ 

horizontal

full scan

vertical

ANALOGO MANAGEMENT

The useful scan may be shifted vertically to a max. of  $4\ \mathrm{mm}$  with respect to the geometric centre of the faceplate.


#### HEATING


Indirect by A.C. or D.C.; parallel supply

Heater voltage 
$$\frac{V_f}{I_f} = .6.3 \text{ V}$$
Heater current  $\frac{V_f}{I_f} = .95 \text{ mA}$ 

#### → MECHANICAL DATA

Dimensions in mm

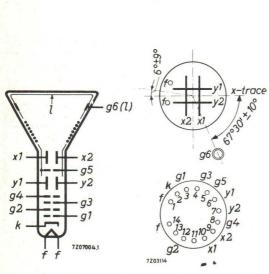

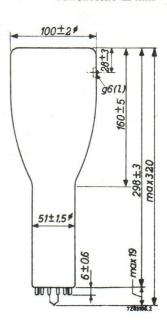

## Mounting position: any

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

B	a	S	e
-	_	_	_

14 pin all glass

## Dimensions and connections

Overall length (also inclusive socket type 55566)	max.	320	mm
Face diameter	max.	102	mm
Net weight	approx.	480	g

#### Accessories

Socket (supplied with the tube)	type	55566
Final accelerator contact connector	type	55560
Mu-metal shield	type	55541

#### CAPACITANCES

$x_1$ to all other elements except $x_2$	$C_{x_1(x_2)}$	=	3.5	pF	
$\mathbf{x}_2$ to all other elements except $\mathbf{x}_1$	$C_{x_2(x_1)}$	=	3.5	pF	
$y_1$ to all other elements except $y_2$	$C_{y_1(y_2)}$	=	2.5	pF	
$\mathbf{y}_2$ to all other elements except $\mathbf{y}_1$	$C_{y_2(y_1)}$	=	3.0	pF	
$x_1$ to $x_2$	$C_{x_1x_2}$	=	2.0	pF	
$y_1$ to $y_2$	$C_{y_1y_2}$	=	1.7	pF	
Control grid to all other elements	$C_{g_1}$	=	4.5	pF	
Cathode to all other elements	$C_k$	=	3.0	pF	

**FOCUSING** 

electrostatic

DEFLECTION

double electrostatic

x plates

symmetrical

y plates

symmetrical

If use is made of the full deflection capabilities of the tube the deflection plates will intercept part of the electron beam; hence a low impedance deflection plate drive is desirable.

Angle between x and y traces

 $900 \pm 10$ 

#### LINE WIDTH

Measured with the shrinking raster method in the centre of the screen

Final accelerator voltage	Vg6(1)	=	4000	V
Astigmatism control electrode voltage	$v_{g_4}$	=	1000	$V^{2}$ )
First accelerator voltage	$V_{g_2}$	=	1000	V
Beam current	I(()	=	10	$\mu$ A
Line width	l.w.	=	0.35	mm

#### HELIX

Post deflection accelerator helix resistance = min. 50  $M\Omega$ 

<sup>2)</sup> See page 5

#### TYPICAL OPERATING CONDITIONS

Final accelerator voltage	Vg6(1)		1000	V
Geometry control electrode voltage	$v_{g_5}$	=	$1000 \pm 100$	v <sup>1</sup>
Astigmatism control electrode voltage	$v_{g_4}$	=	$1000 \pm 50$	$V^2$
Focusing electrode voltage	$v_{g_3}$	=	50 to 200	V
First accelerator voltage	$v_{g_2}$	=	1000	V

Control grid voltage for visual extinction of focused spot 
$$-V_{g_1} = 25 \text{ to } 67 \text{ V}$$

Deflection coefficient

horizontal

horizontal 
$$M_X = 24 \text{ to } 31 \text{ V/cm}$$
 vertical  $M_y = 8.6 \text{ to } 11 \text{ V/cm}$  Deviation of linearity of deflection  $= \text{max.} \quad 2 \text{ } \%^3$ )

Useful scan

#### CIRCUIT DESIGN VALUES

Focusing electrode current

Focusing voltage	$V_{g_3}$	Ξ	50 t	0 200	V per kV of V <sub>g4</sub>
Control grid voltage for vise extinction of focused s		=	25 t	o 67	V per kV of V <sub>g2</sub>
Deflection coefficient at $$^{V}{\rm g}_{6}(\ell)/^{V}{\rm g}_{4}$$	= 4				
horizon	ntal M <sub>X</sub>	=	24 t	31	V/cm per kV of V <sub>g4</sub>
vertica	1 M <sub>y</sub>	=	8.6 t	0 11	V/cm per kV of V <sub>g4</sub>
Control grid circuit resista	nce R <sub>g1</sub>	=	max.	1.5	$M\Omega$

 $I_{g_3} = -30 \text{ to } +30 \mu \text{A}^5$ )

= 24 to 31 V/cm

<sup>1)2)3)4)5)</sup> See page 5

LIMITING VALUES	(Absolute max.	rating system)

Final accelerator voltage	Vg6(1)	= max = min.		V V
Geometry control electrode voltage	$v_{g_5}$	= max	2200	V
Astigmatism control electrode voltage	$v_{g_4}$	= max : = min.		V V
Focusing electrode voltage	$v_{g_3}$	= max	1500	V
First accelerator voltage	$v_{g_2}$	= max	2200	V
Control grid voltage negative	-Vgi	= max	200	V
positive	$v_{g_1}$	= max	0	. V
Cathode to heater voltage cathode positive	V+k/f-	= max	. 100	V
cathode negative	V-k/f+	= max	15	V.
Voltage between astigmatism control electrode and any deflection plate	Vg <sub>4/x</sub>	= max		V V
Called	$V_{g_4/y}$	= max		
Cathode current, average	$I_k$	= max	300	μΑ
Screen dissipation	$W_{\ell}$	= max	. 3	$mW/cm^2$
Ratio $V_{g6(l)}/V_{g_4}$	Vg6(1)/Vg2	= max	. 4	
Ratio $V_{g_2}/V_{g_4}$	$v_{g_2}/v_{g_4}$	= max = min.		

<sup>1)</sup> This tube is designed for optimum performance when operating at the ratio  $V_{g6(1)}/V_{g4}$  = 4. Operation at other ratio may result in changes in deflection uniformity and geometry distortion. The geometry control electrode voltage should be adjusted for optimum performance. For any necessary adjustment its potential will be within the stated range.

2) The astigmatism control electrode voltage should be adjusted for optimum spot shape. For any necessary adjustment its potential will be within the stated range.

3) The sensitivity at a deflection of less than 75% of the useful scan will not differ from the sensitivity at a deflection of 25% of the useful scan by more than the indicated value.

4) A graticule, consisting of concentric rectangles of 50 mm x 60 mm and 48.4 mm x 58.4 mm is aligned with the electrical x axis of the tube. The edges of a raster will fall between these rectangles with optimum correction potentials applied.

5) Values to be taken into account for the calculation of the focus potentiometer.

Description of the second of t

puls matrix

Applied and the second of the

don't am a la company of the company

The same of the sa

Oscilloscope tube with 10 cm diameter flat faceplate and post deflection acceleration by means of a helical electrode. The tube is intended for small compact oscilloscopes.

	QUICK REFERENCE	DATA			4
Final accelerator volta	ige	Vg6(1)	=	4000	V
Display area	horizontal		=	full so	can
	vertical		=	6	cm
• Deflection coefficient,	horizontal	$M_X$	=	27.5	V/cm
	vertical	$M_{y}$	=	9.8	V/cm

#### SCREEN

	Colour	Persistence
D10-12GH	green	medium short
D10-12GP	bluish green	medium short
D10-12GM	yellowish green	long

Useful screen diameter

min. 85 mm

Useful scan at  $V_{g_6(1)}/V_{g_4} = 4$ 

horizontal

full scan

vertical min. 60 mm

The useful scan may be shifted vertically to a max. of 4 mm with respect to the geometric centre of the faceplate.

### HEATING

Indirect by A.C. or D.C.; parallel supply


Heater voltage

 $V_f = 6.3 V$ 

Heater current

 $I_f = 300 \text{ mA}$ 

# MECHANICAL DATA (Dimensions in mm)

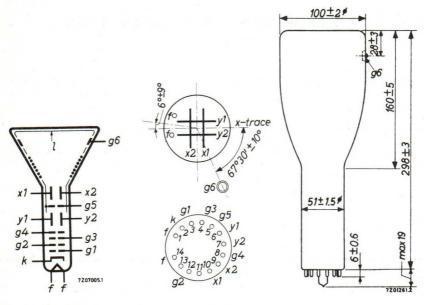

# Mounting position: any

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

Base 14 pin all glass

# Dimensions and connections

Overall length (inclusive socket 55566) max. 320 mm Face diameter max. 102 mm

Net weight approx. 480 g

# Accessories

Socket (supplied with the tube) type 55566

Final accelerator contact connector type 55560

Mu-metal shield type 55541

### CAPACITANCES

$\mathbf{x}_1$ to all other elements except $\mathbf{x}_2$	$C_{x_1(x_2)}$	=	4.0	pF	
$\mathbf{x}_2$ to all other elements except $\mathbf{x}_1$	$C_{x_2}(x_1)$	=	4.0	pF	
$\mathbf{y}_1$ to all other elements except $\mathbf{y}_2$	$C_{y_1}(y_2)$	=	3.0	pF	
$y_2$ to all other elements except $y_1$	$C_{y_2(y_1)}$	=	3.0	pF	
$x_1$ to $x_2$	$C_{x_1x_2}$	=	2.0	pF	
$y_1$ to $y_2$	$C_{y_1y_2}$	=	1.7	pF	
Control grid to all other elements	Cg1	=	5.0	pF	
Cathode to all other elements	$C_k$	=	3.0	pF	

**FOCUSING** 

electrostatic

DEFLECTION

double electrostatic

x plates

symmetrical

y plates

symmetrical

If use is made of the full deflection capabilities of the tube the deflection plates will intercept part of the electron beam; hence a low impedance deflection plate drive is desirable.

Angle between x and y traces

 $90^{\circ} \pm 1^{\circ}$ 

### LINE WIDTH

Measured with the shrinking raster method in the centre of the screen

Final accelerator voltage	Vg6(1)	=	4000	V
Astigmatism control electrode voltage	$V_{g_4}$	=	1000	$V^2$ )
First accelerator voltage	$v_{g_2}$	=	1000	V
Beam current	I(1)	=	10	$\mu A$
Line width	1.w.	=	0.35	mm

### HELIX

Post deflection accelerator helix resistance

min. 50  $M\Omega$ 

<sup>2)</sup> See page 6

# TYPICAL OPERATING CONDITIONS

Final accelerator voltage	$V_{g_6(\ell)} =$	4000	V
Geometry control electrode voltage	V <sub>g5</sub> =	$1000 \pm 100$	V 1)
Astigmatism control electrode voltage	V <sub>g4</sub> =	$1000 \pm 50$	$V^2$ )
Focusing electrode voltage	$v_{g_3} =$	50 to 200	V
First accelerator voltage	$v_{g_2} =$	1000	V
Control grid voltage for visual extinction of focused spot	-V <sub>g1</sub> =	25 to 67	V
Deflection coefficient			
horizontal	$M_X =$	24 to 31	V/cm
vertical	M <sub>V</sub> =	8.6 to 11	V/cm
Deviation of linearity of deflection	=	max. 2	$\%^{3}$ )
Geometry distortion		See note 4	
Useful scan			
horizontal	=	full scan	

# CIRCUIT DESIGN VALUES

vertical

Focusing voltage	$v_{g_3}$	=	50 to	200	V per kV of Vg <sub>4</sub>
Control grid voltage for visual extinction of focused spot	$-v_{g_1}$	=	25 to	67	V per kV of $V_{g_2}$
Deflection coefficient at					
$V_{g_6(l)}/V_{g_4} = 4$					
horizontal	$M_X$	=	24 to	31	V/cm per kV of Vg4
vertical	My	=	8.6 to	11	V/cm per kV of Vg4
Control grid circuit resistance	Rg <sub>1</sub>	=	max.	1.5	ΜΩ
Focusing electrode current	$I_{g_3}$	=	-30 to	+30	$\mu A^{5}$ )

= min. 60 mm

<sup>1)2)3)4)5)</sup> See page 6

-	10	U.S.	
	200	-	-
	17542	150	
	75	-	-

LIMITING VALUES (Absolute max. ra	ating system)				
Final accelerator voltage	Vg <sub>6</sub> (1)		max. min.	5000 1500	V V
Geometry control electrode voltage	$v_{g_5}$	=	max.	2200	V
Astigmatism control electrode voltage	$v_{g_4}$		max. min.	2200 900	V V
Focusing electrode voltage	$V_{g_3}$	=	max.	1500	V
First accelerator voltage	$v_{g_2}$	=	max.	2200	V
Control grid voltage					
negative	$-v_{g_1}$	=	max.	200	V
positive	$v_{g_1}$	=	max.	0	V
Cathode to heater voltage					
cathode positive	V+k/f-	=	max.	200	V
cathode negative	V-k/f+	=	max.	125	V
Voltage between astigmatism control electrode and any deflection plate	$V_{g_4/x}$	=	max.	500	V
	Vg <sub>4</sub> /y	=	max.	500	V
Screen dissipation	$W_{\ell}$	=	max.	3	mW/cm <sup>2</sup>
Ratio Vg6(1)/Vg4	$V_{g_6(l)}/V_{g_4}$	=	max.	4	
Ratio $V_{g_2}/V_{g_4}$	$v_{g_2}/v_{g_4}$	=	max.	1	

 $<sup>^{\</sup>rm l}$ ) This tube is designed for optimum performance when operating at the ratio  $\rm V_{g_6}(\ell)/\rm V_{g_4}$  = 4. Operation at other ratio may result in changes in deflection uniformity and geometry distortion. The geometry control electrode voltage should be adjusted for optimum performance. For any necessary adjustment its potential will be within the stated range.

<sup>2)</sup> The astigmatism control electrode voltage should be adjusted for optimum spot shape. For any necessary adjustment its potential will be within the stated range.

<sup>3)</sup> The sensitivity at a deflection of less than 75% of the useful scan will not differ from the sensitivity at a deflection of 25% of the useful scan by more than the indicated value.

<sup>&</sup>lt;sup>4</sup>) A graticule, consisting of concentric rectangles of 50 mm x 60 mm and 48.4 mm x 58.4 mm is aligned with the electrical x axis of the tube. The edges of a raster will fall between these rectangles with optimum correction potentials applied.

 $<sup>^{5}</sup>$ ) Values to be taken into account for the calculation of the focus potentiometer.

 $10~{\rm cm}$  diameter flat faced monoaccelerator oscilloscope tube primarily intended for use in inexpensive oscilloscopes and read-out devices.

QUICK REFERENCE DATA					
Accelerator voltage	$v_{g_2,g_4,g_5(\ell)}$	1500	V		
Display area	-2 -1 -0	80 x 60	$mm^2$		
Deflection coefficient, horizontal	$M_{\mathrm{X}}$	32	V/cm		
vertical	$M_{y}$	13.7	V/cm		

### **SCREEN**

	colour	persistence
D10-160GH	green	medium short
D10-160GM	yellowish green	long
D10-160GP	bluish green	medium short

Useful screen diameter

min. 85 mm

Useful scan

horizontal

min. 80 mm

vertical

min. 60 mm

The useful scan may be shifted vertically to a max. of 5 mm with respect to the geometric centre of the faceplate.

**HEATING**: Indirect by A.C. or D.C.; parallel supply


Heater voltage

Vf 6.3 V

Heater current

If 300 mA

# MECHANICAL DATA (Dimensions in mm)

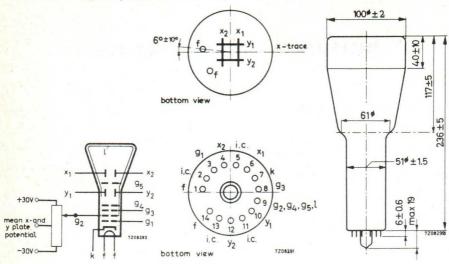

# Mounting position: any

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

# Dimensions and connections

See also outline drawing

Overall length		max.	260	mm
Face diameter		max.	102	mm

Face dian	meter	max.	102	mm
		,		
Base	14 pin all glass			

Net weight	approx.	400	g
------------	---------	-----	---

Accessories		
Socket (supplied with tube)	type	55566
Mu metal shield	type	55547

#### CAPACITANCES

$x_1$ to all other elements except $x_2$	$C_{x1}(x2)$	4	pF
$x_2$ to all other elements except $x_1$	$C_{x2}(x1)$	4	pF
$y_1$ to all other elements except $y_2$	C <sub>y1(y2)</sub>	3.5	pF
$\mathbf{y}_2$ to all other elements except $\mathbf{y}_1$	Cy2(y1)	3	pF
$x_1$ to $x_2$	$C_{x1x2}$	1.6	pF
$y_1$ to $y_2$	$C_{y1y2}$	1.1	pF
Control grid to all other elements	$C_{g1}$	5.5	pF
Cathode to all other elements	$C_{\mathbf{k}}$	4	pF

**FOCUSING** 

electrostatic

**DEFLECTION** 3) double electrostatic

x plates symmetrical y plates symmetrical

If use is made of the full deflection capabilities of the tube the deflection plates will intercept part of the electron beam, hence a low impedance deflection plate drive is desirable.

Angle between x and y traces

 $90 \pm 1^{\circ}$ 

### LINE WIDTH

Measured with the shrinking raster method in the centre of the screen under typical operating conditions, adjusted for optimum spot size at a beam current I $\ell$  = 10  $\mu$ A. 1)

Line width

1.w.

0.27 mm

<sup>1)</sup> As the construction of this tube does not permit a direct measurement of the beam current, this current should be determined as follows:

a) under typical operating conditions, apply a small raster display (no overscan), adjust  $V_{g1}$  for a beam current of approx. 10  $\mu A$  and adjust  $V_{g3}$  and  $V_{g2,g4,g5,l}$  for optimum spot quality at the centre of the screen.

b) under these conditions, but no raster, the deflection plate voltages should be changed to

 $V_{y1}$  =  $V_{y2}$  = 1500 V;  $V_{x1}$  = 800 V;  $V_{x2}$  = 1200 V, thus directing the total beam current to x2.

Measure the current on  $x_2$  and adjust  $V_{g1}$  for  $I_{x2}$  = 10  $\mu A$  (being the beam current  $I_{\ell}$ ) c) set again for the conditions under a), without touching the  $V_{g1}$  control. Now a raster display with a true 10  $\mu A$  screen current is achieved.

d) focus optimally in the centre of the screen (do not adjust the astigmatism control) and measure the line width.

<sup>3)</sup> See page 4

# TYPICAL OPERATING CONDITIONS 3)

Accelerator voltage	$V_{g2,g4,g5,l}$	max. 1500	V
Astigmatism control voltage	$\Delta V_{g2,g4,g5,l}$	± 30	$V^{1}$ )
Focusing electrode voltage	Vg3	140 to 275	V
Control grid voltage for visual extinction of focused spot	$v_{g1}$	max50	V
Grid drive for $10 \mu A$ screen current		approx. 10	V
Deflection coefficient, horizontal	$M_X$	32 max. 34	V/cm V/cm
vertical	$M_{y}$	13.7 max. 14.5	V/cm V/cm
Deviation of linearity of deflection		max. 1	% <sup>2</sup> )
Geometry distortion		see note 4	
Useful scan, horizontal		min. 80	mm
vertical		min. 60	mm
LIMITING VALUES (Absolute max. rati	ng system)		
Accelerator voltage	$v_{g2,g4,g5,\boldsymbol{l}}$	max. 2200 min. 1350	V V
Focusing electrode voltage	$V_{g3}$	max. 2200	V
Control grid voltage, negative	-Vg1	max. 200 min. 0	V V
Cathode to heater voltage	V <sub>kf</sub> -V <sub>kf</sub>	max. 125 max. 125	V V
Grid drive, average		max. 20	V
Screen dissipation	WQ	max. 3	$mW/cm^2$

<sup>.1)</sup> All that will be necessary when putting the tube into operation is to adjust the astigmatismcontrol voltage once for optimum spot shape in the screen centre. The control voltage will always be in the range stated, provided the mean x plate and centainly the mean y plate potential was made equal to  $V_{g_2,g_4,g_5,\ell}$  with zero astigmatism correction.

<sup>2)</sup> The sensitivity at a deflection of less than 75% of the useful scan will not differ from the sensitivity at a deflection of 25% of the useful scan by more than the indicated value.

<sup>3)</sup> The mean x and certainly the mean y plate potentials should be equal to  $V_{g2,g4,g5,l}$  with astigmatism adjustment set to zero.

<sup>4)</sup> A graticule, consisting of concentric rectangles of 50 mm x 60 mm and 49 mm x 58.6 mm is aligned with the electrical x-axis of the tube. The edges of a raster will fall between these rectangles, with optimum correction potentials applied.

 $10~\mathrm{cm}$  diameter flat faced monoaccelerator oscilloscope tube with low heater consumption.

QUICK REFE	ERENCE DATA		
Accelerator voltage	$V_{g_2,g_4,g_5(\ell)}$	1500	V
Display area		80 x 60	mm <sup>2</sup>
Deflection coefficient, horizontal	$M_{X}$	32	V/cm
vertical	$M_y$	13.7	V/cm

The D10-161.. is equivalent to the type D10-160.. except for the following:

**HEATING:** Indirect by A.C. or D.C.; parallel supply

Heater voltage

Heater current

 $\frac{\mathrm{Vf}}{\mathrm{I_f}}$  6.3 V 95 mA

LIMITING VALUES (Absolute max. rating system)

Cathode to heater voltage

Cathode positive


V+k/f-

max. 100 V

Cathode negative

V-k/f+

max. 15 V

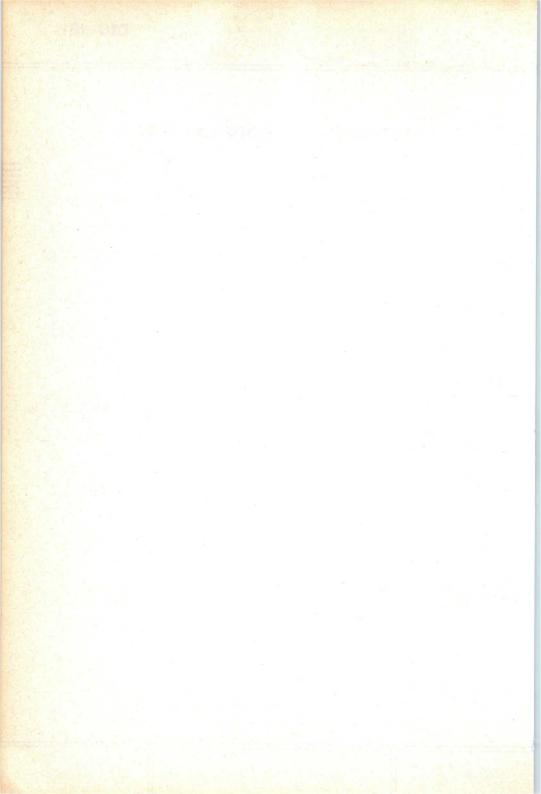

 $10~\rm cm$  diameter flat faced oscilloscope tube with mesh, designed for compact, transistorized oscilloscopes of  $10~\rm MHz$  to  $30~\rm MHz$  bandwidth.

QUICK REFER	RENCE DATA		
Final accelerator voltage	Vg7(1)	6	kV
Display area		80 x 60	$mm^2$
Deflection coefficient, horizontal	$M_X$	13	V/cm
vertical	$M_y$	3.5	V/cm

### SCREEN

	colour	persistence
D10-170GH	green	medium short

Useful screen diameter

min. 85 mm

Useful scan at  $V_{g_7(\ell)}/V_{g_2,g_4} = 6$ 

horizontal

min. 80 mm

vertical

min. 60 mm

The useful scan may be found shifted vertically to a max. of 5 mm with respect to the geometric centre of the faceplate.

**HEATING:** Indirect by A.C. or D.C.; parallel supply


Heater voltage

 $\frac{V_f}{V_f}$  6.3 V

Heater current

### MECHANICAL DATA

Dimensions in mm

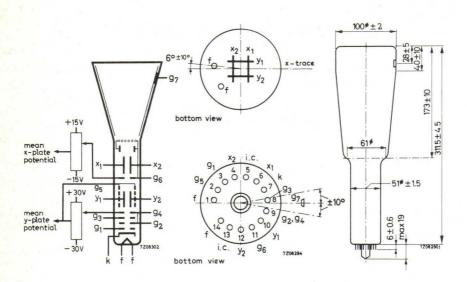

# Mounting position: any

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

# Dimensions and connections

See also outline drawing

Overall length (socket included) max.

Face diameter max. 102 mm

Net weight approx. 500 g

Base 14 pin all glass

# Accessories

Socket (supplied with tube) type 55566

Final accelerator contact connector type 55563

Mu-metal shield type 55548

335

mm

# CAPACITANCES

$x_1$ to all other elements except $x_2$	$C_{x_1(x_2)}$	7	pF	
$\mathbf{x}_2$ to all other elements except $\mathbf{x}_1$	$C_{x_2(x_1)}$	7	pF	
$y_1$ to all other elements except $y_2$	$C_{y_1(y_2)}$	5	pF	
$y_2$ to all other elements except $y_1$	Cy2(y1)	5	pF	
$x_1$ to $x_2$	$C_{x_1x_2}$	2.5	pF	
$y_1$ to $y_2$	$C_{y_1y_2}$	1.5	pF	
Control grid to all other elements	$C_{g_1}$	6	pF	
Cathode to all other elements	$C_k$	5	pF	

**FOCUSING** 

electrostatic

DEFLECTION

double electrostatic

x plates y plates symmetrical symmetrical

If use is made of the full deflection capabilities of the tube the deflection plates will intercept part of the electron beam; hence a low impedance deflection plate drive is desirable.

Angle between x and y traces

90 ± 45'

### LINE WIDTH

Measured with the shrinking raster method over the whole screen area under typical operating conditions, adjusted for optimum spot size at a beam current I $\ell$  = 10  $\mu$ A.

Line width

1.w. 0.42 mm

# TYPICAL OPERATING CONDITIONS

Final accelerator voltage	$V_{g_7(\ell)}$	6000	V
Interplate shield voltage	$V_{g_6}$	1000	V
Geometry control voltage	$\Delta V_{g_6}$	± 15	$V^{-1}$ )
Deflection plate shield voltage	$v_{g_5}$	1000	$V^{2}$
Focusing electrode voltage	$V_{g_3}^{s_5}$	170 to 230	V
First accelerator voltage	$v_{g_2,g_4}$	1000	V
Astigmatism control voltage	$\Delta V_{g_2,g_4}$	+ 30	$V^{3}$
Control grid voltage for visual	82,84	_	
extinction of focused spot	$V_{g_1}$	-16 to -40	V
Deflection coefficient, horizontal	$M_X$	av. 13 max. 14	V/cm
vertical	My	av. 3.5 max. 3.8	V/cm
Deviation of linearity of deflection		max. 2	% 4)
Geometry distortion		see note 5	
Useful scan, horizontal		min. 80	mm
vertical		min. 60	mm


# LIMITING VALUES (Absolute maximum rating system)

Final accelerator voltage	V.	max.	6600	V	
Final accelerator voltage	$V_{g_7(\ell)}$	min.	4000	V	
Interplate shield voltage and					
geometry control electrode voltage	Voc	max.	2200	V	
Deflection plate shield voltage	$\begin{array}{c} { m V_{g}}_{6} \\ { m V_{g}}_{5} \end{array}$	max.	2200	V	
Focusing electrode voltage	$v_{g_3}^{s_3}$	max.	2200	V	
First accelerator and astigmatism	63	222	2200	V	
control electrode voltage	V-	max.	2200	V	
control electrode voltage	$v_{g_2,g_4}$	min.	900	V	
Control anid voltage negative	T/	max.	200	V	
Control grid voltage, negative	$-v_{g_1}$	min.	0	V	
Cathoda ta hoatan waltana	Vkf	max.	125	V	
Cathode to heater voltage	-V <sub>kf</sub>	max.	125	V	
Voltage between astigmatism control			500	3.7	
electrode and any deflection plate	$V_{g_A/x}$	max.	500	V	
electione and any deflection plate	$V_{g_4/y}$	max.	500	V	
Grid drive, average	847	max.	20	V	
Screen dissipation	We	max.	3	mV	$V/cm^2$
Ratio Vg7(1)/Vg2,g4	Vg7(1)/Vg2,g4	max.	6		
6/ 62'64	62,84				

For notes see page 5

### Notes

- $^{\rm 1})$  This tube is designed for optimum focus when operating at a ratio  $\rm V_{\rm g7}/\rm V_{\rm g2,g4}$  not higher than 6.
  - The geometry electrode voltage should be adjusted within the indicated range (values with respect to the mean x-plate potential). A negative control voltage will cause some pincushion distortion and less background light, a positive control voltage will give some barrel distortion and a slight increase of background light.
- 2) The deflection plate shield voltage should be equal to the mean y-plate potential. The mean x- and y-plate potentials should be equal for optimum spot quality.
- 3) The astigmatism control electrode voltage should be adjusted for optimum spot shape. For any necessary adjustment its potential will be within the stated range.
- 4) The sensitivity at a deflection of less than 75% of the useful scan will not differ from the sensitivity at a deflection of 25% of the useful scan by more than the indicated value.
- 5) A graticule, consisting of concentric rectangles of 60 mm x 60 mm and 58.6 mm x 58.6 mm, is aligned with the electrical x-axis of the tube. With optimum correction potentials applied the edges of a raster lie between these rectangles.

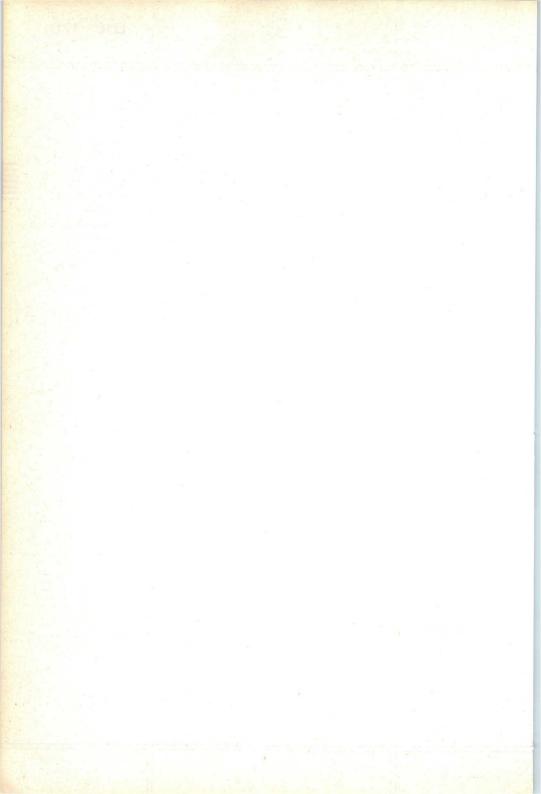

Oscilloscope tube with rectangular 10 cm diagonal flat face and metal-backed screen, provided with internal graticule. The high sensitivities of this mesh tube, together with the sectioned y-deflection plates, render the tube suitable for transistorized oscilloscopes for frequencies up to 100 MHz to 250 MHz.

QUICK REFERENCE DATA			
Final accelerator voltage	Vg8(1)	15	kV
Display area		50 x 80	$mm^2$
Deflection coefficient, horizontal	$M_X$	12	V/cm
vertical	$M_{y}$	3.5	V/cm

#### SCREEN

	Colour	Persistence
D10-200GH/07	green	medium short

Useful screen dimensions

min.  $50 \times 80 \text{ mm}^2$ 

Useful scan at  $V_{g_8(\ell)}/V_{g_4} = 10$ horizontal

min. 80

vertical

min. 50 mm

mm

The tube is supplied with a correction coil unit which ensures that the scanned area can be centred on and aligned with the internal graticule. See page 6

**HEATING:** Indirect by A.C. or D.C.; parallel supply

Heater voltage


6.3 V

Heater current

I<sub>f</sub> 300 mA

# MECHANICAL DATA

Dimensions in mm

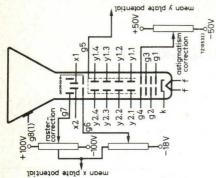

550 FEO 5) 1080шах

bottom view

70


x-trace 91 1) The edges of the faceplate will always be within a rectangle 95 ± 1.5 mm x 58.6 ± 1.5 mm.


2) In each plane.

4) It is recommended to solder the supply wires on the tags 3) Recommended inside diameter of the mu-metal shield is min. 70 mm.

before the tube is placed in the mu-metal shield. This shield is provided with a hole for these wires.

5) Clear area for light conductor. 6) Coil connections see page 6.

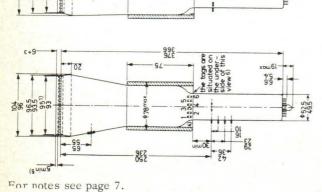

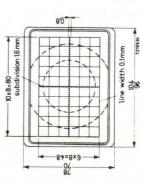

58.61

# =

# MECHANICAL DATA (continued)

Dimensions in mm

Mounting position: any

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

Dimensions and connections

See also outline drawing

Overall length (socket included) max. 405 mm Faceplate dimensions max. 104 x 78 mm<sup>2</sup>

Net weight approx. 900 g

Base 14 pin all glass

Accessories

Socket (supplied with tube) type 55566
Final accelerator contact connector type 55563
Side contact connector type 55561

Mu-metal shield

CAPACITANCES

x1 to all other elements except x2 5.5 pF  $C_{x_1(x_2)}$ x2 to all other elements except x1  $C_{x_2}(x_1)$ 5.5 pF y<sub>1 1</sub> to all other elements except y<sub>2 1</sub> 1.5 pF  $C_{y_{1,1}}(y_{2,1})$ 2.5 X1 to X2  $C_{x_1x_2}$ pF Cy1.1 y2.1 0.80 pF y1.1 to y2.1 Control grid to all other elements 5.5 pF  $C_{g_1}$ Cathode to all other elements Ck 3.5 pF

FOCUSING electrostatic

**DEFLECTION** double electrostatic

x plates symmetrical y plates symmetrical

If use is made of the full deflection capabilities of the tube the deflection plates will intercept part of the electron beam; hence a low impedance deflection plate drive is desirable.

Angle between x and y traces 900 (see page 6 "Correction coils")

#### LINE WIDTH

Measured with the shrinking raster method in the centre of the screen under typical operating conditions, adjusted for optimum spot size at a beam current  $I = 10 \mu A$ :

Line width 1.w. approx. 0.35 mm

TYPICAL OPERATING CONDITIONS			
Final accelerator voltage	$V_{g_8(\ell)}$	15000	V
Geometry control electrode voltage	$v_{g_7}$	$1500 \pm 70$	V 1)
Post deflection (mesh) and interplate shield voltage	$v_{g_6}$	1500	V .
Background illumination control voltage	$\Delta V_{g_6}$	-12 to -18	V
Deflection plate shield voltage	$v_{g_5}$	1500	$V^2$ )
Astigmatism control electrode voltage	$v_{g_4}$	$1500 \pm 50$	$V^3$ )
Focusing electrode voltage	$v_{g_3}$	380 to 520	V
First accelerator voltage	$v_{g_2}$	1500	V
Control grid voltage for visual extinction			
of focused spot	$v_{g_1}$	-40 to -100	V
Deflection coefficient, horizontal	$M_X$	av. 12 max. 13.2	V/cm
vertical	$M_y$	av. 3.5 max. 3.85	V/cm
Deviation of linearity of deflection		max. 2	% <sup>4</sup> )
Geometry distortion		see note 5	
Useful scan, horizontal vertical		80 50	mm mm
LIMITING VALUES (Absolute max. rating syst	em)		
Final accelerator voltage	$v_{g_8(\ell)}$	max. 16500 min. 9000	V
Geometry control electrode voltage	$v_{g_7}$	max. 2400	V
Post deflection and interplate shield voltage	$v_{g_6}$	max. 2400 min. 1300	V V
Deflection plate shield voltage	$v_{g_5}$	max. 2400	V
Astigmatism control electrode voltage	$v_{g_4}$	max. 2400 min. 1350	V V
Focusing electrode voltage	$V_{g_3}$	max. 2400	V
First accelerator voltage	$v_{g_2}$	max. 1800 min. 1350	V V
Control grid voltage, positive negative	$\begin{array}{c} v_{g_1} \\ -v_{g_1} \end{array}$	max. 0 max. 200	V V

Notes see page 5.

### LIMITING VALUES (continued)

Cathode to heater voltage	$V_{\mathbf{kf}}$	max.	200	V
8	-V <sub>kf</sub>			V
Voltage between astigmatism control				*
electrode and any deflection plate	Vga-x	max.	500	V
	V <sub>g4</sub> -x V <sub>g4</sub> -y	max.	500	V
Screen dissipation	We	max.	3	$mW/cm^2$
Ratio Vg8(1)/Vg4	$V_{g_8(\ell)}/V_{g_4}$	max.	10	
Cathode current, average	Ik	max.	300	$\mu$ A

### NOTES

- 1) This tube is designed for optimum performance when operating at the ratio  $V_{g8}(\ell)/V_{g4}$  = 10. Operation at other ratios may result in changes in deflection uniformity and geometry distortion. The geometry control electrode voltage should be adjusted for optimum performance. For any necessary adjustment its potential will be within the stated range.
- 2) This voltage should be equal to the mean y plate potential.
- 3) The astigmatism control electrode voltage should be adjusted for optimum spot shape. For any necessary adjustment its potential will be within the stated range.
- $^4$ ) The sensitivity at a deflection of less than 75% of the useful scan will not differ from the sensitivity at a deflection of 25% of the useful scan be more than the indicated value.
- 5) The geometry distortion is such that, with optimum correction potentials applied, it will always be possible to have a scanned raster with the edges remaining between two rectangles, one measuring 80 mm x 50 mm, the other 78.4 mm x 48.5 mm and with:
  - coinciding centres
  - the longer sides aligned with the electrical x-axis of the tube.

### CORRECTION COILS

The D10-200../07 is provided with a coil unit consisting of:

- 1. a pair of coils L1 and L2 for
  - a. correction of the orthogonality of the x and y traces enabling the angle between the x and y traces at the centre of the screen to be made exactly 90°.
  - b. vertical shift of the scanned area.
- a single coil L3 for image rotation enabling the alignment of the xtrace with the x lines of the graticule.

# Ortogonality and shift (coils L1 and and L2)

The current required under typical operating conditions is max. 45 mA for complete correction of orthogonality and shift. This value applies to a tube operating without a mu-metal shield, and will be 30 to 50% lower with a shield, depending on the shield diameter.


The resistance of each coil is approx. 175  $\Omega$ .

# Image rotation (coil L3)

The image rotation coil is wound concentrically around the tube neck. Under typical operating conditions a current of max. 30 mA will be required for complete correction. The resistance of this coil is approx.  $500\,\Omega$ .

# Connections of the coils

The coils are connected to the 6 soldering tags as follows:

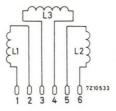

With  $L_1$  and  $L_2$  connected in series according to Fig.1, a current in the direction indicated will produce a clock-  $^6$  wise rotation of the vertical trace and a anti-clockwise rotation of the horizontal trace.

With the connection according to Fig. 2 the current as indicated will produce an upward shift.

By controlling the current of each coil separately, see Fig. 3, a change in the angle of the traces and a vertical shift can be made simultaneously. The change in angle will be proportional to the algebraic sum of the two currents and the shift to the algebraic difference.

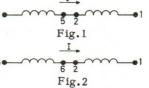




Fig.3

13 cm diameter flat faced oscilloscope tube with thin metal backing and post deflection acceleration by means of a helical electrode.

### SCREEN

	Colour	Persistence
D13-15GH	green	medium short
D13-15GM	yellowish	long
D13-15GP	bluish green	medium short

# HEATING

Indirect by A.C. or D.C.; parallel supply

Heater voltage

Heater current

$V_{f}$	=	6.3	V
$I_{f}$	=	300	mA


Dimensions in mm


# MECHANICAL DATA


1) Straight part of the bulb.

2.0° ±0.4

2) Location of the recessed cavity button contact with respect to the x-trace.

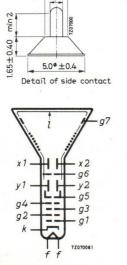

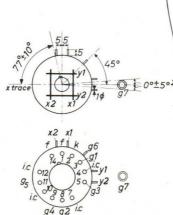

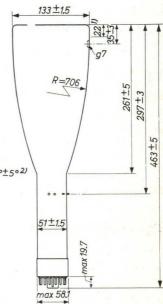

# MECHANICAL DATA (continued)

Base Diheptal medium shell

Accessories

Socket type 2422 517 00001

**FOCUSING** electrostatic

double electrostatic DEFLECTION

x plates symmetrical y plates symmetrical

If use is made of the full deflection capabilities of the tube the deflection plates will intercept part of the electron beam; hence a low impedance deflection plate drive is desirable.

 $90^{\circ} \pm 1^{\circ}$ Angle between x and y traces

### TYPICAL OPERATING CONDITIONS

Final accelerator voltage	Vg7(1)	=	4000	V
Geometry control electrode voltage	$V_{g_6}$	=	$2000 \pm 200$	V
Deflection plate shield voltage	$V_{g_{\bar{5}}}$	=	2000	V
Astigmatism control electrode voltage	$V_{g_4}$	=	$2000 \pm 100$	V
Focusing electrode voltage	$v_{g_3}$	=	220 to 710	V
First accelerator voltage	$v_{g_2}$	=	2000	V
Control grid voltage for visual extinction of focused spot	-Vg1	=	60 to 96	V
Deflection coefficient				
horizontal	$M_X$	=	19.8 to 26.5	V/cm
vertical	My	=	5.1 to 6.7	V/cm
Deviation of linearity of deflection		=	max. 2	%
Useful scan				

horizontal

vertical

100 mm 60

mm

= min.

= min.

# D13-15..

system)	
Vg7(0)	= max. 8800 V = min. 2500 V
00.18 4	= max. 2200 V
	= max. 2200 V
$v_{g_4}$	= max. 2200 V = min. 1000 V
$V_{g_3}$	= max. 1500 V
-0	= max. 2200 V
-	
-Vg <sub>1</sub>	= max. 200 V
$V_{g_1}$	= max. 0 V
Vglp	= max. 2 V
- P	
V+k/f-	= max. 200 V
V-k/f+	= max. 125 V
V <sub>g</sub> /x	= max. 500 V
Vg /y	= max. 500 V
$W_{\ell}$	= $max$ . 3 $mW/cm^2$
	$v_{g_3}$ $v_{g_2}$ $-v_{g_1}$ $v_{g_{1p}}$ $v_{+k/f}$ $v_{-k/f}$ $v_{-k/f}$ $v_{g/x}$ $v_{g/y}$


 $V_{g_7(\ell)}/V_{g_4} = \max.$ 

 $V_{g_2}/V_{g_4} = \max.$ 



Ratio  $V_{g_7}(\ell)/V_{g_4}$ 

Ratio  $V_{g_2}/V_{g_4}$ 

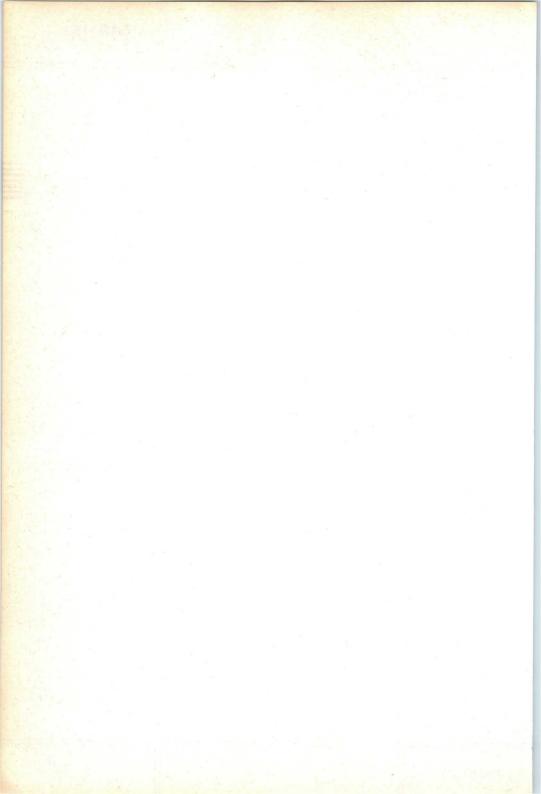

Oscilloscope tube with flat 13 cm diameter face, post deflection acceleration by means of a helical electrode, metal backed screen, deflection blanking and sectioned y deflector plates. The tube is designed to display high frequencies combined with a high writing speed.

QUICK REFEREN	NCE DATA			
Final accelerator voltage	$V_{g_9(\ell)}$	=	10	kV
Display area		=	6x10	cm
Deflection coefficient, horizontal	$M_X$	max	x. 18	V/cm
vertical	$M_{y}$	=	6	V/cm

# SCREEN

i	Colour	Persistence
D13-16GH	green	medium short
D13-16GP	bluish green	medium short

Useful screen diameter

min. 114 mm

Useful scan at  $V_{g9}(\ell)/V_{g5} = 6$ 

horizontal

min. 100 mm

vertical

min. 60 mm

### HEATING


Indirect by A.C. or D.C.; parallel supply

Heater voltage

 $V_{f} = 6.3 \text{ V}$ 

Heater current

I<sub>f</sub> = 300 m

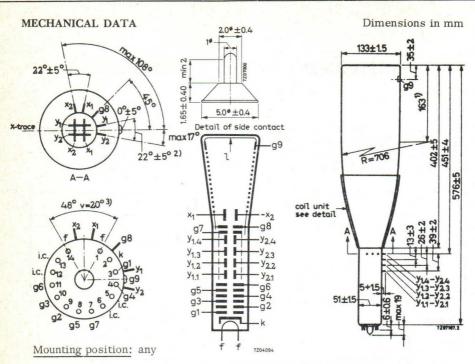

The socket should under no circumstances be used to support the tube.

Base	14 pin all glass		
Dimensions and connections			
Overall length (inclusive socket 55566)	max.	600	mm
Face diameter	max.	134.5	mm
Net weight:	approx.	1300	g
Accessories			
Socket (supplied with tube)	type	55566	
Final accelerator contact connector	type	55563	
Side contact connector	type	55561	
Mu-metal shield	type	55554	<sup>4</sup> )
1) Straight part			.1

<sup>2)</sup> The tolerance of the position of the neck pins with respect to the x-trace is  $\pm 2^{\circ}$ .

4) See page 6.

<sup>3)</sup> The tolerance of the position of the base pins with respect to the x-trace is + 10°.

### CAPACITANCES

$\mathbf{x}_1$ to all other elements except $\mathbf{x}_2$	$C_{x_1(x_2)}$	=	2.8	pF	
$\mathbf{x}_2$ to all other elements except $\mathbf{x}_1$	$C_{x_2(x_1)}$	=	2.8	pF	
$y_{1.1}$ to all other elements except $y_2, y_{1.2}, y_{1.3}, y_{1.4}$	C <sub>y1.1</sub> (y <sub>2</sub> ,y <sub>1.2</sub> ,y <sub>1.3</sub> ,y <sub>1.4</sub> )	=	1.6	pF	
$y_{2.1}$ to all other elements except $y_1, y_{2.2}, y_{2.3}, y_{2.4}$	$C_{y_{2.1}(y_1, y_{2.2}, y_{2.3}, y_{2.4})}$	=	1.6	pF	
$x_1$ to $x_2$	$C_{x_1x_2}$	=	2.3	pF	
y <sub>1.1</sub> to y <sub>2.1</sub>	C <sub>y1.1</sub> , y <sub>2.1</sub>	=	0.7	pF	
Control grid to all other elements	$C_{g_1}$	=	5.0	pF	
Cathode to all other elements	$C_k$	=	3.0	pF	
g <sub>3</sub> to all other elements	$C_{g_3}$	= ,	9	pF	

FOCUSING electrostatic

**DEFLECTION** double electrostatic

x plates symmetrical y plates symmetrical

If use is made of the full deflection capabilities of the tube the deflection plates will intercept part of the electron beam near the edge of the scan, hence a low impedance deflection plate drive is desirable.

Angle between x and y traces 90° See "Correction Coils"

# LINE WIDTH

Measured with the shrinking raster method in the centre of the screen

Final accelerator voltage	$V_{g_9}(\ell)$	=	10 000	V
Astigmatism control electrode voltage	$v_{g_5}$	=	1670	$V^5$ )
First accelerator voltage	$v_{g_2}$	=	1670	V
Beam current	$I_{g_9}(\ell)$	=	10	μΑ
Line width	1.w.	=	0.35	mm

#### HELIX

Post deflection acc. helix resistance min. 300 M $\Omega$ The helix is connected between go( $\ell$ ) and g<sub>8</sub>

The helix is connected between gg(1) and g8

<sup>5)</sup> See page 6

# TYPICAL OPERATING CONDITIONS

TITLE OF ELLIPSING GOT ELLIPSING				
Final accelerator voltage	$V_{g_0}(l)$	=	10 000	V
Geometry control electrode voltage	$v_{g_8}$	=	1670 ± 100	V 1)
Deflection plate shield voltage	$v_{g_7}$	=	1670	$V^2$ )
Beam centring electrode voltage	$v_{g_6}$	Ξ	1670 ± 20	$V^{3}$
Astigmatism control electrode voltage	$v_{g_5}$	=	1670 ± 100	$V^{5}$ )
Focusing electrode voltage	$V_{g_4}$	=	230 to 500	V
Deflection blanking electrode voltage	$v_{g_3}$	=	1670	V
Deflection blanking control voltage	$\Delta V_{g_3}$	=	max. 60	V 6)
First accelerator voltage	$v_{g_2}$	=	1670	V
Control grid voltage for visual extinction of focused spot	$-v_{g_1}$	=	50 to 120	V
Deflection coefficient				
horizontal	$M_X$	=	max. 18	V/cm
vertical	$M_{y}$	=	5.6 to 6.6	V/cm
Deviation of linearity of deflection		=	max. 2	% 7)
Geometry distortion	See not	e 8		
Useful scan				
horizontal		=	100	mm

vertical

60 mm

<sup>1) 2) 3) 5)6)7)8)</sup> See page 6

LIMITING VALUES (Absolute limits)					
Final accelerator voltage	$V_{g_9(\ell)}$	=		16000	V
	89(1)	=	min.	9000	V
Geometry control electrode voltage	$v_{g_8}$	=	max.	2500	V
Deflection plate shield voltage	Vg7	=	max.	2500	V
Beam centring electrode voltage	$v_{g_6}$	=	max.	2500	V
Astigmatism control electrode voltage	$v_{g_5}$	=	max.	2500	V
Focusing electrode voltage	$v_{g_4}$	=	max.	2500	V
Deflection blanking electrode voltage	$v_{g_3}$	=	max.	2500	V
First accelerator voltage		=	max.	2500	V
Control grid voltage	$v_{g_2}$	=	min.	1250	V
negative	-V	=	max.	200	V
	$-v_{g_1}$				
positive	$v_{g_1}$	=	max.	0	V
positive peak	$v_{g_1p}$	=	max.	2	V
Voltage between cathode and heater					
cathode positive	V+k/f-	=	max.	200	V
cathode negative	$V_{-k/f+}$	=	max.	125	V
Ratio Vg <sub>9</sub> (ℓ)/Vg <sub>5</sub>	$V_{g_9(\ell)}/V_{g_5}$	=	max.	10	
Ratio V <sub>g2</sub> /V <sub>g5</sub>	$v_{g_2}/v_{g_5}$	=	max.	1	
Screen dissipation	$W_\ell$	=	max.	3	mW/cm <sup>2</sup>
Average cathode current	$I_{\mathbf{k}}$	=	max.	300	μΑ

This tube is designed for optimum performance when operating at the ratio  $V_{g_9}(\ell)/V_{g_5} = 6$ .

Operation at other ratio may result in changes in deflection uniformity and geometry distortion.

The geometry control electrode voltage should be adjusted for optimum performance. For any necessary adjustment its potential will be within the stated range.


- 2) This voltage should be equal to the mean x and y plates potential.
- 3) The beam centring electrode voltage should be adjusted for equal brightness in the x direction with respect to the electrical centre of the tube.
- 4) To avoid damaging the side contacts the narrower end of the mu-metal shield should have an internal diameter of not less than 70 mm.
- 5) The astigmatism control electrode voltage should be adjusted for optimum spot shape. For any necessary adjustment its potential will be within the stated range.
- 6) For beam blanking of a beam current  $I_{g_9}(\ell)$  of 10  $\mu$ A.
- 7) The sensitivity at a deflection of less than 75% of the useful scan will not differ from the sensitivity at a deflection of 25% of the useful scan by more than the indicated value.
- 8) A graticule, consisting of concentric rectangles of 100 mm x 60 mm and 98 mm x 58.2 mm is aligned with the electrical x axis of the tube. The edges of a raster will fall between these rectangles with optimum correction potentials applied.


#### CORRECTION COILS


The D13-16.. is provided with a coil unit consisting of a pair of coils for:

- a. Correction of the orthogonality of the x and y traces (which means that at the centre of the screen the angle between the x and y traces can be made exactly  $90^{\circ}$ ).
- b. Vertical shift of the scanned area.

### DETAIL DRAWING OF COIL UNIT

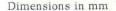

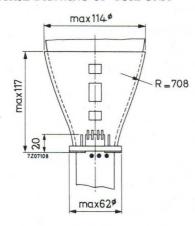

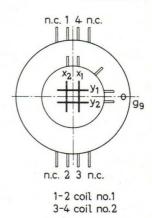


The currents required under typical operating conditions, the tube being screened by a mu-metal shield closely surrounding the coils (e.g. 55554), are max. 2.5 mA per degree of angle correction and max. 2 mA per mm of shift. If not such shield is used these values have to be multiplied by a factor k (1 < k < 2), the value of which depends on the diameter of the shield and approaches 2 for the case no shield is present.

The D.C. resistance is approx. 180  $\Omega$  per coil.

When designing the supply circuit for these coils it should be considered that the maximum current required in either coil can be 15 mA.

# Circuit diagrams

A suitable circuit permitting independent controls of orthogonality correction and vertical shift is given in fig.1.

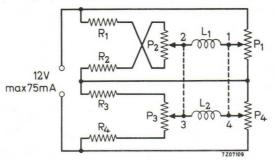


P1, P4 : Potentiometers 220  $\Omega$ , 1 Watt, ganged : Potentiometers  $100 \Omega$ , 0,5 Watt, ganged

 $R_1$ ,  $R_2$ ,  $R_3$ ,  $R_4$ : Resistors 56  $\Omega$ , 0,5 Watt

Fig. 1

The dissipation in the potentiometers can be reduced considerably if the requirement of independent controls is dropped (see fig. 2).

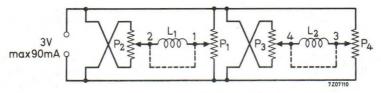


 $P_1$ ,  $F_2$ : Potentiometers, 220  $\Omega$ , 0,5 Watt, ganged P<sub>3</sub>, P<sub>4</sub>: Potentiometers, 220 Ω, 0,5 Watt, ganged

Fig. 2

A further reduction of the dissipation can be obtained by inserting a commutator for each coil (see fig. 3).

The procedure of adjustment will then become more complicated, but it should be kept in mind that a readjustment is necessary only when the tube has to be replaced.

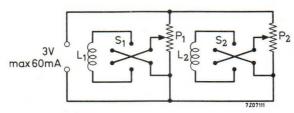

 $P_1$ ,  $P_2$ : Potentiometers, 500  $\Omega$ , 0,5 Watt.

S<sub>1</sub>, S<sub>2</sub>: Commutators


Fig.3

For the adjustment of the currents the following procedure is recommended:

- a. With the tube fully scanned in the vertical direction the scanned area must be shifted so that the useful vertical scan on either side of the geometric centre of the screen meets the published value of 30 mm min. With the circuit according to fig.1 this is done by means of the ganged potentiometers  $P_1$  and  $P_4$ .
- b. Adjustment of orthogonality by means of the ganged potentiometers  $P_2$  and  $P_3$  in fig.1. A slight readjustment of  $P_1$  and  $P_4$  may be necessary afterwards.

With a circuit according to fig. 2 or 3 these corrections have to be performed by means of successive adjustments of the currents in the coils.


The most convenient deflection signal is a square waveform permitting an easy and fairly accurate check of orthogonality.

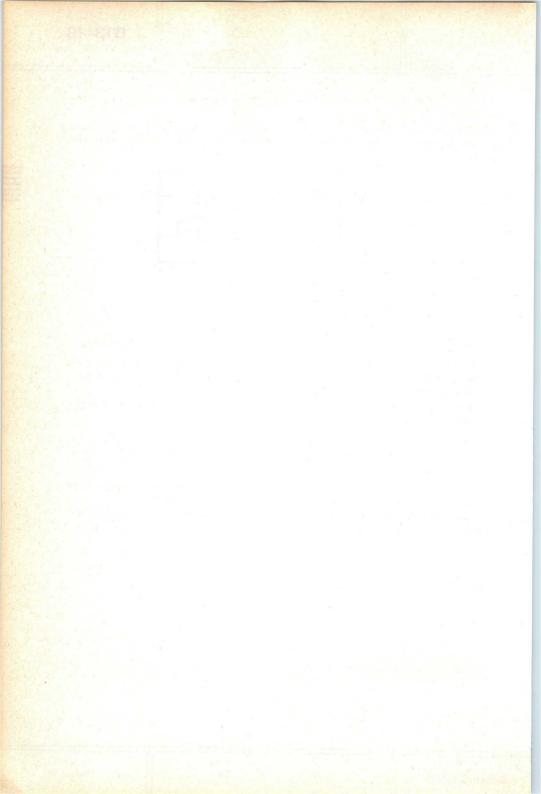


The D13-16../01 is equivalent to the D13-16.. but features an internal graticule. This graticule can be illuminated.

### MECHANICAL DATA

Dimensions in mm

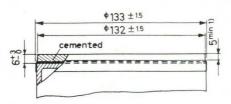

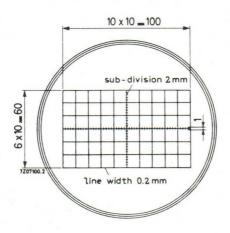

Maximum angle between x-trace and x-axis of the graticule

±5°

<sup>1)</sup> Clear area for light conductor.

#### ALIGNMENT


In order to align the x-trace and the x-axis of the graticule an image rotating coil may be used. This coil should be positioned at one third of the cone length, seen from the face end, and can be attached to the inner surface of the mumetal shield.

Under typical operating conditions maximum  $50\,\mathrm{ampere}$ -turns are required for alignment.

#### ILLUMINATION

To illuminate the internal graticule the use of a light conductor (e.g. of Perspex) is obligatory. The following design considerations should be observed:

In order to achieve the most efficient light conductance the holes for the light bulb as well as the contact area with the front plate should be polished. The contact with the edges of the front plate should be as close as possible and the edges of the front plate and the corresponding hole in the light conductor should be parallel to achieve light beams perpendicular to the edges. It is advised to apply reflective material to the outer circumference of the conductor and if possible also to both planes (see drawing).

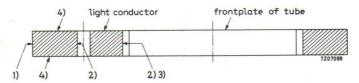

<sup>1)</sup> Reflective material.

<sup>2)</sup> Polished.

<sup>3)</sup> Close and constant distance to front plate of tube.

It is essential that the light conductor and the front plate of the tube are in plane.

<sup>4)</sup> If possible reflective material.

Oscilloscope tube with flat face post deflection acceleration by means of a helical electrode, side contacts, metal backed screen, 6 cm scan for high frequency and high writing speed applications.

### SCREEN

	colour	persistence
D13-19GH	green	medium short
D13-19GM	yellowish green	long
D13-19GP	bluish green	medium short

### HEATING

Indirect by A.C. or D.C.; parallel supply

Heater voltage

Heater current


 $\frac{V_f}{I_f} = \frac{6.3 \text{ V}}{300 \text{ mA}}$ 

Dimensions in mm

#### MECHANICAL DATA

1) Straight part of the bulb

2) Location of the recessed cavity button contact with respect to the x-trace.

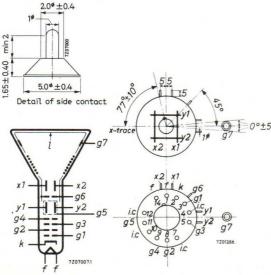



### MECHANICAL DATA (continued)

Base: Diheptal

Accessories

2422 517 00001 Socket type 55563 Final accelerator contact connector type 55561 Side contact connector type 55551 Mu-metal shield type

FOCUSING

electrostatic

DEFLECTION

double electrostatic

x plates y plates

symmetrical symmetrical

Angle between x and y traces.

900 + 10

53 to

82

TYPICAL OPERATING CONDITIONS

10 kV Vg7 (1) = Final accelerator voltage  $V_{g_6}$  $= 1670 \pm 170 \text{ V}$ Geometry control electrode voltage Deflection plate shield voltage Vg5  $= 1670 \pm 85 \text{ V}$ 

 $= 1670 \pm 85 \text{ V}$ Astigmatism control electrode voltage  $V_{Q_A}$ 320 to 500 V

 $V_{g_3}$ Focusing electrode voltage  $V_{g_2}$ 1670 First accelerator voltage

Control grid voltage for visual

 $-V_{g_1}$ extinction of focused spot 33 V/cm Deflection coefficient, horizontal  $M_x$ 27 to

vertical = 9.5 to 12.4 V/cm

 $M_V$ 

Deviation of linearity of deflection = max. 2 9


min. 100 mm Useful scan, horizontal

> vertical min. 60 mm

2

# LIMITING VALUES (Absolute max. rating system)

Final accelerator voltage	Vg7(1)	=	max. min.	12 6	kV kV
Geometry control electrode voltage	$v_{g_6}$	=	max.	2200	V
Deflection plate shield voltage	$v_{g_5}$	=	max.	2100	V
Astigmatism control electrode voltage	$v_{g_4}$	=	max.,	2100 1000	V V
Focusing electrode voltage	$v_{g_3}$	=	max.	1500	V
First accelerator voltage	$v_{g_2}$	= =	max. min.	2100 1000	V V
Control grid voltage					
negative	$-V_{g_1}$	=	max.	200	V
positive	$v_{g_1}$	=	max.	0	V
positive peak	$v_{g_{1p}}$	=	max.	2	V
Cathode to heater voltage					
cathode positive	V+k/f-	=	max.	200	V
cathode negative	V-k/f+	=	max.	125	V
Voltage between astigmatism control electrode and any deflection plate	Vg <sub>4</sub> /x	=	max.	500	V
	Vg <sub>4</sub> /y	=	max.	500	V
Screen dissipation	$W_{\ell}$	=	max.	3	mW/cm <sup>2</sup>
Ratio Vg7 (1)/Vg4	$V_{g_7(0)}/V_{g_4}$	=	max.	6	

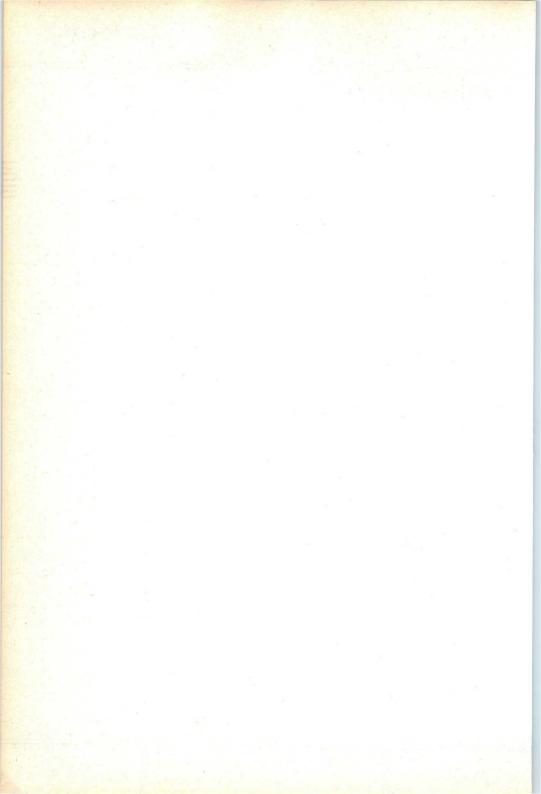

Oscilloscope tube with flat face post deflection acceleration by means of a helical electrode, side contacts, metal backed screen,  $4\,\mathrm{cm}$  scan for high frequency and high writing speed applications.

QUICK REFERENCE DATA							
Final accelerator voltage	Vg (l)	=	10	kV			
Display area		=	4 x 10	cm			
Deflection coefficient, horizontal	$M_X$	=	30	V/cm			
vertical	$M_y$	=	6.4	V/cm			

#### SCREEN

	colour	persistence
D13-21GH	green	medium short
D13-21GP	bluish green	medium short
D13-21GM	yellowish green	long

The useful scan may be shifted vertically to a max. of 3 mm with respect to the geometric centre of the faceplate.


### HEATING

Indirect by A.C. or D.C.; parallel supply

Heater voltage  $\frac{V_f}{I_f} = 6.3 \text{ V}$ Heater current  $\frac{V_f}{I_f} = 300 \text{ mA}$ 

### MECHANICAL DATA

Dimensions in mm

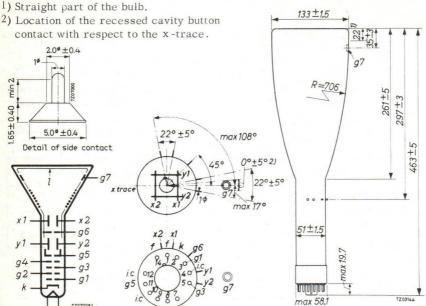

### Mounting position: any

7207008.1

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

94 92 ic 7207009

Base

Diheptal 12 pins

### Dimensions and connections

See also outline drawing

Overall length 468 max. mm Face diameter 134.5 max. mm

Net weight: approx. 910

### Accessories

Socket	type	2422 517 00001
Final accelerator contact connector	type	55563
Side contact connector	type	55561
Mu-metal shield	type	55551

### CAPACITANCES

$\mathbf{x}_1$ to all other elements except $\mathbf{x}_2$	$C_{x_1}(x_2)$	=	2.8	pF	
$\mathbf{x}_2$ to all other elements except $\mathbf{x}_1$	$C_{x_2}(x_1)$	=	2.8	pF	
$\mathbf{y}_1$ to all other elements except $\mathbf{y}_2$	$C_{y_1}(y_2)$	=	2.8	pF	
$y_2$ to all other elements except $y_1$	$C_{y_2}(y_1)$	=	2.8	pF	
$x_1$ to $x_2$	$C_{x_1x_2}$	=	1.9	pF	
$y_1$ to $y_2$	$C_{y_1y_2}$	=	1.5	pF	
Control grid to all other elements	$c_{g_1}$	=	6.0	pF	
Cathode to all other elements	$C_k$	=	3.5	pF	

FOCUSING

electrostatic

DEFLECTION

double electrostatic

x plates

symmetrical

y plates

symmetrical

If use is made of the full deflection capabilities of the tube the deflection plates will intercept part of the electron beam; hence a low impedance deflection plate drive is desirable.

Angle between x and y traces

90° ± 1°

### LINE WIDTH

Measured with the shrinking raster method in the centre of the screen.

Final accelerator voltage	Vg7 (1)	= , ,	10	kV
Astigmatism control electrode voltage	$v_{g_4}$	=	1670	$V^3$ )
First accelerator voltage	$v_{g_2}$	=	1670	V
Beam current	I(()	=	10	μΑ
Line width	1.w.	=	0.4	mm

### HELIX

Post deflection accelerator helix resistance = min. 200  $M\Omega$ 

<sup>3)</sup> See page 6

### TYPICAL OPERATING CONDITIONS

TITCHE OF ENTITIES CONTENTS				
Final accelerator voltage	Vg7(1)	=	10	kV
Geometry control electrode voltage	$V_{g_6}$	=	1670 <u>+</u> 170	V 1)
Deflection plate shield voltage	$V_{g_5}$	=	$1670 \pm 85$	$V^2$ )
Astigmatism control electrode voltage	$v_{g_4}$	=	$1670 \pm 85$	V 3)
Focusing electrode voltage	$v_{g_3}$	=	320 to 500	V
First accelerator voltage	$v_{g_2}$	=	1670	V
Control grid voltage for visual extinction of focused spot	$v_{g_1}$	=	-50 to -80	V
Deflection coefficient, horizontal	$M_X$	=	27 to 33	V/cm
vertical	$M_V$	=	5.7 to 7.1	V/cm
Deviation of linearity deflection	ŕ			
horizontal		=	max. 1.5	% <sup>4</sup> )
vertical		=	max. 1.0	% <sup>4</sup> )
Geometry distortion			See note 5	
Useful scan, horizontal		=	min. 100	mm
vertical		=	min. 40	mm

### CIRCUIT DESIGN VALUES

Focusing electr	rode	Vg	=	190 to	300	V per kV of Vg4
	oltage for visual of focused spot	$-v_{g_1}$	Ξ	30 to	48	V·per kV of V <sub>g2</sub>
Deflection coef	ficient at $V_{g7}(l)/V_{g4} = 6$					
	horizontal	$M_X$	=	16.2 to	19.8	$V/cm$ per $kV$ of $V_{g_4}$
	vertical	$M_{v}$	=	3.4 to	4.25	V/cm per kV of V <sub>g4</sub>
Control grid ci	rcuit resistance	$R_{g_1}$	=	max.	1.5	ΜΩ
Deflection plate	circuit					
	resistance	$R_x, R_y$	=	max.	1.0	$M\Omega$
Focusing electi	rode current	$I_{\sigma}$	=	-15 to	+10	$\mu A^{6}$ )

<sup>1)2)3)4)5)6)</sup> See page 6

LIMITING VALUES	(Absolute max. rating system)
-----------------	-------------------------------

	,	8 , ,				
Final accele	erator voltage	Vg7(1)	= =	max.	12 6	kV kV
Geometry co	ontrol electrode voltage	$V_{g_6}$	=	max.		V
Deflection p	late shield voltage	$v_{g_5}$	=	max.	2100	V
Astigmatism	n control electrode voltage	$v_{g_4}$	=	max.	2100	V
8		84	=	min.	1000	V
Focusing ele	ectrode voltage	$V_{g_3}$	=	max.	1500	V
Einst assals	erator voltage	V	=	max.	2100	V
rirst accere	erator voltage	$v_{g_2}$	=	min.	1000	V
Control grid	l voltage					
	negative	$-V_{g_1}$	=	max.	200	V
	positive	$v_{g_1}$	=	max.	0	V
	positive peak	$v_{g_{1p}}$	=	max.	2	V
Cathode to h	neater voltage	1				
	cathode positive	V+k/f-	=	max.	200	V
	cathode negative	V-k/f+	=	max.	125	V
Voltage bety	veen astigmatism control					
electrod	e and any deflection plate	$V_{g_4/x}$	=	max.	500	V
		Vg <sub>4</sub> /y	=	max.	500	V
Screen diss	ipation	$W_{\ell}$	=	max.	3	$mW/cm^2$
Ratio Vg7 (	$(V_{g4})$	$v_{g_7(\ell)}/v_{g_4}$	=	max.	6	

This tube is designed for optimum performance when operating at the ratio  $V_{g_7(t)}/V_{g_4}$  = 6. Operation at other ratio may result in changes in deflection uniformity and geometry distortion. The geometry control electrode voltage should be adjusted for optimum performance. For any necessary adjustment its potential will be within the stated range.

 $<sup>^{2}</sup>$ ) This voltage should be equal to the mean x- and y plates potential.

<sup>3)</sup> The astigmatism control electrode voltage should be adjusted for optimum spot shape. For any necessary adjustment its potential will be within the stated range.

<sup>4)</sup> The sensitivity at a deflection of less than 75 % of the useful scan will not differ from the sensitivity at a deflection of 25 % of the useful scan by more than the indicated value.

<sup>5)</sup> A graticule, consisting of concentric rectangles of 100 mm x 40 mm and 98.8 mm x 39 mm is aligned with the electrical x axis of the tube. The edges of a raster will fall between these rectangles with optimum correction potentials applied.

 $<sup>^{6}</sup>$ ) Values to be taken into account for the calculation of the  $\mathrm{V}_{g_{3}}$ -potentiometer.

 $13~\rm cm$  diameter flat faced oscilloscope tube, with metal-backed screen, helical PDA and side connections to the x and y plates. The y plates are intended to be included in a resonant circuit tunable to frequencies from  $300~\rm MHz$  to  $900~\rm MHz$  by means of adapter units outside the tube. This tube incorporates deflection blanking and is intended for high frequency, narrow bandwidth displays.

QUICK REFERE	NCE DATA			-	
Final accelerator voltage	Vg9(1)	=	6	kV	
Display area		=	5x10	cm	
Deflection coefficient, horizontal	$M_X$	=	max. 14	V/cm	
vertical	$M_{y}$		See note 7 page 4		

#### SCREEN

	colour	persistence
D13-23GH	green	medium short

Useful screen diameter

min. 114 mm

Useful scan at  $V_{g_9(\ell)}/V_{g_5} = 5$ 

horizontal

min. 100 mm

vertical

min. 50 mm

The useful scan may be shifted vertically to a max. of 5 mm with respect to the geometric centre of the faceplate.

### HEATING

Indirect by A C. or D.C.; parallel supply


Heater voltage

 $V_f = 6.3$ 

Heater current

 $I_f = 300 \text{ mA}$ 



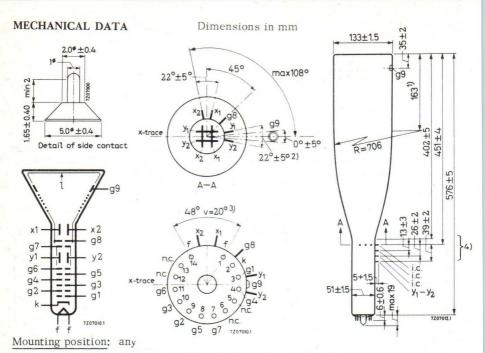

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

Base	14 pins	all glas	SS
Dimensions and connections			
Overall length (inclusive socket 55566) Face diameter	max.	600 13 <b>4.</b> 5	mm mm
Net weight:	approx	. 1300	g
Accessories:			
Socket (supplied with the tube) Final accelerator contact connector Side contact connector Mu-metal shield	type type type type	55566 55563 55561 55554	

<sup>1)</sup> Straight part

<sup>2)</sup> The tolerance of the position of the neck pins with respect to the x-trace is  $\pm 2^{\circ}$ .

<sup>3)</sup> The tolerance of the position of the base pins with respect to the x-trace is  $+10^{\circ}$ .

<sup>4)</sup> To avoid damaging the side contacts the narrower end of the mu-metal shield should have an internal diameter of not less than 70 mm.

### CAPACITANCES

$\mathbf{x}_1$ to all other elements except $\mathbf{x}_2$	$C_{x_1(x_2)}$	=	2.8	pF
$\mathbf{x}_2$ to all other elements except $\mathbf{x}_1$	$C_{x_2(x_1)}$	=	2.8	pF
$x_1$ to $x_2$	$C_{x_1x_2}$	=	2.3	pF
Control grid to all other elements	$c_{g_1}$	=	5.0	pF
Cathode to all other elements	$C_k$	=	3.5	pF
Deflection blanking electrode to all other elements	$C_{g_3}$	=	9	pF

FOCUSING electrostatic

**DEFLECTION** double electrostatic

x plates symmetrical y plates symmetrical

If use is made of the full deflection capabilities of the tube the deflection plates will intercept part of the electron beam; hence a low impedance deflection plate drive is desirable.

Angle between x and y plates

 $90^{\circ} \pm 1^{\circ}$ 

#### HELIX

Post deflection accelerator helix resistance

min. 300  $M\Omega$ 

### CIRCUIT DESIGN VALUES

Focusing voltage	$v_{g_4}$	=	138 to 300	V per kV of Vg2
Control grid voltage for visual extinction of focused spot	-Vg <sub>1</sub>	=	24 to 72	V per kV of Vg2
Deflection coefficient at $V_{g_9(\ell)}/V_g$	5 = 5			
horizontal	$M_X$	=	max. 10.8	V/cm per kV of Vg5
vertical	My		See note 1	
Control grid circuit resistance	$R_{g_1}$	=	max. 1.5	MΩ
Deflection plate circuit resistance	R <sub>x</sub> , R <sub>y</sub>	=	max. 50	kΩ
Focusing electrode current	$I_{g_4}$	=	+15 to -10	$\mu$ A <sup>2</sup> )

<sup>1)</sup> Depends on the frequency and the adaptors being used.

<sup>2)</sup> Values to be taken into account for the calculation of the focus potentiometer.

#### TYPICAL OPERATING CONDITIONS

Final accelerator voltage	$V_{g_9(\ell)}$	=		6000	V
Geometry control electrode voltage	$v_{g_8}$	=	1300 ±	100	V 1)
Deflection plate shield voltage	Vg7	=		1300	V 2)
Beam centring electrode voltage	$v_{g_6}$	=	1300 ±	20	$V^{3}$ )
Astigmatism control electrode voltage	$v_{g_5}$	=	1300 ±	100	V 4)
Focusing electrode voltage	$V_{g_4}$	=	180 to	390	V
Deflection blanking electrode voltage	$v_{g_3}$	=		1300	V
Deflection blanking control voltage	$\Delta V_{g_3}$	=	max.	60	V 5)
First accelerator voltage	$v_{g_2}$	=		1300	V
Control grid voltage for visual extinction					
of focused spot	$-v_{g_1}$	=	31 to	93	V
Deflection coefficient					
horizontal	$M_X$	=	max.	14	V/cm
vertical		Se	e note 7		
Geometry distortion		Se	e note 6		
Useful scan					
horizontal		=	min.	100	mm
vertical		=	min.	50	mm

This tube is designed for optimum performance when operating at the ratio  $V_{gg(\ell)}/V_{g5}$  = 5. Operation at other ratio may result in changes in deflection uniformity and geometry distortion. The geometry control electrode voltage should be adjusted for optimum performance. For any necessary adjustment its potential will be within the stated range.

2) This voltage should be equal to the mean x- and y plates potential.

3) The beam centring electrode voltage should be adjusted for equal brightness in the x direction with respect to the electrical centre of the tube.

4) The astigmatism control electrode voltage should be adjusted for optimum spot shape. For any necessary adjustment its potential will be within the stated range.

5) For beam blanking of a beam current of  $10 \mu A$ .


6) A graticule, consisting of concentric rectangles of 100 mm x 50 mm and 98 mm x 48.2 mm is aligned with the electrical x aixs of the tube. The edges of a raster will fall between these rectangles with optimum correction potentials applied.

7) Depends on the frequency and the adaptors being used.



# LIMITING VALUES (Absolute max. rating system)

Final accelerator voltage	$V_{g_9(l)}$	=	max.		V
		=	min.	5000	V
Geometry control electrode voltage	$v_{g_8}$	=	max.	2000	V
Deflection plate shield voltage	$v_{g_7}$	Ξ	max.	2000	V
Beam centring electrode voltage	$v_{g_6}$	=	max.	2000	V
Astigmatism control electrode voltage	$V_{g_5}$	=	max.	2000	V
Focusing electrode voltage	$V_{g_4}$	=	max.	2000	V
Deflection blanking electrode voltage	$v_{g_3}$	=	max.	2000	V
First accelerator voltage		=	max.	2000	V
Titst decelerator voltage	$v_{g_2}$	=	min.	1200	V
Control grid voltage					
negative	$-v_{g_1}$	=	max.	200	V
positive	$v_{g_1}$	=	max.	0	V
positive peak	$v_{g_{1p}}$	=	max.	2	V
Cathode to heater voltage					
cathode positive	$V_{+k/f}$	=	max.	200	V
cathode negative	$V_{-k/f+}$	=	max.	125	V
Voltage between astigmatism electrode	$v_{g_5/x}$	=	max.	500	V
and any deflection plate	$V_{g_5/y}$	=	max.	500	V
Cathode current (average)	$I_{\mathbf{k}}$	=	max.	300	mA
Screen dissipation	$W_{\ell}$	=	max.	3	mW/cm <sup>2</sup>
Ratio $V_{g_9(\ell)}/V_{g_5}$	$V_{g_9(\ell)}/V_{g_5}$	=	max.	10	
Ratio $V_{g_9}/V_{g_5}$	$v_{g_2}/v_{g_5}$	=	max.	1	

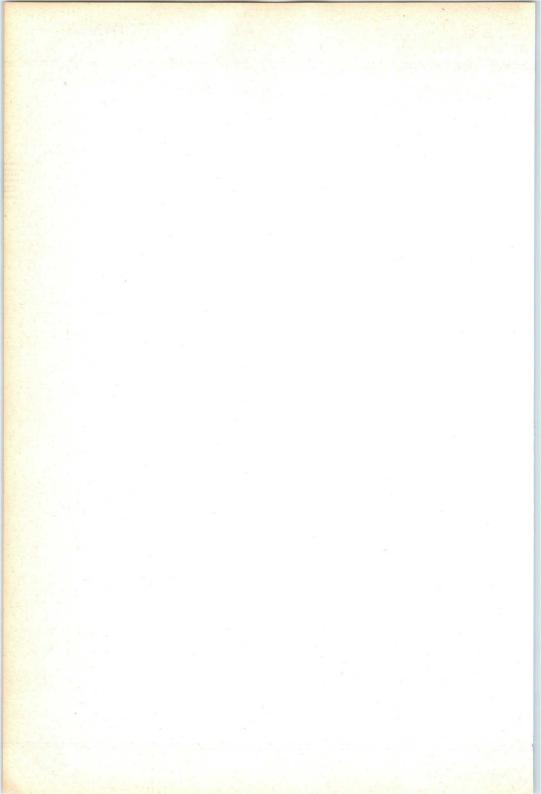

Oscilloscope tube with flat face, side connections to the deflector plates. The high sensitivities of this mesh tube render it suitable for transistorized equipment. The phosphor screen is metal backed.

QUICK REFERE	NCE DATA			
Final accelerator voltage	Vg9(1)		15	kV
Display area			6 <b>x</b> 10	cm
Deflection coefficient, horizontal	$M_X$		9.5	V/cm
vertical	$M_{y}$	=	2.9	V/cm

### SCREEN

	Colour	Persistence
D13-26GH	green	medium short
D13-26GP	bluish green	medium short

Useful screen diameter

min. 114 mm

min. 100 mm

Useful scan at  $V_{g_9(\ell)}/V_{g_4} = 10$ 

horizontal

vertical min. 60 mm

HEATING

Indirect by A.C. or D.C.; parallel supply


Heater voltage

 $I_f = 300 \text{ mA}$ Heater current

 $V_f = 6.3 V$ 



Dimensions in mm

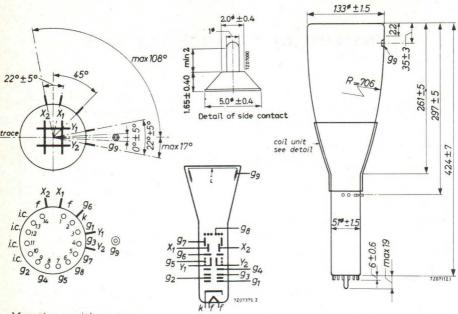

Mounting position: any

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

Base	14 pin all-glass
Dimensions and connections	

Overall length max. 450 mm Face diameter max. 134.5 mm Net weight 925 approx.

### Accessories

Socket 55566 type Final accelerator contact connector 55563 type Side contact connector 55561 type 555551) Mu-metal shield type

<sup>1)</sup> See page 6.

### CAPACITANCES

$\mathbf{x}_1$ to all other elements except $\mathbf{x}_2$	$C_{x_1(x_2)}$	=	4.5	pF
$\mathbf{x}_2$ to all other elements except $\mathbf{x}_1$	$C_{x_2(x_1)}$	=	4.5	pF
$\mathrm{y}_1$ to all other elements except $\mathrm{y}_2$	$C_{y_1(y_2)}$	=	3.8	pF
$\mathbf{y}_2$ to all other elements except $\mathbf{y}_1$	$C_{y_2(y_1)}$	=	3.8	pF
$x_1$ to $x_2$	$C_{x_1x_2}$	=	2.7	pF
$y_1$ to $y_2$	$C_{y_1y_2}$	=	1.8	pF
Control grid to all other elements	$c_{g_1}$	=	5.5	pF
Cathode to all other elements	$C_k$	=	3.0	pF

**FOCUSING** 

electrostatic

DEFLECTION

double electrostatic

x plates

symmetrical

y plates

symmetrical

If use is made of the full deflection capabilities of the tube the deflection plates will intercept part of the electron beam; hence a low impedance deflection plate drive is desirable.

Angle between x and y traces

90° See "Correction coils"

### LINE WIDTH

Measured with the shrinking raster method in the centre of the screen

Final accelerator voltage	Vgg(l)	=	15 000	15 000	V
Astigmatism control electrode voltage	$v_{g_4}$	=	2400	1500	$V^4$ )
First accelerator voltage	$v_{g_2}$	=	2400	1500	V
Beam current	I(1)	=	10	10	$\mu A$
Line width	1.w.	=	0.3	0.4	mm

<sup>4)</sup> See page 6

### TYPICAL OPERATING CONDITIONS

THICAL OFERRING CONDITIONS				
Final accelerator voltage	$V_{g_9(l)}$	=	15 000	V
Post deflection shield voltage				
(with respect to V <sub>g7</sub> )	$v_{g_8}$	=	-12  to  -18	
Geometry control electrode voltage	Vg7	=	1500 ±70	$V^{2}$ )
Interplate shield voltage	V <sub>g6</sub>	=	1500	V
Deflection plate shield voltage	$v_{g_5}$	=	1500	$V^{3}$ )
Astigmatism control electrode voltage	$v_{g_4}$	=	1500 <u>+</u> 70	V 4)
Focusing electrode voltage	$v_{g_3}$	=	375 to 625	V
First accelerator voltage	Vg2	=	1500	V
Control grid voltage for visual extinction of focused spot	$-v_{g_1}$	=	40 to 90	V
Deflection coefficient				
horizontal	$M_X$	=	8 to 11	V/cm
vertical	$M_{V}$	=	2.3 to 3.5	V/cm
Deviation of linearity of deflection		=	max. 2	% 5)
Geometry distortion			See note 6	
Useful scan				
horizontal		=	min. 100	mm
vertical		=	min. 60	mm
CIRCUIT DESIGN VALUES				
Focusing voltage $V_{g_3} =$	250 to 4	17	V per kV of	$V_{g_4}$
Control grid voltage for visual extinction of focused spot $-V_{g_1}$ =			V per kV of	
Deflection coefficient at $V_{gg(\ell)}/V_{g4} = 10$				-
	6.3 to 8	.4	V/cm per kV	of Var

horizontal  $M_X = 6.3 \text{ to } 8.4 \text{ V/cm per kV of V}_{g_4}$ vertical  $M_V = 1.53 \text{ to } 2.33 \text{ V/cm per kV of V}_{g_4}$ 

Control grid circuit resistance  $R_{g_1} = max$ . 1 M $\Omega$ 

Deflection plate circuit resistance  $R_{x}$ ,  $R_{y}$  = max. 50  $k\Omega$ 

Focusing electrode current at a beam current of max. 25  $\mu$ A I $_{g_2}$  = -25 to +25  $\mu$ A  $^7$ )

2)3)4)5)6)7) See page 6.

### LIMITING VALUES (Absolute max. rating system)

(	8 ,				
Final accolorator voltage	V	=	max.	16500	V
Final accelerator voltage	$V_{g_9(l)}$	=	min.	9000	V
Post deflection shield voltage	V	=	max.	2500	V
Tost defrection shield voltage	$v_{g_8}$	=	min.	1350	V
Geometry control electrode voltage	V.	=	max.	2500	V
decimently control electrode voltage	Vg7	=	min.	1350	V
Interplate shield voltage	$v_{g_6}$	=	max.	2500	V
interprate shiera voltage	* g6	=	min.	1350	V
Deflection plate shield voltage	$v_{g_5}$	=	max.	2500	V
Betteetion plate similar voltage	· g <sub>5</sub>	=	min.	1350	V
Astigmatism control electrode voltage	$v_{g_4}$	=	max.	2500	V
		=	min.	1350	V
Focusing electrode voltage	$v_{g_3}$	=	max.	2500	V
First accelerator voltage		=	max.	2500	V
Trist accelerator voltage	$V_{g_2}$	=	min.	1350	V
Control grid voltage					
negative	-VSI		iax.	200	V
positive	$v_{g_1}$	=	max.	0	V
Voltage between astigmatism electrode	$V_{g_A/x}$	=	max.	500	V
and any deflection plate	$V_{g_4/y}$	=	max.	500	V
Cathode to heater voltage					
cathode positive	$V_{+k/f}$	=	max.	200	V
cathode negative	V-k/f+	=	max.	125	V
Screen dissipation	$W_{\ell}$	=	max.	3	mW/cm <sup>2</sup>
Ratio $V_{g_9(l)}/V_{g_4}$	$V_{g_9(l)}/V_{g_4}$	=	max.	10	
Cathode current, average	$I_k$	=	max.	300	μΑ



<sup>1)</sup> To avoid damaging the dide consects the narrower end of the mu-metal shield should have an internal diameter of not less than 70 mm.

<sup>2)</sup> This tube is designed for optimum performance when operating at the ratio  $V_{go(1)}/V_{g_4}=10$ . Operation at other ratio may result in changes in deflection uniformity and geometry distortion. The geometry control electrode voltage should be adjusted for optimum performance. For any necessary adjustment its potential will be within the stated range.

 $<sup>^{3}</sup>$ ) This voltage should be equal to the mean x- and y plates potential.

<sup>4)</sup> The astigmatism control electrode voltage should be adjusted for optimum spot shape. For any necessary adjustment its potential will be within the stated range.

<sup>5)</sup> The sensitivity at a deflection of less than 75% of the useful scan will not differ from the sensitivity at a deflection of 25% of the useful scan by more than the indicated value.

<sup>6)</sup> A graticule, consisting of concentric rectangles of 100 mm x 60 mm and 98 mm x 58.2 mm is aligned with the electrical x axis of the tube. The edges of a raster will fall between these rectangles with optimum correction potentials applied.

<sup>7)</sup> Values to be taken into account for the calculation of the focus potentiometer.

# COMPANIES OF THE PARTY OF T


#### CORRECTION COILS


The D13-26.. is provided with a coil unit consisting of a pair of coils for:

- a. Correction of the orthogonality of the x and y traces (which means that at the centre of the screen the angle between the x and y traces can be made exactly  $90^{\rm o}$ ).
- b. Vertical shift of the scanned area.

#### DETAIL DRAWING OF COIL UNIT

Dimensions in mm

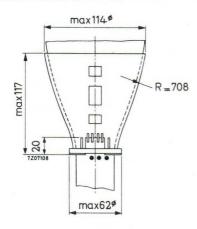

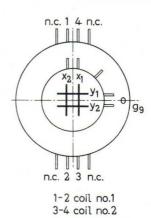


The currents required under typical operating conditions, the tube being screened by a mu-metal shield closely surrounding the coils (e.g. 55555), are max. 7 mA per degree of angle correction and max. 4 mA per mm of shift. If no such shield is used these values have to be multiplied by a factor k (1 < k < 2), the value of which depends on the diameter of the shield and approaches 2 for the case no shield is present.

The D.C. resistance is approx. 180  $\Omega$  per coil.

When designing the supply circuit for these coils it should be considered that the maximum current required in either coil can be 34~mA.

### Circuit diagrams


A suitable circuit permitting independent controls of orthogonality correction and vertical shift is given in fig.1.

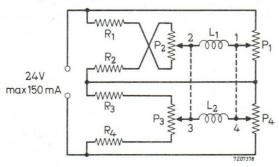

P<sub>1</sub>, P<sub>4</sub> : Potentiometers 220  $\Omega$ , 3 Watt, ganged P<sub>2</sub>, P<sub>3</sub> : Potentiometers 150  $\Omega$ , 2 Watt, ganged R<sub>1</sub>, R<sub>2</sub>, R<sub>3</sub>, R<sub>4</sub> : Resistors 33  $\Omega$ , 0,5 Watt

Fig. 1

The dissipation in the potentiometers can be reduced considerably if the requirement of independent controls is dropped (see fig. 2).

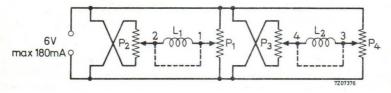


P<sub>1</sub>, P<sub>2</sub> : Potentiometers, 220  $\Omega$ , 1 Watt, ganged P<sub>3</sub>, P<sub>4</sub> : Potentiometers, 220  $\Omega$ , 1 Watt, ganged

Fig. 2

A further reduction of the dissipation can be obtained by inserting a commutator for each coil (see fig. 3).

The procedure of adjustment will then become more complicated, but it should be kept in mind that a readjustment is necessary only when the tube has to be replaced.

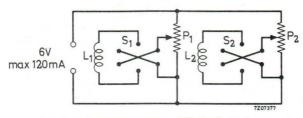

 $P_1$ ,  $P_2$ : Potentiometers, 500  $\Omega$ , 0,5 Watt

S<sub>1</sub>, S<sub>2</sub>: Commutators


Fig. 3

For the adjustment of the currents the following procedure is recommended:

- a. With the tube fully scanned in the vertical direction the scanned area must be shifted so that the useful vertical scan on either side of the geometric centre of the screen meets the published value of 30 mm min. With the circuit according to fig.1 this is done by means of the ganged potentiometers  $P_1$  and  $P_4$ .
- b. Adjustment of orthogonality by means of the ganged potentiometers  $P_2$  and  $P_3$  in fig.1. A slight readjustment of  $P_1$  and  $P_4$  may be necessary afterwards.

With a circuit according to fig. 2 or 3 these corrections have to be performed by means of successive adjustments of the currents in the coils.


The most convenient deflection signal is a square waveform permitting an easy and fairly accurate check of orthogonality.

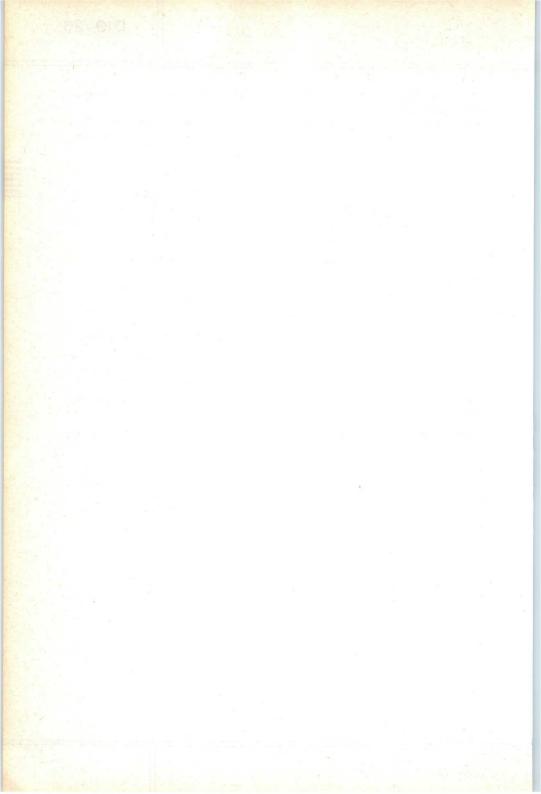


The D13-26../01 is equivalent to the D13-26.. but features an internal graticule. This graticule can be illuminated.

### MECHANICAL DATA

Dimensions in mm

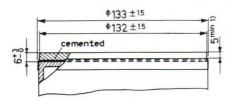

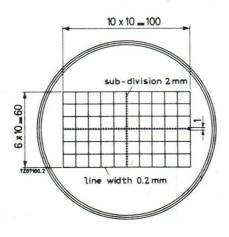

Maximum angle between x-trace and x-axis of the graticule

±5°


<sup>1)</sup> Clear area for light conductor.

#### ALIGNMENT

In order to align the x-trace and the x-axis of the graticule an image rotating coil may be used. This coil should be positioned at one third of the cone length, seen from the face end, and can be attached to the inner surface of the mu-metal shield. Under typical operating conditions maximum 90 ampere-turns are required for alignment.

#### ILLUMINATION OF THE GRATICULE

To illuminate the internal graticule a light conductor (e.g. of perspex) should be used. In order to achieve the most efficient light conductance, the holes for the lamps and the edge adjacent to the tube should be polished, and the distance between the perspex plate and the tube should be as small as possible. It is advisable to apply reflective material to the outer circumference and, if possible, also to the upper and lower faces of the light conductor. The thickness of the conductor should not exceed 3 mm, and its position relative to the frontplate of the tube should be adjusted for optimum illumination of the graticule lines.

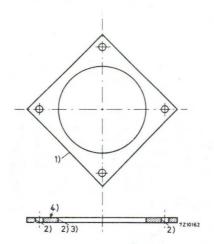



<sup>1)</sup> Reflective material.

<sup>2)</sup> Polished.

<sup>3)</sup> Close and constant distance to front plate of tube.

It is essential that the light conductor and the front plate of the tube are in plane.

<sup>4)</sup> If possible reflective material.

13 cm diameter flat faced short oscilloscope tube (max. 35 cm) with post-deflection acceleration by means of a helical electrode. The tube is provided with deflection blanking.

QUICK REFERENCE	DATA			
Final accelerator voltage	Vg7(1)	=	3000	V
Display area		8 0	em x fu	ll scan
Deflection coefficient, horizontal	$M_X$	=	24	V/cm
vertical	$M_y$	=	11.5	V/cm

### SCREEN

	Colour	Persistence
D13-27GH	green	medium short

Useful screen diameter

114 mm min.

Useful scan at  $V_{g_7(\ell)}/V_{g_5} = 2$ 

horizontal

full scan

vertical

min.

80 mm

The useful scan may be shifted vertically to a max. of 4 mm with respect to the geometric centre of the faceplate.

#### HEATING

Indirect by A.C. or D.C.; parallel supply


Heater voltage

Heater current

 $I_f = 300 \text{ mA}$ 

### MECHANICAL DATA

Dimensions in mm

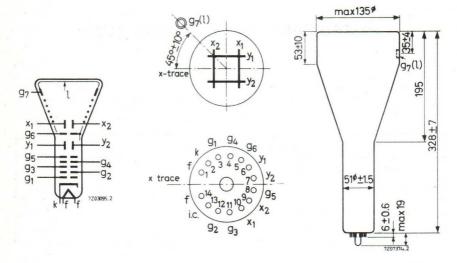

### Mounting position: any

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

Base 14 pin all glass

### Dimensions and connections

	Overall length (also with socket type 55566)	max.	350	mm
	Face diameter	max.	135	mm
N	et weight	approx.	680	g

### Accessories

Socket (supplied with tube)	type	55566
Final accelerator contact connector	type	55563
Mu metal shield	type	55557

2

#### **CAPACITANCES**

$\mathbf{x}_1$ to all other elements except $\mathbf{x}_2$	$C_{x_1}$	$(x_2) =$	4.5	pF
$\mathbf{x}_2$ to all other elements except $\mathbf{x}_1$	$C_{x_2}$	$(x_1) =$	4.5	pF
$\mathbf{y}_1$ to all other elements except $\mathbf{y}_2$	$c_{y_1}$	$(y_2) =$	5	pF
$\mathbf{y}_2$ to all other elements except $\mathbf{y}_1$	$c_{y_2}$	(y <sub>1</sub> ) =	5.5	pF
$x_1$ to $x_2$	$C_{x_1}$	x <sub>2</sub> =	2.5	pF
$y_1$ to $y_2$	$c_{y_1}$	у2 =	1.2	pF
Grid No.1 to all other elements	$c_{g_1}$	=	5.5	pF
Cathode to all other elements	$C_k$	= =	5	pF
Grid No.3 to all other elements	$C_{g_3}$	=	10	pF

FOCUSING electrostatic

DEFLECTION double electrostatic

x plates symmetrical y plates symmetrical

If use is made of the full deflection capabilities of the tube the deflection plates will intercept part of the electron beam; hence a low impedance deflection plate drive is desirable.

Angle between x and y traces

 $90^{\circ} \pm 1^{\circ}$ 

### LINE WIDTH

Measured with the shrinking raster method in the centre of the screen.

Final accelerator voltage	Vg7(1)	=	3000	V
Astigmatism control electrode voltage	$v_{g_5}$	=	1500	$V^2$ )
First accelerator voltage	$v_{g_2}$	=	1500	V
Beam current	Ig7(1)	=	10	$\mu A$
Line width	1.w.	=	0.25	mm

#### HELIX

Post deflection accelerator helix resistance The helix is connected between  $g_7(\ell)$  and  $g_6$ 

min. 50  $M\Omega$ 

<sup>2)</sup> See page 5

### TYPICAL OPERATING CONDITIONS

Final accelerator voltage	Vg7(1)	=		3000	V
Geometry control electrode voltage	$v_{g_6}$	=	1500	± 75	V 1)
Astigmatism control electrode voltage	$V_{g_5}$	=	1500	± 75	$V^2$ )
Focusing electrode voltage	$v_{g_4}$	=	300 to	550	V
Deflection blanking electrode voltage	$v_{g_3}$	=		1500	V
Deflection blanking control voltage	$\Delta V_{g_3}$	=	max.	-60	$V^3$ )
First accelerator voltage	$v_{g_2}$	=		1500	V
Control grid voltage for visual extinction of focused spot	$v_{g_1}$	=	-38 to	-135	V
Deflection coefficient					
horizontal	$M_X$	=	21 to	27	V/cm
vertical	$M_{V}$	=	9.8 to	12.2	V/cm
Deviation of linearity of deflection		=	max.	2	$\%$ $^4)$
Geometry distortion			See no	te 5	
Useful scan					
horizontal			full sc	an	
vertical		=	min.	80	mm

### CIRCUIT DESIGN VALUES

Focusing voltage	$v_{g_4}$	=	200 to	370	V per kV of V <sub>g5</sub>
Control grid voltage for visual extinction of focused spot	$-v_{g_1}$	=	25 to	90	V per kV of V <sub>g2</sub>
Deflection coefficient at					
$V_{g_7(\ell)}/V_{g_5} = 2$					
horizontal	$M_X$	=	14 to	18	V/cm per kV of Vg5
vertical	$M_y$	=	6.5 to	8.2	V/cm per kV of Vg5
Control grid circuit resistance	$R_{g_1}$	Ξ	max.	1.5	MΩ
Deflection plate circuit					
resistance	$R_{x}, R_{y}$	=	max.	50	kΩ
Focusing electrode current	$I_{g_4}$	=	-15 to	+10	$\mu A^{6}$ )
Notes see page 5					

LIMITING VALUES (Absolute max. rat	ing system)				
Final accelerator voltage	Vg7(1)	=	max. min.	3300 1800	V
Geometry control electrode voltage	$V_{g6}$	=	max.	1700	V
Astigmatism control electrode voltage	$v_{g_5}$	=	max. min.	1700 1200	V V
Focusing electrode voltage	$v_{g_4}$	=	max.	1200	V
Deflection blanking electrode voltage	$v_{g_3}$	=	max.	1700	V
First accelerator voltage	$v_{g_2}$	=	max.	1700	V
Control grid voltage					
negative	$-v_{g_1}$	=	max.	200	V
positive	$-v_{g_1}$	=	min.	0	V
Voltage between astigmatism control					
electrode and any deflection plate	$V_{g_5/x}$	=	max.	500	V
	$V_{g_5/y}$	=	max.	500	V
Screen dissipation	We	=	max.	3	mW/cm <sup>2</sup>
Ratio Vg7(1)/Vg5	Vg7(1)/Vg5	=	max.	2	
Cathode current, average	Ik	=	max.	300	$\mu$ A

 $<sup>^1)</sup>$  This tube is designed for optimum performance when operating at the ratio  $v_{g\,7}(\ell)/v_{g\,5}$  = 2. Operation at other ratio may result in changes in deflection uniformity and geometry distortion. The geometry control electrode voltage should be adjusted for optimum performance. For any necessary adjustment its potential will be within the stated range.


<sup>2)</sup> The astigmatism control electrode voltage should be adjusted for optimum spot shape. For any necessary adjustment its potential will be within the stated range.

<sup>3)</sup> For beam blanking of a beam current of 10  $\mu A$ .

<sup>4)</sup> The sensitivity at a deflection of less than 75% of the useful scan will not differ from the sensitivity at a deflection of 25% of the useful scan by more than the indicated value.

<sup>5)</sup> A graticule, consisting of concentric rectangles of 100 mm x 60 mm and 97 mm x 58 mm is aligned with the electrical x axis of the tube. The edges of a raster will fall between these rectangles with optimum correction potentials applied.

<sup>6)</sup> Values to be taken into account for the calculation of the focus potentiometer.

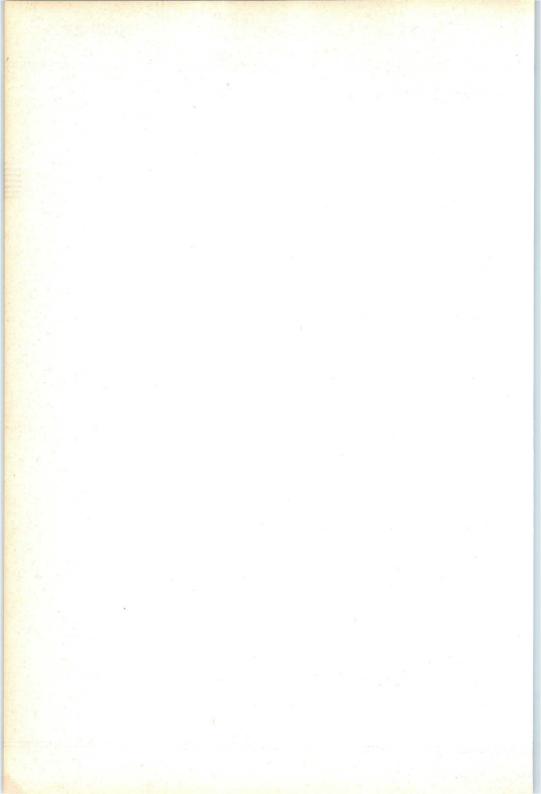

# INSTRUMENT CATHODE-RAY TUBE

Oscilloscope tube with flat face, post deflection acceleration by means of a helical electrode and metal-backed screen. The tube has a delay line system for vertical deflection and is designed for observation and measurement of high frequency (2500 MHz) phenomena. The optical rise time is 150 ps.

QUICK REFEREN	CE DATA		
Final accelerator voltage	$V_{g_8(\ell)}$	24	kV
Display area		20 x 63	mm <sup>2</sup>
Deflection coefficient, horizontal	$M_X$	32	V/cm
vertical	$M_y$	10	V/cm

#### SCREEN

	colour	persistence
D13-49BE	blue	medium short

Useful screen diameter

min. 114 mm

Useful scan at  $V_{gg}/V_{g4} = 6$ .

horizontal

min. 60 mm

vertical

typical 20 mm min. 17 mm

The useful scan may be found shifted vertically to a max. of  $10~\mathrm{mm}$  with respect to the geometric centre of the faceplate. The vertical useful scan will be at least  $8~\mathrm{mm}$  in either direction from the position of the undeflected spot, with a total of at least  $17~\mathrm{mm}$ . A positive voltage on the vertical deflection system will deflect the spot towards pin No. 7.

**HEATING:** Indirected by A.C. or D.C.; parallel supply

Heater voltage


 $V_f$  6.3 V


Heater current


If 300 mA


# MECHANICAL DATA


#### Dimensions in mm

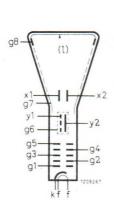

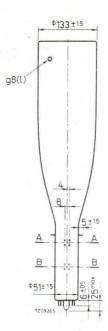

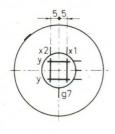


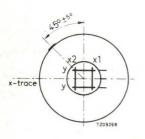

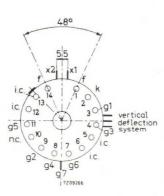

MECHANICAL DATA (continued)

Dimensions in mm

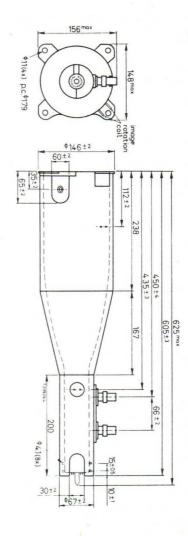



#### MECHANICAL DATA (continued)

Mounting position: any

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

Base: 14 pin all glass

Dimensions and connections

Overall length (mu-metal shield included) max. 625 mm

Face diameter max. 134.5 mm

Net weight approx. g

Accessories

Socket (supplied with tube) 55566

Final accelerator contact connector 55563

Side contact connector 55561

Mu-metal shield supplied with tube

Input and output connectors of the delay

line for vertical deflection UG832, type "C", 100

CAPACITANCES

 $x_1$  to all other elements except  $x_2$   $C_{x_1(x_2)}$  3.0 pF

 $egin{array}{lll} x_2 \ {
m to} \ {
m all} \ {
m other} \ {
m elements} \ {
m except} \ {
m x_1} \ {
m to} \ {
m x_2} \ {
m to} \ {
m x_2} \ {
m (x_1)} \ {
m C_{x_1 x_2}} \ {
m 2.7} \ {
m pF} \ {
m other} \ {
m$ 

Control grid to all other elements  $C_{\sigma}$ , 5.0 pF

Cathode to all other elements  $C_k$  3.5 pF

FOCUSING Electrostatic

DEFLECTION

Horizontal Electrostatic, symmetrical

Vertical Delay-line system, asymmetrical

Characteristic impedance of the

onaracteristic impedance of the

delay-line system 100  $\Omega$ 

V.S.W.R. up to 1000 MHz max. 1.25 1)

Bandwidth 2500 MHz <sup>2</sup>)

Rise time (optical) 150 ps 3)

Angle between x and y traces 90 + 1 °

HELIX

Post deflection accelerator helix resistance min.  $300 \text{ M}\Omega$ 

# TYPICAL OPERATING CONDITIONS

Final accelerator voltage		$V_{g_8}(\ell)$		24	kV
Geometry control electrode voltage	,	$V_{g_7}^{80}$	$4000 \pm$	200	V
Vertical deflection system shield voltage		$V_{g_6}^{s_7}$		4000	$V^{4})^{7}$
Beam centring electrode voltage		V	$4000 \pm$	80	$V^{5}$ )
Astigmatism control electrode voltage		$v_{g_4}^{g_5}$	$4000 \pm$	200	V 6)
Focusing electrode voltage		V	500 to	1200	V
First accelerator voltage		$v_{g_2}^{g_3}$		4000	$V^7$ )
Control grid voltage for extinction		82			
of focused spot		$V_{\sigma_1}$	-90 to	-300	V
Deflection coefficient, horizontal		MX		32	V/cm
vertical		$M_V$		10	V/cm
Useful scan, horizontal		3 9	min.	60	mm <sup>8</sup> )
montinal			typ.	20	mm
vertical			min.	17	mm

# LIMITING VALUES (Absolute max. rating system)

Final accelerator voltage	$v_{g_8}(\ell)$	max. min.	25 10	kV kV	
Geometry control electrode voltage	$v_{g_7}$	max.	4400	V	
Vertical deflection system shield voltage	Vg <sub>6</sub>	max.	4400	V	
Beam centrign electrode voltage	Vg5	max.	4400	V	
Asigmatism control pleatwade veltage		max.	4400	V	
Asigmatism control electrode voltage	$v_{g_4}$	min.	2400	V	
Focusing electrode voltage	$v_{g_3}$	max.	1500	V	
First accelerator voltage		max.	4400	V	
First accelerator voltage	$v_{g_2}$	min.	2400	V	
Control grid voltage, peak	-Vgln	max.	350	V	
Modulation voltage Cathode to heater voltage,	$V_{g_1}^{V_{g_1}}$	max.	30	V <sup>9</sup> )	
cathode positive	+Vkf	max.	200	V	
cathode negative	-V <sub>kf</sub>	max.	125	V	
Ratio Vg8(1)/Vg4	Vg8(1)/Vg4	max.	10		
Ratio $V_{g_2}^{88}/V_{g_4}^{84}$	$V_{g_2}^{80}/V_{g_4}^{84}$	max.	1		

#### WARNING

When in operation this tube produces X-rays which may constitute a health hazard unless the tube is adequately shielded.

Notes see page 6

- 1) The V.S.W.R. is approximately 1.5 at 1500 MHz and 2 at 2500 MHz, with a max, of 2.5.
- 2) 2500 MHz is the frequency at which the vertical sensitivity is 3 dB down with respect to that at D.C.
- 3) The rise time is defined to be the time interval between 10% and 90% of the final deflection amplitude, when a step function signal is applied to the vertical deflection system. In order to avoid errors due to the angle of traces, two measurements are taken using a positive going and a negative going step function of equal amplitude and rise time. The rise time of the tube will be taken to be the arithmetric mean of the two values.
- 4) A "by-pass" is mounted within the mu-metal shield. With this device a vertical beam shift can be obtained.
- 5) The beam centring electrode voltage should be adjusted for equal deflection defocusing and deflection linearity is the x-direction at either side of the electrical centre of the tube.
- 6) The astigmatism control electrode voltage should be adjusted for optimum spot shape.
- 7) The delay-line deflection system has been designed for an accelerator voltage of 4000 V. Deviation from this value will cause deterioration of the bandwidth and rise time. The potential of g2 should not vary during the deflection of the beam, otherwise variations in the brightness of the display may occur.
- 8) The image can be rotated by means of a coil. With a current of  $\pm$  50 mA through this coil (R = 460  $\Omega$ ) an image rotation of approx.  $\pm$  4° can be obtained.
- 9) For continuous service the grid no. 1 modulation voltage (difference between applied voltage and extinction voltage) should not exceed the stated value.



# INSTRUMENT CATHODE-RAY TUBE

Oscilloscope tube with rectangular 13 cm diagonal flat face and metal-backed screen, provided with internal graticule. The high sensitivities of this mesh tube, together with the sectioned y-deflection plates, render the tube suitable for transistorized oscilloscopes for frequencies up to 100-250~MHz.

	QUICK REFE	RENCE	DATA		
Final accelerator volta	age	×	Vgg(l)	15	kV
Display area				100 x 60	$mm^2$
Deflection coefficient, horizontal		$M_X$	9.9	V/cm	
	vertical		$M_y$	3	V/cm

#### **SCREEN**

	colour	persistence
D13-450GH/01	green	medium short

Useful screen dimensions

min. 100 x 60 mm<sup>2</sup>

Useful scan at  $V_{gq}(\ell)/V_{g_4} = 10$ 

horizontal

100 mm

vertical

min. 60 mm

min.

The scanned raster can be centered and aligned with the internal graticule by means of correction coils mounted on the tube (see page 6). For illumination of the internal graticule see page 8.

**HEATING:** Indirect by A.C. or D.C.; parallel supply

Heater voltage


V<sub>f</sub> 6.3 V


Heater current


If 300 m


#### → MECHANICAL DATA

Dimensions in mm

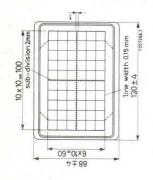

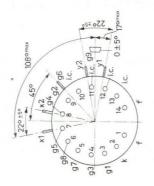

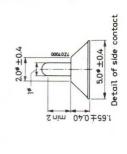

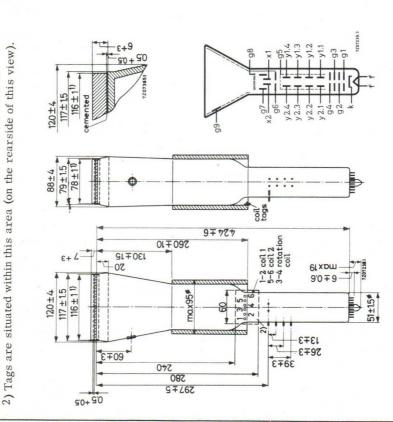

#### MECHANICAL DATA (continued)

Mounting position: any

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

#### Dimensions and connections

See also outline drawing

Overall length (socket and front glass plate inclusive)	max. 459 mm
Face dimensions	max. 124x92 mm <sup>2</sup>
Net weight	approx. 1200 g
Base	14-pin all glass

#### Accessories

Socket	type	55566
Final accelerator contact connector	type	55563
Side contact connector	type	55561
Mu-metal screen	type	55568

#### CAPACITANCES

$\mathbf{x}_1$ to all other elements except $\mathbf{x}_2$	$C_{x_1(x_2)}$	4.8	pF
$x_2$ to all other elements except $x_1$	$C_{\mathbf{x}_2}(\mathbf{x}_1)$	4.8	pF
y <sub>1.1</sub> to all other elements except y <sub>2.1</sub>	Cy1.1(y2.1)	1.2	pF
$x_1$ to $x_2$	$C_{x_1x_2}$	2.5	pF
y1.1 to y2.1	<sup>C</sup> y1.1 <sup>y</sup> 2.1	0.8	pF
Control grid to all other elements	$C_{g_1}$	6	pF
Cathode to all other elements	Ch	5	pF

FOCUSING	electrostatic
rucusing	Cicciiostatic

DEFLECTION	double electrostatic
x plates	symmetrical
v plates	symmetrical

If use is made of the full deflection capabilities of the tube the deflection plates will intercept part of the electron beam; hence a low impedance deflection plate drive is desirable.

Angle between x and y traces 90° (see page 6: "Correction Coils")

#### LINE WIDTH

Measured with the shrinking raster method in the centre of the screen under typical operating conditions, adjusted for optimum spot size at a beam current I  $_\ell$  = 10  $\mu A$ .

Line width 1.w. 0.40 mm

#### TYPICAL OPERATING CONDITIONS

TITIONE OF ENTITIES CONDITIONS				
Final accelerator voltage	$V_{g_9}(l)$	<u>,</u> 1	15000	V
Post deflection shield voltage (mesh)	- 1			
w.r.t. V <sub>g7</sub>	$V_{g_8/g_7}$	-12 to	-18	V
Geometry control electrode voltage	$V_{g_7}$	$1500 \pm$	70	$V^{1}$ )
Interplate shield voltage	$v_{g_6}$		1500	$V^2$ )
Deflection plate shield voltage	$v_{g_5}$		1500	$V^2$ )
Astigmatism control electrode voltage	$v_{g_4}$	$1500 \pm$	50	$V^3$ )
Focusing electrode voltage	$v_{g_3}$	400 to	550	V
First accelerator voltage	$V_{g_2}$		1500	V
Control grid voltage for visual extinction				
of focused spot	$v_{g_1}$	<b>-</b> 40 to	-100	V
Deflection coefficient, horizontal	$M_{\mathbf{x}}$		9.9	
vertical	***X	max.	11	V/cm
	$M_V$		3	V/cm
	y	max.	3.3	V/cm
Deviation of linearity of deflection		max.	2	% <sup>4</sup> )
Geometry distortion		see n	ote 5	
Useful scan, horizontal			100	mm
vertical			60	mm

<sup>1)</sup> This tube is designed for optimum performance when operating at the ratio  $V_{g_9}(\ell)/V_{g_4}$  = 10. Operation at other ratio may result in changes in deflection uniformity and geometry distortion. The geometry control electrode voltage should be adjusted for optimum performance.

For any necessary adjustment its potential will be within the stated range.

2) This voltage should be equal to the mean x- and y plates potential.

With optimum correction potentials applied the edges of a raster will fall between these rectangles.

<sup>3)</sup> The astigmatism control electrode voltage should be adjusted for optimum spot shape. For any necessary adjustment its potential will be within the stated range.

<sup>4)</sup> The sensitivity at a deflection of less than 75% of the useful scan will not differ from the sensitivity at a deflection of 25% of the useful scan by more than the indicated value.

<sup>5)</sup> A graticule, consisting of concentric rectangles of 100 mm x 60 mm and 98 mm x 58.2 mm is aligned with the electrical x axis of the tube.

# LIMITING VALUES (Absolute max. rating system)

			1 ( 500	V = 1
Final accelerator voltage	$V_{g_9}(l)$	max.	16500 9000	V
Post deflection shield voltage	$v_{g_8}$	max.	2400	V
Geometry control electrode voltage	$v_{g_7}$	max.	2400	V
Interplate shield voltage	$v_{g_6}$	max. min.	2400 1350	V V
Deflection plate shield voltage	$v_{g_5}$	max.	2400	V
Astigmatism control electrode voltage	$v_{g_4}$	max. min.	2400 1350	V V
Focusing electrode voltage	$v_{g_3}$	max.	2400	V
First accelerator voltage	$v_{g_2}$	max. min.	1800 1350	V V
Control grid voltage,				
negative	-Vg1	max.	200	V
positive	$v_{g_1}$	max.	0	V
Cathode to heater voltage,				
cathode positive	$v_{kf}$	max.	200	V
cathode negative	-V <sub>kf</sub>	max.	125	V
Voltage between astigmatism control electrode and any deflection plate	V <sub>g4</sub> /x V <sub>g4</sub> /y	max.	500 500	V V
Screen dissipation	We	max.	3	$mW/cm^2$
Ratio V <sub>g9</sub> (1)/V <sub>g4</sub>	$V_{g_9}(l)/V_{g_4}$	max.	10	
Average cathode current	Ik	max.	300	$\mu$ A

#### CORRECTION COILS

The D13-450../01 is provided with a coil unit consisting of:

- 1. a pair of coils for
  - a. correction of the orthogonality of the x and y traces (which means that the angle between the x and y traces at the centre of the screen can be made exactly 90°).
  - b. vertical shift of the scanned area.
- a single coil for image rotation (aligning the x trace with the x lines of the graticule).

#### Orthogonality and shift

The currents required under typical operating conditions are max. 4 mA per degree of angle correction and max. 2 mA per millimeter of shift; the maximum current required for both purposes taken together does not exceed 30 mA.

These values apply to a tube operating with a mu metal shield closely surrounding the coils.


If no such shield is used they have to be multiplied by a factor K (1<K<2) the value of which depends on the dimensions of the shield and approaches 2 for the case no shield is present.

The D.C. resistance of each coil is approx. 220  $\Omega$ .

#### Image rotation

The image rotation coil is concentrically wound. Under typical operating conditions a current of max. 45 mA will be required for complete correction. The D.C. resistance of this coil is approx. 550  $\Omega$ .


# Circuit diagrams

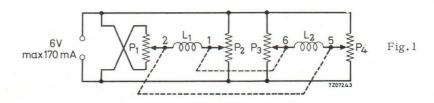

 $P_1,\ P_4$  potentiometers 220  $\Omega,\ 1$  Watt; ganged  $P_2,\ P_3$  potentiometers 220  $\Omega,\ 1$  Watt; ganged

With the above circuit almost independent control for shift and angle correction is achieved. This facilitates the correct adjustment to a great extent.

The dissipation in the potentiometers can be reduced considerably if the requirement of independent controls is dropped (see fig. 2)

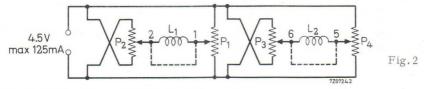

 $P_1$ ,  $P_2$  potentiometers 220  $\Omega$ , 1 watt; ganged

 $P_3$ ,  $P_4$  potentiometers 220  $\Omega$ , 1 watt; ganged

A further reduction of the dissipation can be obtained by providing a commutator for each coil (see circuit fig.3).

The procedure of adjustment will then become more complicated but it should be kept in mind that a readjustment is necessary only when the tube has to be replaced.

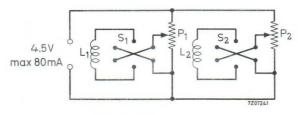


Fig. 3

 $P_1$ ,  $P_2$  potentiometers, 220  $\Omega$ , 1 Watt

S<sub>1</sub>, S<sub>2</sub> commutators

A suitable circuit for the image rotating coil is given in fig.4.

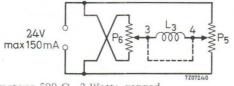


Fig.4

 $P_5$ ,  $P_6$  potentiometers 500  $\Omega$ , 3 Watt; ganged

The following procedure of adjustment is recommended


- a. Align the x trace with the graticule by means of the image rotating coil.
- b. With the tube fully scanned in the vertical direction, the image has to be shifted so that the graticule is fully covered. With the circuit according to fig.1 this is done by means of the ganged potentiometers P<sub>1</sub> and P<sub>4</sub>.
- c. Adjustment of orthogonality by means of the ganged potentiometers  $P_2$  and  $P_3$ . A slight readjustment of  $P_1$  and  $P_4$  may be necessary afterwards.
- d. Readjustment of the image rotation if necessary.

With a circuit according to fig.2 or 3 these corrections have to be performed by means of successive adjustments of the currents in the coils.

The most convenient deflection signal is a square wave form permitting an easy and fairly accurate visual check of orthogonality.

#### ILLUMINATION OF THE GRATICULE

To illuminate the internal graticule a light conductor (e.g. of perspex) should be used. In order to achieve the most efficient light conductance, the holes for the lamps and the edge adjacent to the tube should be polished, and the distance between the perspex plate and the tube should be as small as possible. It is advisable to apply reflective material to the outer circumference and, if possible, also to the upper and lower faces of the light conductor. The thickness of the conductor should not exceed 3 mm, and its position relative to the frontplate of the tube should be adjusted for optimum illumination of the graticule lines.

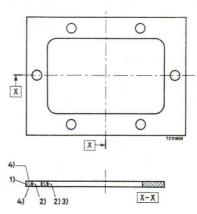

<sup>1)</sup> Reflective material.

<sup>2)</sup> Polished.

<sup>3)</sup> Close and constant distance to front plate of tube. It is essential that the light conductor and the front plate of the tube are in plane.

<sup>4)</sup> If possible reflective material

# INSTRUMENT CATHODE-RAY TUBE

13 cm diameter flat faced monoaccelerator oscilloscope tube primarily intended for use in inexpensive oscilloscopes and read-out devices.

QUICK R	EFERI	ENCE DATA		
Accelerator voltage		$V_{g_2,g_4,g_5(\ell)}$	2000	V
Display area			100 x 80	$mm^2$
Deflection coefficient, horizontal		$M_{x}$	31.3	V/cm
vertical		$M_{V}$	14.4	V/cm

#### SCREEN

*	colour	persistence
D13-480GH D13-480GM	green yellowish green	medium short long
D13-480GP	bluish green	medium short

Useful screen diameter

min. 114 mm

Useful scan

horizontal

min. 100 mm

80

mm

min.

The useful scan may be shifted vertically to a max. of 6 mm with respect to the geometric centre of the faceplate.


**HEATING**: Indirect by A.C. or D.C.; parallel supply


Heater voltage Heater current


vertical

 $\frac{V_{\mathrm{f}}}{I_{\mathrm{f}}}$  6.3 V  $_{\mathrm{mA}}$ 

# MECHANICAL DATA (Dimensions in mm)

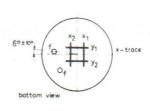

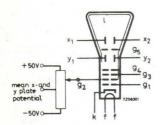

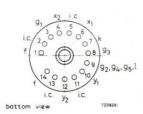



## Mounting position: any

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

#### Dimensions and connections

See also outline drawing

Overall length	max.	310	mm

Face diameter max. 135 mm

Base 14 pin all glass

Net weight	approx.	650	g
------------	---------	-----	---

Accessories

Socket (supplied with tube)	type	55566
Mu-metal shield	type	55580

$x_1$ to all other elements except $x_2$	$C_{x1(x2)}$	4	pF	
$\mathbf{x}_2$ to all other elements except $\mathbf{x}_1$	$C_{x2(x1)}$	4	pF	
$\mathbf{y}_1$ to all other elements except $\mathbf{y}_2$	$C_{y1(y2)}$	3.5	pF	
$\mathrm{y}_2$ to all other elements except $\mathrm{y}_1$	$C_{y2(y1)}$	3	pF	
$x_1$ to $x_2$	$C_{x1x2}$	1.6	pF	
$y_1$ to $y_2$	$C_{y1y2}$	1.1	pF	
Control grid to all other elements	$C_{g1}$	5.5	pF	
Cathode to all other elements	$C_{\mathbf{k}}$	4	pF	

FOCUSING

electrostatic

DEFLECTION

double electrostatic

x plates

symmetrical

y plates

symmetrical

If use is made of the full deflection capabilities of the tube the deflection plates will intercept part of the electron beam, hence a low impedance deflection plate drive is desirable.

Angle between x and y traces

90 + 1 °

#### LINE WIDTH 3)

Measured with the shrinking raster method in the centre of the screen under typical operating conditions, adjusted for optimum spot size at a beam current I( = 10  $\mu$ A.1)

Line width

1.w.

0.30

mm

b) under these conditions, but no raster, the deflection plate voltages should be changed to

 $\rm V_{y1}$  =  $\rm V_{y2}$  = 2000 V;  $\rm V_{x1}$  = 1300 V;  $\rm V_{x2}$  = 1700 V, thus directing the total beam current to x2.

Measure the current on  $x_2$  and adjust  $V_{g1}$  for  $I_{x2}$  = 10  $\mu A$  (being the beam current  $I_0$ )

c) set again for the conditions under a), without touching the  $\rm V_{g1}$  control. Now a raster display with a true 10  $\mu\rm A$  screen current is achieved.

d) focus optimally in the centre of the screen (do not adjust the astigmatism control) and measure the line width.

3) See page 4

<sup>1)</sup> As the construction of this tube does not permit a direct measurement of the beam current, this current should be determined as follows:

a) under typical operating conditions, apply a small raster display (no overscan), adjust  $\rm V_{g1}$  for a beam current of approx. 10  $\rm \mu A$  and adjust  $\rm V_{g3}$  and  $\rm V_{g2}, g4, g5, \ell$  for optimum spot quality at the centre of the screen.

#### TYPICAL OPERATING CONDITIONS 3)

Accelerator voltage	$V_{g_2,g_4,g_5,\ell}$	2000	V
Astigmatism control voltage	$\Delta V_{g_2,g_4,g_5,\ell}$	$\pm 50$	V 1)
Focusing electrode voltage	$v_{g_3}$	220 to 370	V
Control grid voltage for visual extinction of focused spot	$v_{g_1}$	max65	V
Grid drive for $10~\mu\mathrm{A}$ screen current		approx.10	V
Deflection coefficient, horizontal	$M_X$	31.3 max. 33	V/cm V/cm
vertical	My	14.4 max. 15.5	V/cm V/cm
Deviation of linearity of deflection		max. 1	% <sup>2</sup> )
Geometry distortion		see note 4	
Useful scan, horizontal		max. 100	mm
vertical		min. 80	mm
LIMITING VALUES (Absolute max. rating sys	stem)		
Accelerator voltage	$v_{g_2,g_4,g_5,l}$	max. 2200 min. 1500	V V
Focusing electrode voltage	$V_{g_3}$	max. 2200	V
Control grid voltage, negative	-V <sub>g1</sub>	max. 200 min. 0	V V

Vkf

 $-V_{kf}$ 

Wo

Cathode to heater voltage

Grid drive, average

Screen dissipation

max. 125 V max. 125 V

max.

20 V

max.  $3 \text{ mW/cm}^2$ 

<sup>1)</sup> All that will be necessary when putting the tube into operation is to adjust the astigmatism control voltage once for optimum spot shape in the screen centre. The control voltage will always be in the range stated, provided the mean x and certainly the mean y plate potential was made equal to  $V_{g_2,g_4,g_5,\ell}$  with zero astigmatism correction.

<sup>2)</sup> The sensitivity at a deflection of less than 75% of the useful scan will not differ from the sensitivity at a deflection of 25% of the useful scan by more than the indicated value.

<sup>3)</sup> The mean x and certainly the mean y plate potential should be equal to  $V_{g2}$ ,  $g_4$ ,  $g_5$ ,  $\ell$  with astigmatism adjustment set to zero.

<sup>4)</sup> A graticule, consisting of concentric rectangles of 70 mm x 85 mm and 68.8 mm x 83 mm as aligned with the electrical x-axis of the tube. The edges of a raster will fall between these ractangles, with optimum correction potentials applied.

# **INSTRUMENT CATHODE-RAY TUBE**

 $13~\mathrm{cm}$  diameter flat faced monoaccelerator oscilloscope tube with low heater consumption.

QUICK REFERENCE DATA			
Accelerator voltage	Vg2,g4,g5(1)	2000	V
Display area		100 x 80	$mm^2$
Deflection coefficient, horizontal	$M_{\rm X}$	31.3	V/cm
vertica	$M_{\mathbf{y}}$	14.4	V/cm

The D13-481.. is equivalent to the type D13-480.. except for the following:

**HEATING:** Indirect by A.C. or D.C.; parallel

Heater voltage

Heater current

Vf	6.3	V
$I_f$	95	mA

**LIMITING VALUES** (Absolute max. rating system)

Cathode to heater voltage

Cathode positive

V+k/f-


max. 100 V

Cathode negative

V-k/f+

max. 15 V



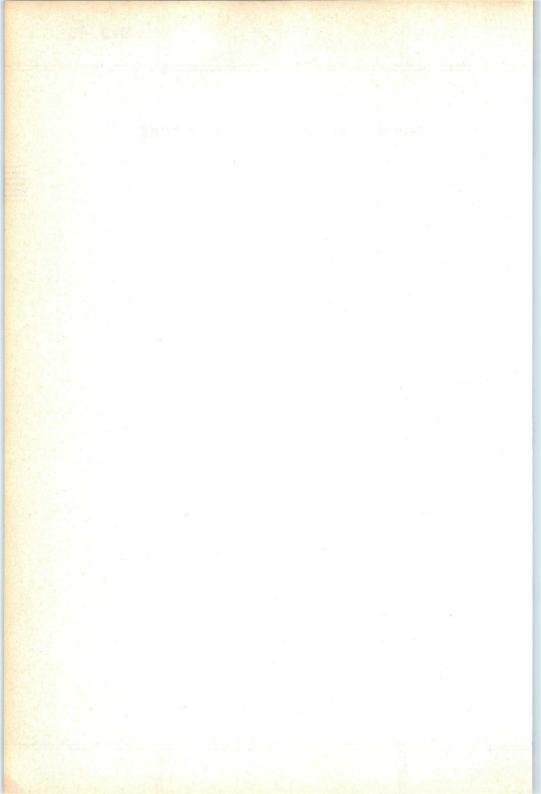

# INSTRUMENT CATHODE-RAY TUBE

The D13-500../01 is a wide-band oscilloscope tube designed for observation and measurement of high frequency phenomena.

This tube has a rectangular 13 cm diagonal flat face with aluminized screen and internal graticule, post-deflection accelerator with mesh, vertical deflection by means of a symmetrical helix system, scan magnification in the vertical direction by means of an electrostatic quadrupole lens and correction coils for trace alignment, vertical shift of the display area and correction of the orthogonality of traces.

QUICK REFERENCE DA	ATA		
Final accelerator voltage	Vg13(1)	15	kV
Display area		100x60	$mm^2$
Deflection coefficient, horizontal	$M_X$	15	V/cm
vertical	My	2	V/cm
Bandwidth of the vertical deflection system	В	800	MHz

#### SCREEN

	colour	persistence
D13-500GH/01	green	medium short

Useful screen dimensions

 $min. 100 \times 60 \text{ mm}^2$ 

Useful scan at  $V_{g_{13}(\ell)}/V_{g_2} = 6$ 

horizontal min. 100 mm vertical min. 60 mm

By means of adjusting the current in the correction coils, full coverage of the internal graticule by the scanned area can be obtained for any tube.

Data based on pre-production tubes.



#### DESCRIPTION

#### General

The D13-500../01 has been primarily designed for wide-band high-frequency applications. It combines high brightness, high deflection sensitivity and a large bandwidth of the vertical deflection system.

In order to obtain the high sensitivity, the post-deflection acceleration system embodies a mesh. The sensitivity in the vertical direction has been further increased by means of an electrostatic quadrupole lens that has been inserted between the vertical deflection system and the horizontal deflection plates. The large bandwidth has been obtained by using, for the vertical deflection, a delay-line system instead of deflection plates. With the typical operating conditions, 2500 V first accelerator voltage and 15000 V final accelerator voltage, the vertical and the horizontal deflection factors are about 2 V/cm and 15 V/cm respectively, with a  $10 \times 6 \text{ cm}^2$  display area.

The bulb has a rectangular face and the screen is aluminized. To eliminate parallax errors, an internal graticule is incorporated. Correction coils have been provided to permit image rotation, correction of the orthogonality of traces and the adjustment of the vertical useful scan with respect to the graticule.

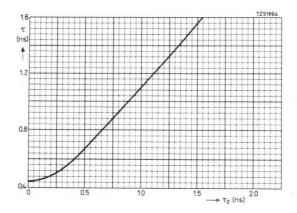


Fig.1

Rise time of the display  $\tau$  as a function of the rise time of the input signal  $\tau_2$ 

#### The vertical deflection system

For the vertical deflection, a delay-line system is used so that transit-time effects are practically eliminated. The system consists of two flattened helices to which a symmetrical deflection signal should be applied. Under these conditions, the characteristic impedance of each helix is  $150\ \Omega.$  The input and output terminals are brought out on opposite sides of the neck on the same plane. The input terminals are connected to the beginning of the helices by means of a matched, internal two-wire transmission line. The output of the deflection system should be properly terminated in order to avoid signal reflections.

With the typical operating conditions, the band-width of the deflection system, i.e. the frequency at which the sensitivity is  $3\ dB$  below its value at D.C., is about 800 MHz. Even above this frequency, the response decreases only gradually so that, for narrow-band applications, the tube can be used with reduced vertical sensitivity up to about 2000 MHz.

The rise time  $\tau_1$ , i.e. the time interval during which the display of an ideal step-function signal applied to the input goes from 10% to 90% of its final value, is about 0.45 ns. If the input signal has the rise-time  $\tau_2$ , the rise-time  $\tau$  of the display is approximately given by

$$\tau = \sqrt{\tau_1^2 + \tau_2^2}$$

In Fig.1,  $\tau$  has been plotted as a function of  $\tau_2$ , with  $\tau_1$  = 0.45 ns. If, for example, the tube is used in combination with an amplifier and the rise-time of the display is to be 1.4 ns (corresponding with 250 MHz band-width), the rise-time of the amplifier should be 1.33 ns. It can be seen that in this region the rise-time of the display is almost equal to the amplifier rise-time, without a significant contribution of the cathode-ray tube.

If the tube is to be used without an amplifier in order to make use of its full band-width capabilities, care should be taken to ensure good symmetry of the input signal.

Fig.2 shows how the tube can be connected to a 50  $\Omega$  coaxial input. A matched power divider is used which delivers two identical output signals. One of these is inverted by means of a pulse inverter. An additional length of 50  $\Omega$  cable should be inserted into the path of the non-inverted signal having the same delay time as the pulse inverters o that the two signals arrive at the input of the deflection system at the same time. The 75  $\Omega$  shunt resistors serve to obtain a correct termination of the 50  $\Omega$  lines. Since each branch of the power divider has 6 dB attenuation, the sensitivity, measured at the 50  $\Omega$  input, is also 2 V/cm.

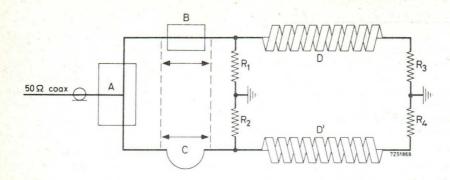


Fig.2

Connection to an asymmetrical 50  $\Omega$  input A: Power divider R<sub>1</sub>, R<sub>2</sub>: Resistors 75  $\Omega$ 

 $\begin{array}{lll} B: \ Inverter & R_3, \ R_4\colon \ Resistors \ 150 \ \Omega \\ C: \ Cable & D \ , \ D' \colon \ Deflection \ system \end{array}$ 

Note: Delay of inverter B and cable C are equal.

#### Scan magnifier and focusing system

As already mentioned, an electrostatic quadrupole lens, i.e. an electron lens which has two mutually perpendicular planes of symmetry, divergent in one plane and convergent in the other, is used for the magnification of the vertical deflection. This lens is inserted between the vertical deflection system and the horizontal deflection plates, with its plane of divergence in the direction of the vertical deflection.

Therefore, it magnifies the vertical deflection without affecting the horizontal deflection.

Because of the astigmatic properties of this quadrupole lens, a conventional, rotationally symmetrical focusing lens cannot be used. Instead of this, two more electrostatic quadrupole lenses are incorporated so that focusing is accomplished by means of three quadrupole lenses, with alternating orientation of their planes of convergence and divergence. The focusing action is schematically shown in Fig.3. The strength of the scan-magnifier lens is controlled by applying to the electrode go a negative voltage with respect to go. Within a certain range of this voltage, corresponding to a scan-magnification factor. Msc. i.e. the ratio of the deviations on

responding to a scan-magnification factor Msc, i.e. the ratio of the deviations on the screen with and without scan magnification respectively, between 1.8 and 2 the combined effect of the three lenses will yield an approximately circular spot at moderate beam currents. (At high beam currents, when space-charge repulsion causes an increase of spot size, the width of the vertical lines will be smaller than that of the horizontal lines).

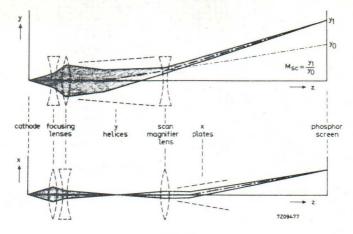


Fig.3

In this range, line-width at a fixed value of screen current, and screen current at a fixed value of grid No.1 voltage, are increasing functions of the scan-magnification factor. Figs.4 and 5 show the average relative change with respect to the values at Msc = 1.9 which, generally, is the most suitable compromise.

For minimum defocusing of vertical lines near the upper and lower edge of the display area, the electrode  $g_8$  should be kept at a positive voltage with respect to  $g_2$  (about 200 V with 2500 V first accelerator voltage). As this voltage also has some effect on the scan-magnification factor, both  $g_8$  and  $g_9$  should be connected to  $g_2$  when the deviation without scan magnification is being measured.


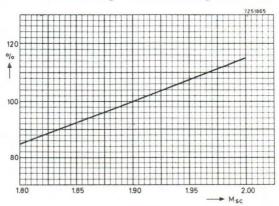


Fig.4

Line-width as a function of the scan-magnification factor (approximately) Line-width at  $M_{SC}$  = 1.9 is 100%, I<sub>SCTEED</sub> = const.



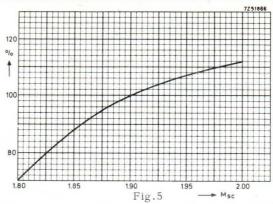

Screen current as a function of the scan-magnification factor (approximately) Screen current at  $M_{\rm SC}$  = 1.9 is 100%,  $V_{\rm g_1}$  = const.

For the adjustment of the scan-magnification factor the following procedure is recommended:

- a. Set  $V_{g_8}$  and  $V_{g_9}$  to 0 with respect to  $g_2$ .
- b. Display a time-base line and adjust  $V_{g_6}$  so that the line appears sharply focused.
- c. Apply a square wave signal to the vertical deflection system (the vertical parts of the trace will be out of focus but this is immaterial) and adjust the amplitude so that the height of the display has a convenient value, e.g. 30 mm.
- d. Set  $\rm V_{gg}$  and  $\rm V_{gg}$  to the appropriate values and readjust  $\rm V_{gg}$  so that the horizontal parts of the trace are again in focus.
- e. Check the height of the display (e.g. for  $M_{SC}$  = 1.9 this height should now be 57 mm).
- ${\rm f}$  . If necessary, readjust  ${\rm V}_{gg}$  until the desired value of  ${\rm M}_{SC}$  has been obtained.

Focusing is controlled by means of the electrode voltage  $\rm V_{g_4}$  and  $\rm V_{g_6}$ . The electrodes g5 and g7 can be used to centre the beam with respect to the vertical and horizontal deflection systems.

The voltages of the focusing and correction electrodes can be adjusted as follows:

- a. Display a square-wave signal on the screen so that both horizontal and vertical traces are visible.
- b. Adjust  $V_{g_6}$  so that the horizontal parts of the display are in focus. The vertical parts will, in general, be out of focus.
- c. Adjust  $\rm V_{g4}$  so that the vertical traces are brought into focus. Now the horizontal parts of the display will be out of focus again.
- d. Repeat b) and c) successively until both vertical and horizontal traces are simultaneously in focus.
- e. Adjust  $V_{g_3}$  for minimum width of a horizontal line. If necessary, readjust focusing voltages  $V_{g_4}$  and  $V_{g_6}$ .



- f. Adjust  $\rm V_{g_7}$  for equal brightness at the left-hand and right-hand edges of the display area. If necessary, readjust the focus by means of  $\rm V_{g_6}$ .
- g. Adjust  $V_{g_5}$  so that the position of a horizontal trace not deflected in the vertical direction is at the centre of the vertical useful scan. If necessary, readjust the focus by means of  $V_{g_4}$ .

If the graticule is not fully covered by the scanned area the image should be shifted by adjusting the correction coil current (see page 16) before the adjustment of  $\rm V_{\rm g_{\rm 5}}$  is made.

The procedure for the adjustment of the scan-magnification factor and for focusing, as described above, seams to be rather complicated.

However, in practice it will be sufficient to adjust  $V_{gg}$  to its nominal value without determining the scan-magnification factor for each individual tube. As to focusing, the user can, with some experience, achieve the best setting with very few adjustments.

#### Post-deflection acceleration

The use of a p.d.a. shield (mesh) ensures a high deflection sensitivity. A geometry control electrode,  $\mathbf{g}_{11}$ , serves for the correction of pin cushion or barrel distortion of the pattern. In order to suppress background illumination due to secondary electrons originating from the p.d.a. shield  $\mathbf{g}_{12}$ , this shield should be kept 12 V negative with respect to  $\mathbf{g}_{11}$  whereas the voltage of the interplate shield,  $\mathbf{g}_{10}$  should be equal to the mean x-plate potential.

# **HEATING**: Indirect by A.C. or D.C.; parallel supply

Heater voltage	$V_{\mathbf{f}}$	6.3	V
Heater current	$\overline{\mathrm{I_f}}$	300	mA

#### CAPACITANCES


$\mathbf{x}_1$ to all other elements except $\mathbf{x}_2$	$C_{x_1(x_2)}$	4.5	pF
$\mathbf{x}_2$ to all other elements except $\mathbf{x}_1$	$C_{x_2(x_1)}$	4.5	pF
$x_1$ to $x_2$	$c_{x_1x_2}$	2.7	pF
Control grid to all other elements	$c_{g_1}$	6	pF
Cathode to all other elements	$C_{\mathbf{k}}$	5	pF

<sup>1)</sup> Clear area for light conductor.


<sup>2)</sup> These dimensions apply to the illumination plate which will always be within the limits  $117 + 1.5 \times 79 + 1.5$  mm of the tube face.


<sup>3)</sup> The soldering tags will be situated within a rectangle of  $60 \text{ mm} \times 40 \text{ mm}$  on the rearside of the tube.


#### MECHANICAL DATA

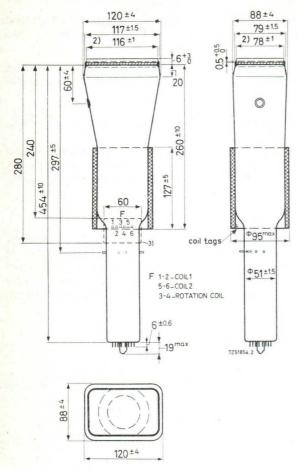

Dimensions in mm

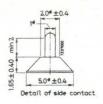


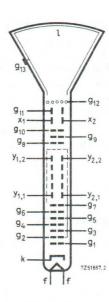

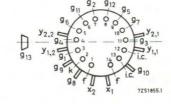


Notes: see page 7

#### MECHANICAL DATA (continued)

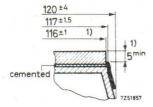



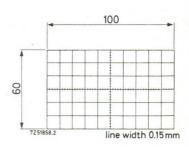

#### Mounting position: any

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

#### Dimensions and connections

See also outline drawing

Overall length (socket and front glass plate inclusive)

max. 493 mm

Face dimensions

max. 124 x 92 mm<sup>2</sup>

Net weight

approx. 1300

Base

14-pin all glass

# Accessories

Socket

type 55566

Final accelerator contact connector

type 55563

Side contact connector

type 55561

Mu-metal screen

type 55582

In order to avoid damage to the side contacts the narrower end of the mu-metal screen should have an internal diameter of not less than 65 mm.

1) see page 7

**FOCUSING** 

electrostatic 1)

DEFLECTION

double electrostatic

x plates

symmetrical

The v deflection system consists of a symmetrical delay line system.

Characteristic impedance

 $2 \times 150 \Omega$ 

Bandwidth (-3 dB)

800 MHz<sup>2</sup>)

Rise time

0.45 ns

If use is made of the full deflection capabilities of the tube the deflection plates will intercept part of the electron beam: hence a low impedance deflection plate drive is desirable.

Angle between x and y traces 900 4) (see page 14 "Correction coils")

$$\tau_1 = \sqrt{\tau^2 - \tau_2^2}$$

where  $\tau$  is the rise-time observed on the display.

This should be measured after the angle between the x-traces and y-traces has been corrected by means of the correction coils, otherwise two measurements have to be taken (using either a different polarity of the vertical deflection signal or different direction of the time-base sweep) and the true value of  $\neg$  has to be calculated as the arithmetic mean of the two results.

<sup>1)</sup> Because of the applications of a quadrupole lens for the magnification of the vertical deflection, two more quadrupole lenses are used for focusing. Therefore, controls for two voltages have to be provided.

<sup>2)</sup> The band-width is defined as the frequency at which the vertical deflection sensitivity is 3 dB lower than at D.C.

 $<sup>^{3}</sup>$ ) The rise-time is defined as the time interval between 10% and 90% of the final value of deflection when an ideal step-function signal is applied to the vertical deflection system. If the actual signal has an appreciable rise-time,  $\tau_2$  the risetime of the tube can be determined from

<sup>4)</sup> Deviations from the orthogonality of traces can be eliminated by means of correction coils

#### LINE WIDTH

Measured with the shrinking raster method in the centre of the screen under typical operating conditions, adjusted for optimum spot size at a beam current I $_{\ell}$  = 10  $\mu A$ and a screen magnification factor  $M_{SC}$  = 1.9. See also 3) page 13.

Line width

1.w.

approx. 0.35 mm

#### TYPICAL OPERATING CONDITIONS

THICKE OF ERATING CONDITIONS			
Final accelerator voltage	$v_{g_{13}(\ell)}$	15 000	V
Post deflection shield voltage (with respect to $g_{11}$ )	V <sub>g12</sub> -g <sub>11</sub>	-9 to -15	V
Geometry control electrode voltage	$v_{g_{11}}$	$2500 \pm 100$	V 1)
Interplate shield voltage	$v_{g10}$	2500	$V^2$ )
Scan magnifier electrode voltage (with respect to g <sub>2</sub> )	$V_{g9}$ - $g_2$	-250 to -375	v <sup>3</sup> )
Correction electrode voltage (with respect to $g_2$ )	$v_{g_8-g_2}$	+200	V 4)
Horizontal beam centering electrode voltage	Vg7	2500 <u>+</u> 50	V 5)
Vertical beam centering electrode voltage	$v_{g_5}$	2500 ± 50	V 6)
Focusing electrode voltages (with respect to g <sub>2</sub> )	${ m v_{g6}} { m -g2} \ { m v_{g4}} { m -g2}$	-400 to -600 -600 to -800	V <sup>7</sup> ) V <sup>7</sup> )
Spot correction electrode voltage	$v_{g_3}$	$2500 \pm 50$	V 8)
First accelerator voltage	$v_{g2}$	2500	V
Control grid voltage for visual extinction of a focused spot	$v_{g_1}$	-50 to -150	V
Deflection coefficient, horizontal vertical	$M_X$ $M_Y$	approx. 15 approx. 2	V/cm V/cm <sup>9</sup> )
Deviation of linearity of deflection		2	% 10)
Geometry distortion		see note 11	
Useful scan, horizontal vertical		100 60	mm mm

Notes see page 13

# D13-500../01

# LIMITING VALUES (absolute max. rating system)

Final accelerator voltage	Vg <sub>13</sub> (1)	max.	20 000 9 000	V
Post-deflection shield voltage	$v_{g_{12}}$	max.	3100	V
Geometry control electrode voltage	$v_{g_{11}}$	max.	3 100	V
Interplate shield voltage	$v_{g_{10}}$	max.	3 100	V
Scan-magnifier electrode voltage	V <sub>g9</sub>	max.	3 000	V
Correction electrode voltage	$v_{g_8}$	max.	3 200	V
Focusing electrode voltages	$v_{g_6}$	max.	3 000	V
	-V <sub>g6</sub> -g2	max.	1 000	V
	$v_{g_4}$	max.	3 000	V
	-V <sub>g4</sub> -g <sub>2</sub>	max.	1 000	V
Beam centering electrode voltages	$v_{g7}$	max.	3 100	V
	$V_{g_5}$	max.	3 100	V
Spot correction electrode voltage	$v_{g_3}$	max.	3 100	V
First accelerator voltage	$v_{g_2}$	max. min.	3 000 2 000	V V
Control grid voltage, negative	$-v_{g_1}$	max.	200	V
positive	$v_{g_1}$	max.	0	V
Cathode to heater voltage				
cathode positive	$V_{+k}$ f	max.	125	V
cathode negative	V-k f	max.	125	V
Voltage between first accelerator	7.7		500	3.7
and any deflection electrode	$v_{g_2 x}$ $v_{g_2 y}$	max.	500 500	V
Screen dissipation	W <sub>l</sub>	max.	3	mW/cm <sup>2</sup>
Ratio Vg13(1)/Vg2	Vg13(1)/Vg2	max.	10	
Average accelerator voltage	I <sub>k</sub>	max.	300	$\mu$ A
	K			



#### Notes to page 11

- 1) This voltage should be adjusted for optimum pattern geometry.
- 2) This voltage should be equal to the mean x-plate potential.
- 3) The range indicated corresponds to a scan magnification factor  $M_{SC}$ , i.e. the ratio by which the vertical deviation on the screen is increased, in the approximate range 1.8 <  $M_{SC}$  < 2.0, and the tube should not be operated outside this range. Within this range, line-width and screen current at a fixed value of the control-grid voltage are increasing functions of  $M_{SC}$ . The best compromise between brightness and line width is usually found at  $M_{SC}\approx 1.9$  which corresponds to  $V_{gg-g2}\approx 310~\rm V$ .
- 4) For minimum defocusing of vertical lines near the upper and lower edges of the scanned area this voltage should be approximately adjusted to the value indicated. Since the value of  $V_{g8-g2}$  has some effect on the scan-magnification factor both  $V_{g8}$  and  $V_{g9}$  should be connected to  $g_2$  when the deviation without scan magnification is to be measured.
- 5) This voltage should be adjusted for equal brightness in the x-direction with respect to the electrical centre of the tube.
- 6) By adjusting this voltage a spot not deflected in the vertical direction may be centered with respect to the vertical useful scan.
- 7) These voltages should be stabilized to within 1 V.
- $^{8}$ ) This voltage should be adjusted for minimum width of a horizontal line.
- 9) For a scan-magnification factor  $M_{SC}$  = 1.9. In the above mentioned range of  $V_{g9}$ - $g_2$  the vertical deflection factor will vary approximately  $\pm$  5%.
- 10) The sensitivity at a deflection of less than 75% of the useful scan will not differ from the sensitivity at a deflection of 25% of the useful scan by more than the indicated value.
- 11) A rectangle of 98 mm x 58.2 mm is concentrically aligned with the internal graticule of the tube. With correction potentials applied, the edges of a raster will fall between this rectangle and the boundary lines of the internal graticule.

#### CORRECTIONS COILS

The tube is provided with a coil unit consisting of:

- 1. A pair of coils (No.1 and 2), with approx. 220  $\Omega$  D.C. resistance per coil, for
  - a) correction of the orthogonality of the x-and y-traces so that the angle between these traces at the centre of the screen can be made exactly 90°.
  - b) vertical shift of the scanned area.
- 2. A single coil (No.3) with approx. 550  $\Omega$  D.C. resistance, for image rotation (alignment of the x-trace with the x-lines of the graticule).

#### Orthogonality and shift

The change in the angle between the traces and the shift of the scanned area will be proportional to the algebraic sum and the algebraic difference of the currents in the coils No.1 and 2.

Under typical operating conditions and with the coil unit closely surrounded by a mu-metal shield, the currents required are max. 5 mA per degree of angle correction and max. 2 mA per millimeter shift. The supply circuit for these coils should be so designed that in each coil a maximum current of 20 mA, with either polarity, can be produced.

If a wider mu-metal shield is used the above-mentioned values have to be multiplied by a factor K (1 < K < 2) the value of which depends on the dimensions of the shield and approaches 2 for the case no shield is present.

# Image rotation

Under typical operating conditions, a current of max. 45 mA will be required for the alignment.

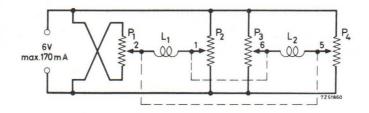


Fig.1

With the above circuit almost independent control for shift and angle correction is achieved. This facilitates the correct adjustment to a great extent.

The dissipation in the potentiometers can be reduced considerably if the requirement of independent controls is dropped.




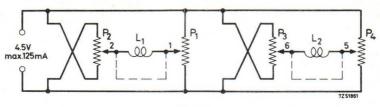


Fig.2

 $P_1,\ P_2$  potentiometers 220  $\Omega,\ 1$  watt: ganged  $P_3,\ P_4$  potentiometers 220  $\Omega,\ 1$  watt: ganged

A further reduction of the dissipation can be obtained by providing a commutator for each coil (see circuit fig. 3).

The procedure of adjustment will then become more complicated but it should be kept in mind that a readjustment is necessary only when the tube has to be replaced.

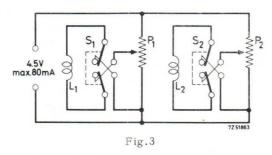

 $P_1\text{, }P_2\text{ potentiometers 220 }\Omega\text{, }1\text{ watt}$ 

S<sub>1</sub>, S<sub>2</sub> commutators

A suitable circuit for the image rotating coil is given in fig.4.

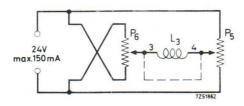


Fig.4

P5, P6 potentiometers 500  $\Omega$ , 3 watt: ganged

The following procedure of adjustment is recommended


- a. Align the x-trace with the graticule by means of the image rotating coil.
- b. With the tube fully scanned in the vertical direction, the image has to be shifted so that the graticule is fully covered. With the circuit according to fig.1 this is done by means of the ganged potentiometers  $P_1$  and  $P_4$ .
- c. Adjustment of orthogonality by means of the ganged potentiometers  $P_2$  and  $P_3$ . A slight readjustment of  $P_1$  and  $P_4$  may be necessary afterwards.
- d. Readjustment of the image rotation if necessary.

With a circuit according to fig.2 or 3 these corrections have to be performed by means of successive adjustments of the currents in the coils.

The most convenient deflection signal is a square waveform permitting an easy and fairly accurate visual check of orthogonality.

#### ILLUMINATION OF THE GRATICULE

To illuminate the internal graticule a light conductor (e.g. of perspex) should be used. In order to achieve the most efficient light conductance, the holes for the lamps and the edge adjacent to the tube should be polished, and the distance between the perspex plate and the tube should be as small as possible. It is advisable to apply reflective material to the outer circumference and, if possible, also to the upper and lower faces of the light conductor. The thickness of the conductor should not exceed 3 mm, and its position relative to the frontplate of the tube should be adjusted for optimum illumination of the graticule lines.

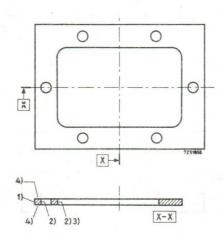

<sup>1)</sup> Reflective material.



<sup>2)</sup> Polished.

<sup>3)</sup> Close and constant distance to front plate of tube.

It is essential that the light conductor and the front plate of the tube are in plane.

<sup>4)</sup> If possible reflective material.

 $14\ \mathrm{cm}$  diagonal, rectangular flat faced oscilloscope tube with mesh and metal backed screen.

QUICK RE	FERENCE DATA		
Final accelerator voltage	Vg7(1)	10	kV
Display area		100 x 80	$mm^2$
Deflection coefficient, horizontal	$M_X$	15.5	V/cm
vertical	$M_{y}$	4.2	V/cm

SCREEN: Metal backed phosphor

Heater current

	colour	persistence
D14-120GH	green	medium short
D14-120GM	purplish blue	long
D14-120GP	bluish green	medium short

Useful screen dimensions	min.	100 x 80	mm <sup>2</sup>
Useful scan at $V_{g7}(l)/V_{g2},g4 = 6.7$			
horizontal	min.	100	mm
vertical	min.	80	mm
Spot eccentricity in horizontal and vertical directions		.6	mm
HEATING: Indirect by A.C. or D.C.; parallel supply			
Heater voltage		V <sub>f</sub> 6.3	V


300

mA

If

#### MECHANICAL DATA

Dimensions in mm

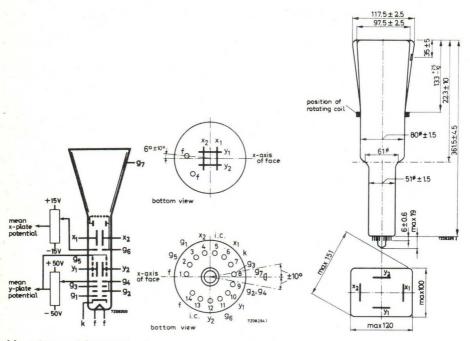

## Mounting position: any

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

## Dimensions and connections

See also outline drawing

Overall length (socket included) max. 385 mm Face dimensions max.  $100 \times 120 \text{ mm}^2$ Net weight approx. 900 g

Base 14 pin all glass

## Accessories

Socket (supplied with tube) type 55566

Final accelerator contact connector type 55563

Mu-metal shield type 55581

#### CAPACITANCES

x <sub>1</sub> to all other elements except x <sub>2</sub>	$C_{x_1(x_2)}$	6.5	pF	
$\mathbf{x}_2$ to all other elements except $\mathbf{x}_1$	$C_{x_2(x_1)}$	6.5	pF	
y <sub>1</sub> to all other elements except y <sub>2</sub>	$C_{y_1}(y_2)$	5	pF	
y2 to all other elements except y1	$C_{y_2(y_1)}$	5	pF	
$x_1$ to $x_2$	$C_{x_1x_2}$	2.2	pF	
y <sub>1</sub> to y <sub>2</sub>	$C_{y_1y_2}$	1.7	pF	
Control grid to all other elements	Cg <sub>1</sub>	5.5	pF	
Cathode to all other elements	Ck	4.5	pF	

FOCUSING

electrostatic

DEFLECTION

double electrostatic

x plates

symmetrical

y plates

symmetrical

If use is made of the full deflection capabilities of the tube the deflection plates will intercept part of the electron beam; hence a low impedance deflection plate drive is desirable.

Angle between x and y traces

90 + 10

Angle between x trace and the horizontal axis of the face max. 50 1)

#### LINE WIDTH

Measured with the shrinking raster method under typical operating conditions, adjusted for optimum spot size at a beam current I $\ell$  = 10  $\mu$ A.

Line width at screen centre

1.w.

0.40

.40 mm

mm

1.w.

av. < 0.45

over the whole screen area

<sup>1)</sup> See page 5

### TYPICAL OPERATING CONDITIONS

Final accelerator voltage Interplate shield voltage Geometry control voltage Deflection plate shield voltage Focusing electrode voltage First accelerator voltage Astigmatism control voltage Control grid voltage for visual	$V_{g7}(l)$ $V_{g6}$ $\Delta V_{g6}$ $V_{g5}$ $V_{g3}$ $V_{g2}, g4$ $\Delta V_{g2}, g4$	$   \begin{array}{r}     10000 \\     1500 \\     \pm 15 \\     1500 \\     250 \text{ to } 350 \\     1500 \\     \pm 50 \\   \end{array} $	V V 2) V 3) V V V 4)
extinction of focused spot	$v_{g1}$	-20 to -60	V
Grid drive for $10~\mu\mathrm{A}$ screen current		approx. 12	V
Deflection coefficient, horizontal	$M_X$	av. 15.5	V/cm
Defrection Coefficient, nortzontal	IVIX	max. 16	V/cm
vertical	$M_V$	av. 4.2	V/cm
Vertical	ivi y	max. 4.6	V/cm
Deviation of linearity of deflection		max. 2	% 5)
Geometry distortion		See note 6	
Useful scan, horizontal		min. 100	mm
vertical		min. 80	mm

## LIMITING VALUES (Absolute max. rating system)

Final accelerator voltage	Vg7(l)	max.	11000 9000	V	
Interplate shield voltage and					
geometry control electrode voltage	Voc	max.	2200	V	
Deflection plate shield voltage	V <sub>0.5</sub>	max.	2200	V	
Focusing electrode voltage	$V_{g6}$ $V_{g5}$ $V_{g3}$	max.	2200	V	
First accelerator and astigmatism	**	max.	2200	V	
control electrode voltage	$V_{g2,g4}$	min.	1350	V	
Control and design	77	max.	200	V	
Control grid voltage	$-V_{g1}$	min.	0	V	
Cathada ta haataa walta wa	$V_{kf}$	max.	125	V	
Cathode to heater voltage	-V <sub>kf</sub>	max.	125	V	
Voltage between astigmatism control					
electrode and any deflection plate	V <sub>m1/x</sub>	max.	500	V	
	$V_{g4/x}$ $V_{g4/y}$	max.	500	V	
Grid drive, average	8 T/ y	max.	20	V	,
Screen dissipation	We	max.	3	m	W/cm <sup>2</sup>
Ratio V <sub>g7</sub> (l) V <sub>g2,g4</sub>	Vg7(1)/Vg2,g4	max.	6.7		5/


For notes see page 5



#### Notes

- 1) In order to align the x-trace with the horizontal axis of the screen, the whole picture can be rotated by means of a rotation coil. This coil will have 50 amp. turns for the indicated max. rotation of 5° and should be positioned as indicated in the drawing.
- 2) This tube is designed for optimum performance when operating at a ratio  $V_g7/V_g2,g4$  not higher than 6.7
  - The geometry electrode voltage should be adjusted within the indicated range (values with respect to the mean x-plate potential).
  - A negative control voltage will cause some pincushion distortion and less background light, a positive control voltage will give some barrel distortion and a slight increase of background light.
- 3) The deflection plate shield voltage should be equal to the mean y-plate potential. The mean x- and y-plate potentials should be equal for optimum spot quality.
- 4) The astigmatism control electrode voltage should be adjusted for optimum spot shape. For any necessary adjustment its potential will be within the stated range.
- 5) The sensitivity at a deflection of less than 75% of the useful scan will not differ from the sensitivity at a deflection of 25% of the useful scan by more than the indicated value.
- 6) A graticule, consisting of concentric rectangles of 95 mm x 75 mm and 93 mm x 73.6 mm is aligned with the electrical x-axis of the tube. With optimum correction potentials applied a raster will fall between these rectangles.



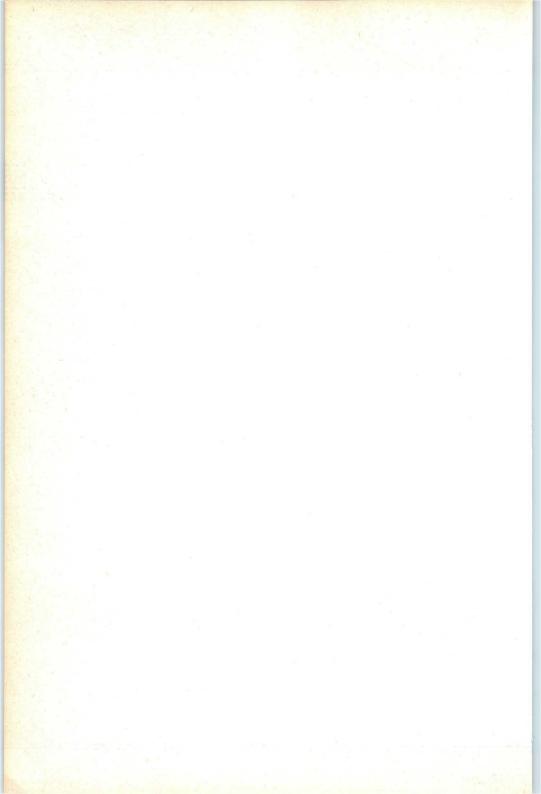

 $14~\rm cm$  diagonal, rectangular flat-faced oscilloscope tube with mesh and metal backed screen. The tube has side connections to the x- and y-plates, and is intended for use in transistorized oscilloscopes up to a frequency of 50 MHz.

QUICK REFEREN	ICE DATA		
Final accelerator voltage	$v_{g_8(\ell)}$	10	kV
Display area		100 x 80	$mm^2$
Deflection coefficient, horizontal	$M_X$	15.5	V/cm
vertical	$M_y$	4.2	V/cm

SCREEN: Metal backed phosphor

	Colour	Persistence
D14-121GH	green	medium short
D14-120GM	pusplish blue	long
D14-120GP	bluish green	medium short

Useful screen d	limensions		min.	100 x 80	mm <sup>2</sup>
Useful scan at	$V_{g_8(\ell)}/V_{g_2,g_4} = 6.7,$				
	horizontal		min.	100	mm
	vertical		min.	80	mm
Spot eccentricit and vertical d				6	mm
HEATING: India	rect by A.C. or D.C.; para	allel supply			

→ HEATING: Indirect by A.C. or D.C.; parallel supply


Heater voltage

Heater current

 $\frac{V_{\mathrm{f}}}{I_{\mathrm{f}}}$   $\frac{6.3}{300}$   $\frac{V}{mA}$ 

#### MECHANICAL DATA

Dimensions in mm

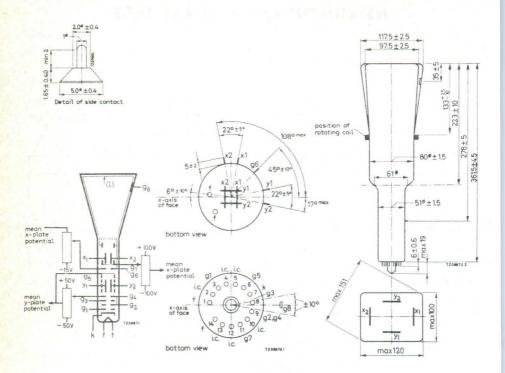

#### Mounting position: any

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

#### Dimensions and connections

See	also	outline	draw	ing
-	2.0		727	

Overall length (socket included)

Face dimensions

max. 100 x 120 mm<sup>2</sup>

Net weight

approx. 900 g

385

Base

14 pin, all glass

#### Accessories

Socket (supplied with tube)

type 55566

max.

Final-accelerator contact connector

type 55563

Mu-metal shield

type 55581A

#### CAPACITANCES

$\mathbf{x}_1$ to all other elements except $\mathbf{x}_2$	$C_{x_1(x_2)}$	5.5	pF
x <sub>2</sub> to all other elements except x <sub>1</sub>	$C_{x_2(x_1)}$	5.5	pF
$\mathbf{y}_1$ to all other elements except $\mathbf{y}_2$	$C_{y_1(y_2)}$	4	pF
$\mathbf{y}_2$ to all other elements except $\mathbf{y}_1$	$C_{y_2(y_1)}$	4	pF
$x_1$ to $x_2$	$C_{x_1x_2}$	2.2	pF
$y_1$ to $y_2$	$c_{y_1y_2}$	1.7	pF
Control grid to all other elements	$C_{g_1}$	5.5	pF
Cathode to all other elements	$C_{k}$	4.5	pF

**FOCUSING** 

Electrostatic

DEFLECTION

Double electrostatic

x-plates

symmetrical

y-plates

symmetrical

If use is made of the full deflection capabilities of the tube the deflection plates will intercept part of the electron beam; hence a low impedance deflection plate drive is desirable.

Angle between x and y traces

90 + 10

Angle between x trace and the horizontal axis of the face max.  $5^{\circ}$  1)

#### LINE WIDTH

Mearured with the shrinking raster method under typical operating conditions, adjusted for optimum spot size at a beam current I  $\rho = 10 \mu A$ .

Line width screen centre

1.w.

0.40 mm

over the whole screen area

1.w.

av. < 0.45mm

<sup>1)</sup> See page 5

#### TYPICAL OPERATING CONDITIONS

Final accelerator voltage	Vg8(1)		10	kV
Geometry-control electrode voltage	Vg7	1500	$\pm 100$	$V^{2}$
Post deflection and interplate shield voltage	Vg6		1500	V
Background illumination control voltage	$\Delta V_{g_6}^{s_6}$	0	to -15	$V^2$
Deflection plate shield voltage	$V_{g5}$		1500	$V^3$
Focusing electrode voltage	$v_{g_3}$	250	to 350	V
First accelerator voltage	$v_{g_2,g_4}^{s_3}$		1500	V
Astigmatism control voltage	$\Delta V_{g_2,g_4}$		±50	$V^4$ )
Control grid voltage for extinction	82,84			
of focused spot	$v_{g_1}$	-20	to -60	V
Grid drive for 10 $\mu A$ screen current	61	approx.	12	V
Deflection coefficient, horizontal	$M_x$	av.	15.5	V/cm
Deflection coefficient, nortzontal	$w_X$	max.	16	V/cm
vertical	$M_V$	av.	4.2	V/cm
vertical	wy	max.	4.6	V/cm
Deviation of linearity of deflection		max.	2	% 5)
Geometry distortion		See	note 6	
Useful scan, horizontal		min.	100	mm
vertical		min.	80	mm


## LIMITING VALUES (Absolute max. rating system)

				100000	
Final accelerator voltage	$V_{g_8(l)}$	max.	11	kV	
8	88(1)	min.	9	kV	
Post deflection and interplate shield vo	ltage				
and geometry control electrode voltage	$V_{\sigma_7}$ , $V_{\sigma_6}$	max.	2200	V	
Deflection plate shield voltage	ge $V_{g7}, V_{g6}$ $V_{g5}$	max.	2200	V	
Focusing electrode voltage	$v_{g_3}^{s_3}$	max.	2200	V	
First accelerator and astigmatism	83				
control electrode voltage	77	max.	2200	V	
control electrode voltage	$v_{g_2,g_4}$	min.	1350	V	
Control said soltons	3.7	max.	200	V	
Control grid voltage	$-v_{g_1}$	min.	0	V	
Cathoda to hoston maltana	$v_{kf}$	max.	125	V	
Cathode to heater voltage	$-V_{kf}^{KI}$	max.	125	V	
Voltage between astigmatism control	***				
electrode and any deflection plate	Vg1/x	max.	500	V	
	$V_{g_4/x}$ $V_{g_4/y}$	max.	500	V	
Grid drive, average	947	max.	20	V	
Screen dissipation	$W_{\ell}$	max.	3	$mW/cm^2$	
Ratio Vg8(1) Vg2,g4	Vg8(1)/Vg2,g4	max.	6.7		
000, 02,04	001 / 02,04				

For notes see page 5


#### Notes

- 1) In order to align the x-trace with the horizontal axis of the screen, the whole picture can be rotated by means of a rotation coil. This coil will have 50 amp. turns for the indicated max. rotation of  $5^{\circ}$  and should be positioned as indicated on the drawing.
- 2) This tube is designed for optimum performance when operating at a ratio  $V_{g_8(\ell)}/V_{g_2,g_4} \leq 6.7$ . The geometry control voltage  $V_{g_7}$  should be adjusted within the indicated range (values with respect to the mean x-plate potential). A negative control voltage on  $g_6$  (with respect to the mean x-plate potential) will cause some pincushion distortion and less background light. By the use of the two voltages,  $V_{g_6}$  and  $V_{g_7}$ , it is possible to find the best compromise between background light and raster distortion.
- 3) The deflection plate shield voltage should be equal to the mean y-plate potential. The mean x- and y-plate potentials should be equal for optimum spot quality.
- 4) The astigmatism control electrode voltage should be adjusted for optimum spot shape. For any necessary adjustment its potential will be within the stated range.
- 5) The sensitivity at a deflection of less than 75% of the useful scan will not differ from the sensitivity at a deflection of 25% of the useful scan by more than the indicated value.
- 6) A graticule, consisting of concentric rectangles of 95 mm x 75 mm and 93 mm x 73.6 mm is aligned with the electrical x axis of the tube. With optimum correction potentials applied a raster will fall between these rectangles.

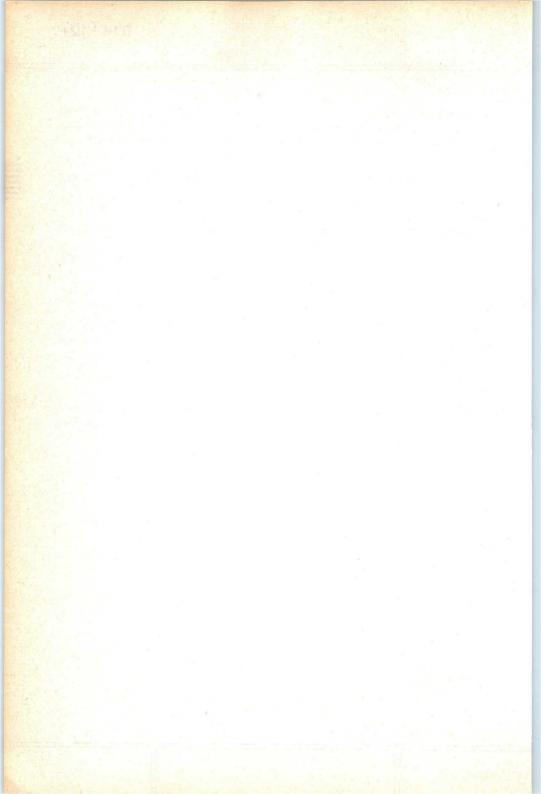

This type is equivalent with type D14-120 but provided with a rotation coil as indicated in note 1 of D14-120..

COIL

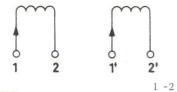


Number of turns

1'-2'


850 turns 850 turns

Resistance of coils

1 -2 1'-2' 360  $\Omega$  (±10 %) 375  $\Omega$  (±10 %)

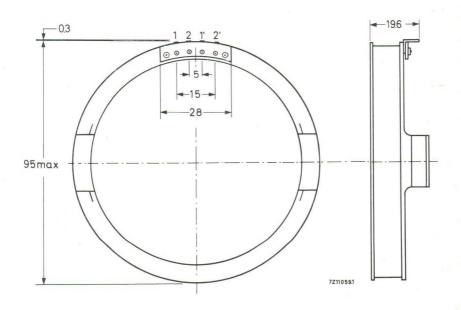




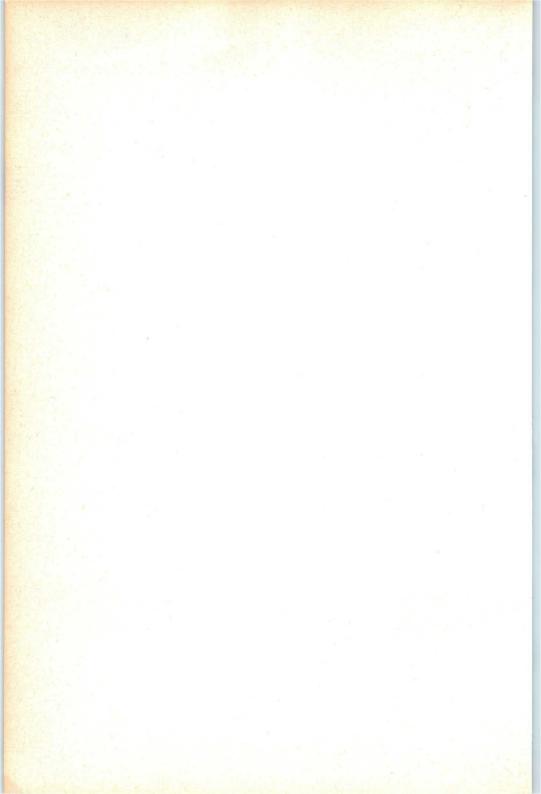

This type is equivalent with type D14-121 but provided with a rotation coil as indicated in note 1 of D14-121

COIL

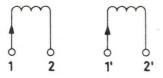


Number of turns

1 -2 · 1'-2'


850 turns 850 turns

Resistance of coils

1 -2 1'-2' 360  $\Omega$  (±10 %) 375  $\Omega$  (±10 %)

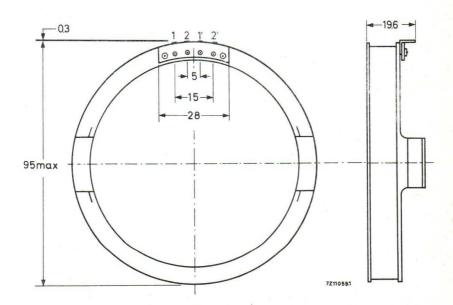



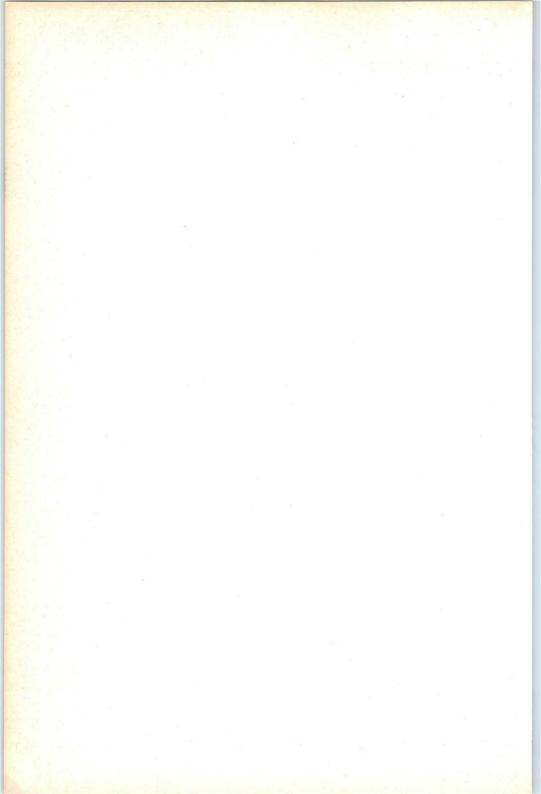

14 cm diagonal, rectangular flat-faced oscilloscope tube with mesh and metal backed screen. The tube has side connections to the x- and y-plates, internal graticule and a light-conducting glassplate set in front of the face.

QUICK REFERENCE DATA					
Final accelerator voltage	Vg8(1)	10	kV		
Display area		100 x 80	$mm^2$		
Deflection factor, horizontal	$M_X$	15.2	V/cm		
vertical	$M_y$	4.1	V/cm		

SCREEN : Metal backed phosphor

	Colour	Persistence
D14-160GH/09 D14-160GM/09	green yellowish-green	medium short

Useful screen dimensions

min.  $100 \times 80$  mm<sup>2</sup>

Useful scan at  $V_{g8(l)}/V_{g2, g4} = 6.7$ ,

horizontal min. 100 mm vertical min. 80 mm

The scanned raster can be centred and aligned with the internal graticule by means of correction coils fitted around the tube by the manufacturer (see page 5).


HEATING : Indirect by A.C. or D.C.; parallel supply


Heater voltage

Heater current I<sub>f</sub> 300 mA

#### MECHANICAL DATA

Dimensions in mm

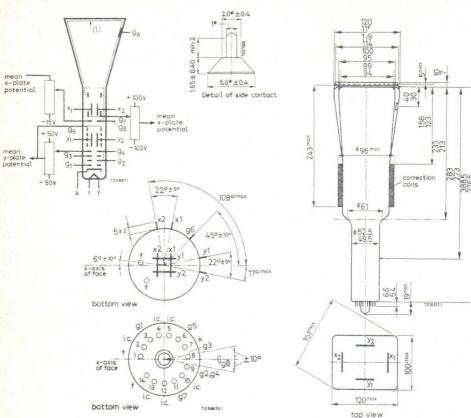

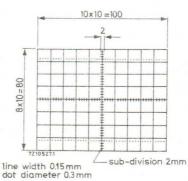

## Mounting position: any

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

Dimensions in mm

417.5 mm

1)

max.

max. 100 x 120

14 pin, all glass

type 55566

type 55563

type 55585

approx. 1300 g

MECHANICAL	DATA	(continued)
Dimensions	daanna	otions

Dimensions and connections

See also outline drawing

Overall length (socket included)

Face dimensions

Net weight

Base

^ -----

Accessories

Socket (supplied with tube)
Final-accelerator contact connector

Mu-metal shield

FOCUSING Electrostatic

DEFLECTION

Double electrostatic symmetrical

x-plates y-plates

symmetrical

If use is made of the full deflection capabilities of the tube the deflection plates will intercept part of the electron beam; hence a low impedance deflection plate drive is desirable.

Angle between x and y traces

900

Angle between x trace and the horizontal axis of the face  $0^{\circ}$ . See page 5 "Correction coils".

#### LINE WIDTH

Measured with the shrinking raster method in the centre of the screen under typical operating conditions, adjusted for optimum spot size at a beam current If =  $10~\mu A$ .

Line width at the centre of the screen

to all other elements except ve

Cathode to all other elements

1.W.

Ck-

J.3 mr

 $C_{V}(v)$  5.5 pF

#### CAPACITANCES

x <sub>1</sub> to all other elements except x <sub>2</sub>	$c_{x_1(x_2)}$	0.0	PI
$\mathbf{x}_2$ to all other elements except $\mathbf{x}_1$	$C_{x_2(x_1)}$	5.5	pF
$y_1$ to all other elements except $y_2$	$C_{y_1(y_2)}$	3.5	pF
$y_2$ to all other elements except $y_1$	$C_{y_2(y_1)}$	3.5	pF
$x_1$ to $x_2$	$c_{x_1x_2}$	2	pF
$y_1$ to $y_2$	$C_{y_1y_2}$	1.6	pF
Control grid to all other elements	$C_{g_1}$	5.5	pF

<sup>1)</sup> See page 5

4 pF

# D14-160../09

TYPICAL OPERATING CONDITIONS					
Final accelerator voltage	$V_{g8(l)}$		10	kV	
Geometry-control electrode voltage	Vg7	1500	$0 \pm 100$	$V^2$	
Post deflection and interplate shield volt	age Vg6		1500	V	
Background illumination control voltage	$\Delta V_{g6}^{g6}$	0 1	to -15	$V^2$ )	
Deflection plate shield voltage	Vg <sub>5</sub>		1500	$V^3$ )	
Focusing electrode voltage	$v_{g_3}^{s_5}$	450	to 550	V	
First accelerator voltage	$v_{g_2,g_4}^{s_3}$		1500	V	
Astigmatism control voltage	$\Delta V_{g_2}$ , $g_4$		±50	$V^4$ )	
Control grid voltage extinction	82, 84				
of focused spot	$V_{g_1}$	-25	to <b>-</b> 60	V	
Grid drive for 10 µA screen current	81	approx	. 20	V	
Deflection factor, horizontal	$M_X$	11	15.2	V/cm	
	X	max.	16	V/cm	
vertical	$M_{ m V}$		4.1	V/cm	
	,	max.	4.4	V/cm	
Deviation of linearity deflection		max.	2	% 5)	
Geometry distortion		See not	e 6		
Useful scan, horizontal		min.	100	mm	
vertical		min.	80	mm	
LIMITING VALUES					
Final accelerator veltare	7.7	max.	13	kV	
Final accelerator voltage	$v_{g_{8(l)}}$	min.	9	kV	
Post deflection and interplate shield volt					
and geometry control electrode voltag	$v_{g7}, v_{g6}$	max.	2200	V	
Deflection shield voltage	$V_{g_5}$		2200	V	
Focusing electrode voltage	$V_{g_3}$		2200	V	
First accelerator and astigmatism		max.	2200	V	
control electrode voltage	$v_{g_2,g_4}$	min.	1350	V	
		max.	200	V	
Control grid voltage	$-Vg_1$	min.	0	V	
	$V_{\mathbf{k}\mathbf{f}}$	max.	125	V	
Cathode to heater voltage	-V <sub>kf</sub>	max.	125	V	
Voltage between astigmatism control	V KI	max.	120	V	
electrode and any deflection plate	$Vg_{4/x}$	max.	500	V	
,	Vg <sub>4/y</sub>	max.	500	V	
Grid drive, average	04/ y	max.	30	V	
Screen dissipation	$W_{\varrho}$	max.	3	mW/cm	2
Ratio Vg8(1)/Vg2, g4	$V_{g_8(\ell)}/V_{g_2},g_4$	max.	6.7		
00(1) 02 -1	- U(E) - 2 - C1				

For notes see page 5

#### Notes

- 1) To avoid damage to the side contacts the narrower end of the Mu-metal shield should have an internal diameter of not less than 65 mm.
- <sup>2</sup>) This tube is designed for optimum performance when operating at a ratio  $V_{g8(\ell)}/V_{g2,g4} \leq$  6.7. The geometry control voltage  $V_{g7}$  should be adjusted within the indicated range

(values with respect to the mean x-plate potential).

A negative control voltage on g6 (with respect to the mean x-plate potential) will cause some pincushion distortion and less background light.

By the use of the two voltages,  $V_{g6}$  and  $V_{g7}$ , it is possible to find the best compromise between background light and raster distortion.

If a fixed voltage on  $g_{6}$  is required this voltage should be  $10\,\mathrm{V}\,\mathrm{lower}$  than the mean x-plate potential.

- 3) The deflection plate shield voltage should be equal to the mean y-plate potential. The mean x- and y-plate potentials should be equal for optimum spot quality.
- 4) The astigmatism control electrode voltage should be adjusted for optimum spot shape. For any necessary adjustment its potential will be within the stated range.
- $^5)$  The sensitivity at a deflection of less than 75% of the useful scan will not differ from the sensitivity at a deflection of 25% of the useful scan by more than the indicated value.
- $^{5}$ ) A graticule, consisting of concentric rectangles of 95 mm x 75 mm and 93 mm x 73.6 mm is aligned with the electrical x axis of the tube. With optimum correction potentials applied a raster will fall between these rectangles.

#### CORRECTION COILS

#### General

The D14-160../09 is provided with a coil unit consisting of: (see Fig. 1)

- 1. a pair of coils L3 and L4 which enable
  - a. the angle between the x and y traces at the centre of the screen to be made exactly  $90^{\circ}$  (orthogonality correction);
  - b. the scanned area to be shifted up and down (vertical shift)
- 2. a pair of coils  $L_1$  and  $L_2$  for image rotation which enable the alignment of the x trace with the x lines of the graticule.

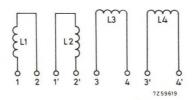


Fig. 1

#### Orthogonal ity and shift (coils L3 and L4)

The current required under typical operating conditions without the mu-metal shield being used is max. 45 mA for complete correction of orthogonality and shift. It will be 30 % to 50 % lower with shield, depending on the shield diameter. The resistance of each coil is approx.  $225\,\Omega$ .

#### Image rotation (coils L<sub>1</sub> and L<sub>2</sub>)

The image rotation coils are wound concentrically around the tube neck. Under typical operating conditions 50 A turns are required for the maximum rotation of 5°. Both coils have 850 turns. This means that a current of max. 30 mA percoil is required which can be obtained by using a 24 V supply when the coils are connected in series or a 12 V supply when they are in parallel.

#### Connecting the coils

The coils have been connected to the 8 soldering tags according to Fig. 2.



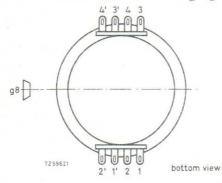


Fig. 2

With L $_3$  and L $_4$  connected in series according to Fig. 3 a current in the direction indicated will produce a clockwise rotation of the vertical trace and an anti-clockwise rotation of the horizontal trace.

With the connection according to Fig. 4 the current as indicated will produce an upward shift.

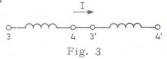

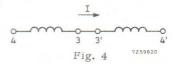

# TANDARDA TAN

# INSTRUMENT CATHODE-RAY TUBE

Low accelerator voltage cathode-ray tube for monitoring purpose

	QUICK REFERI	ENCE DATA			
Accelerator voltage		Vg4, g2, y2(1)	=	500	V
Display area		Both directions	s ful	ll scan	
Deflection coefficient,		$M_X$	=	56.5	V/cm
	vertical	$M_{V}$	==	49	V/cm

#### **SCREEN**

	Colour	Persistence	
DH3-91	green	medium short	

Useful screen diameter

min. 28 mm

Useful scan

horizontal full scan
vertical full scan

#### HEATING:

Indirect by A.C. or D.C.; parallel supply

Heater voltage


 $V_f = 6.3 \text{ V}$ 

Heater current

 $I_f = 300 \text{ mA}$ 

#### MECHANICAL DATA

#### Dimensions in mm

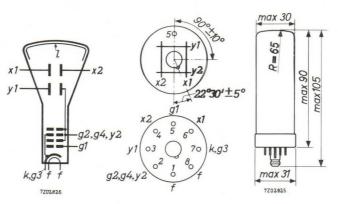

#### Mounting position: any

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube

Base	English Loctal 8 pins

## Dimensions and connections

See also outline drawing

Overall length	max.	105	mm
Face diameter	max.	30	mm

Net weight:	approx.	39	g
-------------	---------	----	---

## Accessories

Socket	type	2422 501 05001
Mu-metal shield	type	55525

#### CAPACITANCES

$$\mathbf{x}_1$$
 to all other elements except  $\mathbf{x}_2$   $\mathbf{x}_2$  to all other elements except  $\mathbf{x}_1$ 

$$x_1$$
 to  $x_2$ 

$$C_{x_1(x_2)} = 4.5 \text{ pF}$$
  
 $C_{x_2(x_1)} = 4.5 \text{ pF}$ 

$$C_{x_2(x_1)} = 4.5 \text{ pF}$$

$$C_{y_1(y_2)} = 3.5 pF$$

= 5.6 pF

$$C_{X_1X_2} = 1.0 \text{ pF}$$

 $C_{g_1}$ 

#### LINE WIDTH

Measured on a circle of 25 mm diameter

Accelerator voltage 
$$V_{g_4, g_2, y_2(\ell)} = 500 \text{ V}$$

Beam current 
$$I(\ell)$$
 = 0.5  $\mu A$ 

Line width 
$$1.w. = 0.6 \text{ mm}$$

#### TYPICAL OPERATING CONDITIONS

Accelerator voltage 
$$V_{g_4, g_2, y_2(\ell)} = 500 \text{ V}$$

Control grid voltage for visual extinction of focused spot 
$$-V_{g_1}$$
 = 8 to 27 V

horizontal 
$$M_X = 41 \text{ to } 72 \text{ V/cm}$$

vertical 
$$M_V$$
 = 35 to 63 V/cm

#### Useful scan

## LIMITING VALUES (Absolute max. rating system)

Accelerator voltage 
$$v_{g_4}, g_2, v_2(t) = min. 350 \text{ V}$$

Control grid voltage

negative 
$$-V_{g_1} = max. 200 \text{ V}$$
  
positive  $V_{g_1} = max. 0 \text{ V}$ 

positive peak 
$$V_{g_{1p}} = max. 2 V$$

Cathode to heater voltage

cathode positive 
$$V_{+k/f-} = max. 200 \text{ V}$$
  
cathode negative  $V_{-k/f+} = max. 125 \text{ V}$ 

Screen dissipation 
$$W_{\ell} = max.$$
 3 mW/cm<sup>2</sup>

#### CIRCUIT DESIGN VALUES

Control grid voltage for visual extinction of

focused spot 
$$-V_{g_1}$$
 = 16 to 54 V per kV of  $V_{g_4}$ ,  $g_2$ ,  $y_2$ 

Deflection coefficient

horizontal 
$$M_X$$
 = 90 to 120 V/cm per kV of  $V_{g_4}$ ,  $g_2$ ,  $y_2$ 

vertical 
$$M_y = 38.5 \text{ to } 52.5 \text{ V/cm per kV of } V_{g_4}, g_2, y_2$$

Control grid circuit

 $R_{g_1} = \max.$  1  $M\Omega$ resistance

Deflection plate circuit

resistance  $R_x R_v = max$ . 5  $M\Omega$ 

#### REMARK

A contrast improving transparent conductive coating connected to the accelerator electrode is present between glass and fluorescent layer. This enables the application of a high potential with respect to earth to the accelerator electrode, without the risk of picture distortion by touching the face (electrostatic bodyeffect).



Cathode-ray tube for monitoring purposes.

QUICK REFERENCE DATA						
Accelerator voltage	V <sub>g3</sub> ( <sub>ℓ</sub> )	=	800	V		
Display area	Both directions full scan			l scan		
Deflection coefficient, horizontal	$M_X$	=	62.5	V/cm		
vertical	$M_{y}$	=	40	V/cm		

#### SCREEN

	colour	persistence
DG7-5	yellowish green	medium short
DP7-5	yellowish green	long

Useful screen diameter

min. 65 mm

Useful scan

horizontal

full scan

vertical

full scan

#### HEATING

Indirect by A.C. or D.C.; parallel supply

Heater voltage


 $V_f = 6.3 \text{ V}$ 

Heater current

 $I_f = 300 \text{ mA}$ 

#### MECHANICAL DATA

Dimensions in mm

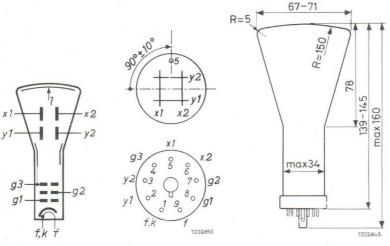

Mounting position: any

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

Base English Loctal 9 pins

#### Dimensions and connections

See also outline drawing

Overall length max. 160 mm Face diameter max. 71 mm

Net weight: approx. 140 g

Accessories

2

Socket type 2422 502 04001

Mu-metal shield type 55530

= 3.2 pF

 $C_k$ 

#### CAPACITANCES

$C_{x_1}(x_2)$	= .	2.8	pF
$C_{x_2}(x_1)$	=	2.8	pF
$C_{y_1}(y_2)$	=	3.0	pF
$C_{y_2}(y_1)$	=	3.3	pF
$C_{x_1x_2}$	=	0.8	pF
$C_{y_1y_2}$	=	0.6	pF
$c_{g_1}$	=	7.0	pF
	$C_{x_2}(x_1)$ $C_{y_1}(y_2)$ $C_{y_2}(y_1)$ $C_{x_1x_2}$ $C_{y_1y_2}$	$C_{x_2(x_1)} = C_{y_1(y_2)} = C_{y_2(y_1)} = C_{x_1x_2} = C_{y_1y_2} =$	$C_{x_1}(x_2) = 2.8$ $C_{x_2}(x_1) = 2.8$ $C_{y_1}(y_2) = 3.0$ $C_{y_2}(y_1) = 3.3$ $C_{x_1x_2} = 0.8$ $C_{y_1y_2} = 0.6$ $C_{g_1} = 7.0$

FOCUSING

electrostatic

**DEFLECTION** double electrostatic

x plates symmetrical y plates symmetrical

Cathode to all other elements

Angle between x and y traces  $90^{\circ}\pm1.5^{\circ}$ 

#### LINE WIDTH

Measured on a circle of 50 mm diameter

Accelerator voltage	$V_{g_3}(\ell)$	=	800	V
Beam current	I(L)	=	0.5	$\mu A$
Line width	1.w.	=	0.4	mm

#### TYPICAL OPERATING CONDITIONS

Accelerator voltage	Vg3 (1)	=		800	V	
Focusing electrode voltage	$v_{g_2}$	=	200 to	300	V	
Control grid voltage for visual extinction of focused spot	$-V_{g_1}$	=	max.	50	V	
Deflection coefficient, horizontal	$M_X$	=	53 to	72	V/cm	
vertical	$M_y$	=	33 to	45	V/cm	
Geometry distortion		Se	e hote 1	page	e 4	
Useful scan, horizontal		fu	ll scan			
vertical		fu	ll scan			

LIMITING VALUES (Absolute ma	x. rating	system)			
Accelerator voltage		Var	= max	. 1000	
ricecterator voltage		$V_{g_3(\ell)}$	= min	. 800	V
Focusing electrode voltage		$v_{g_2}$	= max	. 400	V
Control grid voltage					
negative		$-V_{g_1}$	= max	. 200	V
positive		$v_{g_1}$	= max	. 0	V
positive peak		$v_{g_{1p}}$	= max	. 2	V
Cathode to heater voltage					
cathode positive		V+k/f-	= max	. 200	V
cathode negative		V-k/f+	= max	. 125	V
Voltage between accelerator elec	trode				
and any deflection	plate	$V_{g3/x}$	= max	. 500	V
		Vg3/y	= max	. 500	V
Screen dissipation		$W_{\ell}$	= max	. 3	mW/cm <sup>2</sup>
CIRCUIT DESIGN VALUES					
Focusing voltage	$V_{g_2}$	= 250 to	375 V	per kV	of Vg3
Control grid voltage for visual	_				
extinction of focused spot	$-V_{g_1}$	= 0 to	62.5 V	per kV	of Vg3
Deflection coefficient	_				
horizontal	$M_X$	= 66 to	90 V	/cm per	kV of Vgg
vertical	$M_y$	= 41 to	56 V	/cm per	kV of Vg3
Control grid circuit resistance	$R_{g_1}$	= max.	0.5 M	$\Omega$	
Deflection plate circuit	01				
resistance	R., R.,	= max.	5 M	$\Omega$	

<sup>1)</sup> A graticule, consisting of concentric rectangles of 43.2 mm x 43.2 mm and 40 mm x 40 mm is aligned with the electrical x axis of the tube. The edges of a raster will fall between these rectangles with optimum correction potentials applied.



Cathode-ray tube for monitoring purposes.

	QUICK REFERE	ENCE DA	ГА			
Accelerator voltage	-		Vg3(1)	=	800	V
Display area			Both directions full scan			
Deflection coefficient,	horizontal		$M_X$	=	62.5	V/cm
	vertical		My	=	40	V/cm

#### SCREEN

	colour	persistence
DG7-6	yellowish green yellowish green	medium short

Useful screen diameter

min. 65 mm

Useful scan

horizontal

full scan

vertical

full scan

#### HEATING

Indirect by A.C. or D.C.; parallel supply

Heater voltage


 $V_f = 6.3 V$ 

Heater current

 $I_f = 300 \text{ mA}$ 

#### MECHANICAL DATA

Dimensions in mm

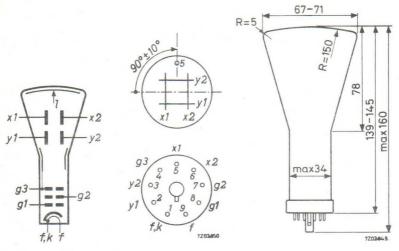

Mounting position: any

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

Base English Loctal 9 pins

#### Dimensions and connections

See also outline drawing

Overall length max. 160 mm Face diameter max. 71 mm

Net weight: approx. 140 g

## Accessories

Socket type 2422 502 04001

Mu-metal shield type 55530

#### CAPACITANCES

$\mathbf{x}_1$ to all other elements except $\mathbf{x}_2$	$C_{x_1(x_2)}$	=	2.8	pF
$\mathbf{x}_2$ to all other elements except $\mathbf{x}_1$	$C_{x_2(x_1)}$	=	2.8	pF
$y_1$ to all other elements except $y_2$	$C_{y_1(y_2)}$	=	3.0	pF
$\mathbf{y}_2$ to all other elements except $\mathbf{y}_1$	$C_{y_2(y_1)}$	=	3.3	pF
$x_1$ to $x_2$	$C_{x_1x_2}$	=	0.8	pF
$y_1$ to $y_2$	$C_{y_1y_2}$	=	0.6	pF
Control grid to all other elements	$C_{g_1}$	=	7.0	pF
Cathode to all other elements	$C_k$	=	3.2	pF

**FOCUSING** 

electrostatic

DEFLECTION

double electrostatic

x plates

asymmetrical

 $\mathbf{x}_1$  has to be connected to the accelerator electrode. Earthing of the accelerator electrode is recommended.

y plates

symmetrical

Angle between x and y traces

 $90^{\circ} \pm 1.5^{\circ}$ 

#### LINE WIDTH

Measured on a circle of 50 mm diameter

Accelerator voltage	$v_{g_3(\ell)}$	=	800	V
Beam current	I(()	=	0.5	$\mu A$
Line width	1.w.	=	0.4	mm

#### TYPICAL OPERATING CONDITIONS

Accelerator voltage	$V_{g_3(\ell)}$	=	800	V
Focusing electrode voltage	$v_{g_2}$	=	200 to 300	V
Control grid voltage for visual extinction of focused spot	$-v_{g_1}$	=	max. 50	V
Deflection coefficient, horizontal	$M_{X}$	=	53 to 72	V/cm
vertical	$M_y$	=	33 to 45	V/cm
Geometry distortion		Se	e note 1 page	e 4
Useful scan, horizontal		fu	ll scan	
vertical		fu	ll scan	

LIMITING VALUES (Absolute max. rating system)

Accelerator voltage		37	=	max.	1000	V	
Accelerator	voltage	$V_{g_3(\ell)}$	=	min.	800	V	
Focusing electrode voltage		$v_{g_2}$	=	max.	400	V	
Control grie	d voltage						
	negative	$-V_{g_1}$	=	max.	200	V	
	positive	$v_{g_1}$	=	max.	0	V	
	positive peak	$v_{g_{1p}}$	=	max.	2	V	
Cathode to	heater voltage						
	cathode positive	V+k/f-	=	max.	200	V	
	cathode negative	V-k/f+	=	max.	125	V	
Voltage bet	ween accelerator electrode						

and any deflection plate = max. 500 V  $V_{g3/x}$ 500 V Vg3/y = max.

 $3 \text{ mW/cm}^2$ Wo Screen dissipation = max.

#### CIRCUIT DESIGN VALUES

Focusing voltage	$v_{g_2}$	=	250 to	375	V per kV of V <sub>g3</sub>
Control grid voltage for visual extinction of focused spot	$-v_{g_1}$	=	0 to	62.5	V per kV of Vg3
Deflection coefficient horizontal	$M_X$	=	66 to	90	V/cm per kV of Vg3
vertical	$M_y$	=	41 to	56	V/cm per kV of Vg3
Control grid circuit resistance	$R_{g_1}$	=	max.	0.5	$M\Omega$
Deflection plate circuit resistance	$R_x, R_y$	=	max.	5	МΩ

<sup>1)</sup> A graticule, consisting of concentric rectangles of 43.2 mm x 43.2 mm and 40 mm x 40 mm is aligned with the electrical x axis of the tube. The edges of a raster will fall between these rectangles with optimum correction potentials applied.

Oscilloscope tube with 7 cm diameter flat face plate and post deflection acceleration by means of a helical electrode. The low heater consumption together with the high sensitivity render this tube suitable for transistorized equipment.

QUICK REFERENCE D	ATA			
Final accelerator voltage	Vg6(1)	=	1200	V
Display area		=	4.5x6	cm
Deflection coefficient, horizontal	$M_X$	=	10.7	V/cm
vertical	$M_V$	=	3.65	V/cm

#### **SCREEN**

	Colour	Persistence
DH7-11	green	medium short
DN7-11	bluish green	medium short
DP7-11	yellowish green	long

Useful screen diameter

min. 68 mm

Useful scan at  $V_{g_6(1)}/V_{g_4} = 4$ 

horizontal

min. 60 mm

vertical

min. 45 mm

#### HEATING

Indirect by A.C. or D.C.; parallel supply


Heater voltage

 $V_{f} = 6.3$ 

Heater current

 $\frac{V_{\rm f}}{I_{\rm f}} = 95 \text{ m/s}$ 

# MECHANICAL DATA (Dimensions in mm)

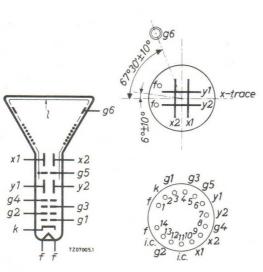



# Mounting position: any

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube

Base 14 pins all glass

# Dimensions and connections

Overall length		max.	296	mm
Face diameter		max.	77.8	mm
Net weight		approx	. 370	g

#### Accessories

Socket (supplied with tube)	type	40467
Final accelerator contact connector	type	55563
Mu-metal shield	type	55532

## CAPACITANCES

$\mathbf{x}_1$ to all other elements except $\mathbf{x}_2$	$C_{x_1(x_2)}$	=	4.0	pF
$\mathbf{x}_2$ to all other elements except $\mathbf{x}_1$	$C_{x_2(x_1)}$	=	4.0	pF
$y_1$ to all other elements except $y_2$	$C_{y_1}(y_2)$	=	3.5	pF
$y_2$ to all other elements except $y_1$	$C_{y_2(y_1)}$	=	3.5	pF
$\mathbf{x}_1$ to $\mathbf{x}_2$	$c_{x_1x_2}$	=	1.9	pF
$y_1$ to $y_2$	$C_{y_1y_2}$	=	1.7	pF
Control grid to all other elements	$C_{g_1}$	=	5.7	pF
Cathode to all other elements	$C_k$	=	3.0	pF

FOCUSING

electrostatic

DEFLECTION

double electrostatic

x plates y plates symmetrical

symmetrical

If use is made of the full deflection capabilities of the tube the deflection plates will intercept part of the electron beam; hence a low impedance deflection plate drive is desirable.

Angle between x and y traces

 $90^{\circ} \pm 1^{\circ}$ 

#### LINE WIDTH

Measured with the shrinking raster method in the centre of the screen.

Final accelerator voltage	Vg6(1)	=	1200	V
Astigmatism control electrode voltage	$v_{g_4}$	=	300	$V^2$ )
First accelerator voltage	$v_{g_2}$	=	1200	V
Beam current	I(1)	=	10	$\mu A$
Line width	l.w.	=	0.65	mm

#### HELIX

Post deflection accelerator helix resistance

min.  $40 \text{ }M\Omega$ 

<sup>2)</sup> See page 6

# TYPICAL OPERATING CONDITIONS

Final accelerator voltage	$V_{g_6(l)}$	=	1200	V
Geometry control electrode voltage	$v_{g_5}$	=	300 <u>+</u> 30	$V^1$ )
Astigmatism control electrode voltage	$v_{g_4}$	Ξ	$300 \pm \frac{40}{15}$	V 2)
Focusing electrode voltage	$v_{g_3}$	=	20 to 150	V
First accelerator voltage	$V_{g_2}$	=	1200	V
Control grid voltage for visual extinction of focused spot  Deflection coefficient	-V <sub>g1</sub>	=	30 to 80	V
horizontal	$M_x$	=	9.4 to 12	V/cm
vertical	$M_V$	=	3.2 to 4.1	V/cm
Deviation of linearity of deflection		=	max. 2	% 3)
Geometry distortion			See note 4)	
Useful scan				
horizontal		=	min. 60	mm

## CIRCUIT DESIGN VALUES

vertical


Focusing voltage	$v_{g_3}$	=	35 to	165	V per kV of Vg <sub>4</sub>
Control grid voltage for visual extinction of focused spot	$-v_{g_1}$	=	30 to	60	V per kV of V <sub>g2</sub>
Deflection coefficient at					
$V_{g_6(1)}/V_{g_4} = 4$					
horizontal	$M_X$	=	31.3 to	40.0	V/cm per kV of Vg4
vertical	$M_y$	=	10.7 to	13.7	V/cm per kV of Vg4
Control grid circuit resistance	$Rg_1$	=	max.	1.5	ΜΩ
Deflection plate circuit					
resistance	$R_{x}, R_{y}$	=	max.	50	$k\Omega$
Focusing electrode current	Ioo	=	-15 to	+10	$\mu A^{5}$ )

<sup>1)2)3)4)5)</sup> See page 6

= min. 40 mm

100	SIN.	green.
	1954	
100		
938	100	Tel.
-	_	-

LIMITING VALUES (Absolute max. rat	ting system)				
Final accelerator voltage	Vg6(1)	П	max.	5000 1200	V V
Geometry control electrode voltage	$V_{g_5}$	=	max.	2200	V
Astigmatism control electrode voltage	$V_{g_4}$		max.	2100 300	V V
Focusing electrode voltage	$v_{g_3}$	=	max.		V
First accelerator voltage	$v_{g_2}$		max. min.	1600 800	V
Control grid voltage					
negative	$-v_{g_1}$	=	max.	200	V
positive	$v_{g_1}$	=	max.	0	V
positive peak	$v_{glp}$	=	max.	2	V
Cathode to heater voltage					
cathode positive	V+k/f-	=	max.	100	V
cathode negative	V-k/f+	=	max.	15	V
Voltage between astigmatism control electrode and any deflection plate	Vg4/x	=	max.	500	V
process and any desirent process	Vg4/y	Ξ	max.	500	V
Screen dissipation	$W_{\ell}$	=	max.	3	mW/cm <sup>2</sup>
Ratio $V_{g6(l)}/V_{g4}$	$v_{g6(l)}/v_{g4}$	=	max.	4	

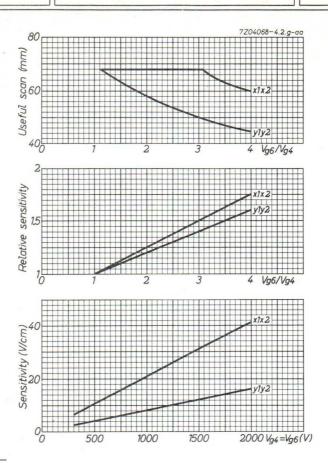

<sup>&</sup>lt;sup>1</sup>) This tube is designed for optimum performance when operating at the ratio  $V_{g_6}(\ell)/V_{g_4} = 4$ . Operation at other ratio may result in changes in deflection uniformity and geometry distortion. The geometry control electrode voltage should be adjusted for optimum performance. For any necessary adjustment its potential will be within the stated range.

<sup>2)</sup> The astigmatism control electrode voltage should be adjusted for optimum spot shape. For any necessary adjustment its potential will be within the stated range.

<sup>3)</sup> The sensitivity at a deflection of less than 75% of the useful scan will not differ from the sensitivity at a deflection of 25% of the useful scan by more than the indicated value.

<sup>4)</sup> A graticule, consisting of concentric rectangles of 40.8 mm x 40.8 mm and 39.2 mm x 39.2 mm is aligned with the electrical x axis of the tube. The edges of a raster will fall between these rectangles with optimum correction potentials applied.

<sup>&</sup>lt;sup>5</sup>) Values to be taken into account for the calculation of the focus potentiometer.

Low accelerator voltage cathode-ray tube for monitoring purposes.

QUICK REFERE	NCE DATA		
Final accelerator voltage	$V_{g_4,g_2(\ell)} =$	500	V
Display area	Both dire	ctions fu	ıll scan
Deflection coefficient, horizontal	$M_{X} =$	37	V/cm
vertical	M <sub>y</sub> =	21	V/cm

### SCREEN

	Colour	Persistence
DG7-31	yellowish green	medium

Useful screen diameter

min. 65 mm

Useful scan

horizontal

full scan

vertical

full scan

#### HEATING


Indirect by A.C. or D.C.; parallel supply

Heater voltage

 $\frac{V_f}{I_f} = 6.3 \text{ V}$ 

### MECHANICAL DATA

Dimensions in mm

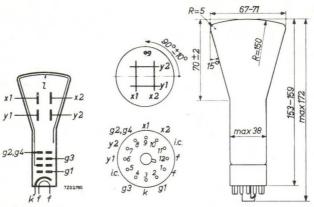

# Mounting position: any

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

Base	Duodecal	12	pins

# Dimensions and connections

See also outline drawing

Overall length max. 172 mm Face diameter max. 71 mm

Net weight: approx. 120 g

# Accessories

 Socket
 type
 2422 516 00001

 Mu-metal shield
 type
 55530

#### CAPACITANCES

 $C_{x_1(x_2)} = 3.7$  $x_1$  to all other elements except  $x_2$ pF x2 to all other elements except x1  $C_{x_2(x_1)} =$ 3.0 pF  $C_{y_1(y_2)} = 2.5$ y<sub>1</sub> to all other elements except y<sub>2</sub> pF y2 to all other elements except y1  $C_{y_2(y_1)}$ = 2.5 pF 1.7 pF x<sub>1</sub> to x<sub>2</sub>  $C_{X_1X_2}$ =  $C_{y_1y_2}$ = 1.0 pF y<sub>1</sub> to y<sub>2</sub>

Control grid to all other elements  $C_{g_1} = 7.6 \, \text{ pF}$ Cathode to all other elements  $C_k = 3.2 \, \text{ pF}$ 

FOCUSING electrostatic

**DEFLECTION** double electrostatic

x plates asymmetrical y plates symmetrical

Angle between x and y traces  $90^{\circ}\pm1.5^{\circ}$ 

## LINE WIDTH

Measured on a circle of  $50\ \mathrm{mm}\ \mathrm{diameter}$ 

Accelerator voltage  $V_{g_4,g_2(\ell)} = 500 \text{ V}$ Beam current  $I_{(\ell)} = 0.5 \mu \text{A}$ Line width  $I_{\text{ew}} = 0.4 \text{ mm}$ 

## TYPICAL OPERATING CONDITIONS

500 Accelerator voltage  $V_{g_4,g_2(\ell)}$  $V_{g_3}$ Focusing electrode voltage 0 to 120 Control grid voltage for visual -Vg1 50 to 100 extinction of focused spot  $M_{X}$ 33.3 to 41.5 V/cm Deflection coefficient, horizontal 18.8 to 23.2 V/cm  $M_{V}$ vertical Geometry distortion See note 1 page 4

Useful scan, horizontal full scan vertical full scan

LIMITING V	ALUES (Absolute max. 1	ating	system)				
Assalamatam	realtage		77 (0)	Ξ	max.	800	V
Accelerator	voltage		$V_{g_4,g_2}(l)$	=	min.	400	V
Focusing ele	ectrode voltage		$v_{g_3}$	=	max.	200	V
Control grid	i voltage						
	negative		$-V_{g_1}$	=	max.	200	V
	positive		$v_{g_1}$	=	max.	0	V
	positive peak		$v_{g_{1p}}$	=	max.	2	V
Cathode to h	neater voltage						
	cathode positive		V+k/f-	=	max.	200	V
	cathode negative		V-k/f+	=	max.	125	V
Voltage bety	ween accelerator electrod	e					
	and any deflection plate	е	$V_{g_4/x}$	=	max.	500	V
			Vg4/y	=	max.	500	V
Screen diss	ipation		We	=	max.	3	mW/cm <sup>2</sup>
CIRCUIT D	ESIGN VALUES						
Focusing vo	ltage	Vga	= 0 to	24	40 V p	er kV	of Vg

vg3 Control grid voltage for visual  $-V_{g_1}$  = 100 to 200 V per kV of  $V_{g_2}$ extinction of focused spot Deflection coefficient at  $V_g(l)/V_g$ horizontal  $M_{\chi}$  = 67 to 83 V/cm per kV of  $V_{g}$  $M_V$  = 37.6 to 46.4 V/cm per kV of  $V_g$ vertical  $R_{g_1} = max.$  0.5  $M\Omega$ Control grid circuit resistance Deflection plate circuit  $R_X, R_V = max.$  5  $M\Omega$ resistance  $I_g = -15 \text{ to } +10 \mu A^2$ Focusing electrode current

Remark: A contrast improving transparent conductive coating connected to g4, g2 is present between glass and fluorescent layer. This enables the application of a high potential to g4, g2 with respect to earth, without the risk of picture distortion by touching the face (electrostatic body-effect)

<sup>1)</sup> A graticule, consisting of concentric rectangles of 43.2 mm x 43.2 mm and 40 mm x 40 mm is aligned with the electrical x axis of the tube. The edges of a raster will fall between these rectangles with optimum correction potentials applied.

<sup>2)</sup> Values to be taken into account for the calculation of the focus potentiometer.

Low accelerator voltage cathode-ray tube for monitoring purposes.

QUICK REFERENCE	DATA
Final accelerator voltage	Vg4g2(1)= 500 V
Display area	Both directions full scan
Deflection coefficient, horizontal	$M_X = 37 \text{ V/cm}$
vertical	$M_y = 21 \text{ V/cm}$

### SCREEN

	Colour	Persistence
DG7-32	yellowish green	medium short

Useful screen diameter

min. 65 mm

Useful scan

horizontal

full scan

vertical

full scan

#### HEATING

Indirect by A.C. or D.C.; parallel supply

Heater voltage


 $V_{\rm f} = 6.3$ 

Heater current

 $I_f = 300 \text{ mA}$ 

# MECHANICAL DATA

Dimensions in mm

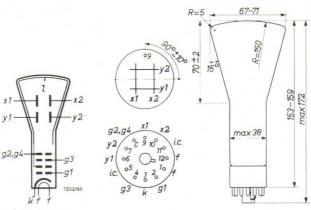

Mounting position: any

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

Base Duodecal 12 pins

# Dimensions and connections

See also outline drawing

Overall length max. 172 mm Face diameter max. 71 mm

Net weight: approx. 120 g

# Accessories

Socket type 2422 516 00001

Mu-metal shield type 55530

#### CAPACITANCES

$x_1$ to all other elements except $x_1$	2	$C_{x_1}(x_2)$	=	3.7	pF
$\mathbf{x}_2$ to all other elements except $\mathbf{x}$	1	$C_{x_2}(x_1)$	=	3.0	pF
$y_1$ to all other elements except $y_2$	2	$C_{y_1}(y_2)$	=	2.5	pF
y <sub>2</sub> to all other elements except y	1.	$C_{y_2}(y_1)$	=	2.5	pF
$\mathbf{x}_1$ to $\mathbf{x}_2$		$C_{x_1x_2}$	=	1.7	pF
$y_1$ to $y_2$		$C_{y_1y_2}$	=	1.0	pF
Control grid to all other element	S	$c_{g_1}$	=	7.6	pF
Cathode to all other elements		$C_k$	=	3.2	pF

FOCUSING electrostatic

**DEFLECTION** double electrostera

x plates symmetrical y plates symmetrical

Angle between x and y traces  $90^{\circ} \pm 1.5^{\circ}$ 

### LINE WIDTH

Measured on a circle of 50 mm diameter

Accelerator voltage	$V_{g_4,g_2(\ell)} =$	500	V
Beam current	I(() =	0.5	$\mu A$
Line width	1.w. =	0.4	mm

## TYPICAL OPERATING CONDITIONS

Accelerator voltage	$V_{g_4,g_2(l)}$	=		500	V	
Focusing electrode voltage	$v_{g_3}$	=	0 to	120	V	
Control grid voltage for visual extinction of focused spot	$-v_{g_1}$	=	50 to	100	V	
Deflection coefficient, horizontal	$M_X$	=	33.3 to	41.5	V/cm	
vertical	My	=	18.8 to	23.2	V/cm	
Geometry distortion		Se	ee note 1	page	4	
Useful scan, horizontal		fu	ll scan			
vertical		fu	ll scan			

LIMITING VALUES (Absolute max. rating system)

Accelerator voltage	$V_{g_4,g_2}(l)$	-	max.		
	g4, g2 (x)	=	min.	400	V
Focusing electrode voltage	$v_{g_3}$	=	max.	200	V
Control grid voltage					
negative	-Vg <sub>1</sub>	=	max.	200	V
positive	$v_{g_1}$	=	max.	0	V
positive peak	$v_{g_{1p}}$	=	max.	2	V
Cathode to heater voltage					
cathode positive	V+k/f-	=	max.	200	V
cathode negative	V-k/f+	=	max.	125	V
Voltage between accelerator electrode	е				
and any deflection plate	$V_{g_4/x}$	=	max.	500	V
		=	max.	500	V
Screen dissipation	W	=	max.	3	$mW/cm^2$
CIRCUIT DESIGN VALUES					
		-			

 $V_{g_3}$  = 0 to 240 V per kV of  $V_{g}$ Focusing voltage Control grid voltage for visual  $-V_{g_1}$  = 100 to 200 V per kV of  $V_{g_2}$ extinction of focused spot Deflection coefficient at  $V_{g4g2(\ell)}/V_g$  $M_X$  = 67 to 83 V/cm per kV of  $V_g$ horizontal  $M_V = 37.6 \text{ to } 46.4 \text{ V/cm per kV of } V_{\varphi}$ vertical  $R_{g_1} = max.$  0.5  $M\Omega$ Control grid circuit resistance Deflection plate circuit  $R_X, R_V = max.$  5  $M\Omega$ resistance Focusing electrode current  $I_g = -15 \text{ to } +10 \mu \text{A}^2$ )

<sup>1)</sup> A graticule, consisting of concentric rectangles of 43.2 mm x 43.2 mm and 40 mm x 40 mm is aligned with the electrical x axis of the tube. The edges of a raster will fall between these rectangles with optimum correction potentials applied.

<sup>2)</sup> Values to be taken into account for the calculation of the focus potentiometer.

Remark: A contrast improving transparent conductive coating connected to  $g_4$ ,  $g_2$  is present between glass and fluorescent layer. This enables the application of a high potential to  $g_4$ ,  $g_2$  with respect to earth, without the risk of picture distortion by touching the face (electrostatic body-effect)

Oscilloscope tube with 7 cm diameter flat face-plate. The tube is intended for small service oscilloscopes.

QUICK REFER	ENCE DATA	A		
Final accelerator voltage	$v_{g_4g_2}$	(l)=	1500	V
Display area		=	5.7 x 6.8	cm
Deflection coefficient, horizontal	$M_X$	=	27.3	V/cm
vertical	$M_y$	=	18.8	V/cm

#### SCREEN

Pa	Colour	Persistence
DG7-36	yellowish green	medium
DN7-36	bluish green	medium short

Useful scan

horizontal min. 68 mm vertical min. 57 mm


#### HEATING

Indirect by A.C. or D.C.; parallel supply

Heater voltage  $V_f = 6.3 \text{ V}$ Heater current  $I_f = 300 \text{ mA}$ 

## MECHANICAL DATA

Dimensions in mm

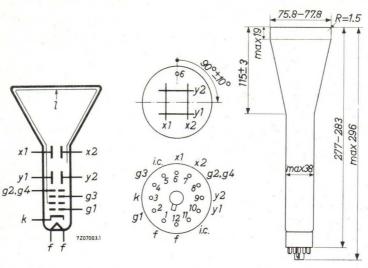

# Mounting position: any

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

Base

Duodecal 12 pins

## Dimensions and connections

See also outline drawing

Overall length max. 296 mm

Face diameter max. 77.8 mm

Net weight: approx. 370 g

Accessories

Socket type 2422 516 00001

Mu-metal shield type 55531

 $C_{x_1(x_2)} = 6.0 \text{ pF}$ 

 $C_{x_2(x_1)} = 6.0 \text{ pF}$  $C_{y_1(y_2)} = 4.7 \text{ pF}$ 

 $C_{y_2(y_1)} = 4.7 \text{ pF}$  $C_{x_1x_2} = 1.9 \text{ pF}$ 

 $C_{y_1y_2} = 1.7 \text{ pF}$   $C_{g_1} = 5.7 \text{ pF}$ 

 $C_k = 3.3 \text{ pF}$ 

 $V_{g_4}, g_2(\ell) = 1500 \text{ V}$   $I(\ell) = 0.5 \mu \text{A}$ 

 $= 0.4 \, \text{mm}$ 

l.w.

#### CAPACITANCES

$x_1$ to all other elements except $x_2$
$x_2$ to all other elements except $x_1$
$\mathbf{y}_1$ to all other elements except $\mathbf{y}_2$
$\mathbf{y}_2$ to all other elements except $\mathbf{y}_1$
VI to V

### DEFLECTION

**FOCUSING** 

double electrostatic

symmetrical

symmetrical

If use is made of the full deflection capabilities of the tube the deflection plates will intercept part of the electron beam; hence a low impedance deflection plate drive is desirable.

Angle between x and y traces

$$90^{\circ} \pm 1^{\circ}$$

#### LINE WIDTH

Measured on a circle of 50 mm diameter

Final accelerator voltage	
Beam current	
Line width	

#### TYPICAL OPERATING CONDITIONS

Accelerator voltage	Vg4, g2(1)	= 1	500	V
Focusing electrode voltage	$v_{g_3}$	= 247 to	397	V
Control grid voltage for visual extinction of focused spot	$-V_{g_1}$	= 40 to	80	V
Deflection coefficient				
horizontal	$M_X$	= 24.5 to	30	V/cm
vertical .	My	= 17.0  to  2	0.5	V/cm
Deviation of linearity of deflection		= max.	2	$\%^{1}$ )
Geometry distortion		See note 2		
Useful scan				
horizontal		= min.	68	mm
vertical		= min.	57	mm
LIMITING VALUES (Absolute max. ratin	ng system)			
Final accelerator voltage		= max. 2500 = min. 1000		
Focusing electrode voltage	Vg3	= max. 1000	V	
Control grid voltage				
negative	-Vg1 :	= max. 200	V	
positive	$v_{g_1}$	= max. 0	V	

positive peak Cathode to heater voltage

cathode positive 
$$V_{+k/f-} = max. 200 \text{ V}$$
  
cathode negative  $V_{-k/f+} = max. 125 \text{ V}$ 

Voltage between final accelerator and any deflection plate

and any deflection plate 
$$V_{g_4,\,g_2/x_p} = \max. \quad 500 \quad V$$
 
$$V_{g_4,\,g_2/y_p} = \max. \quad 500 \quad V$$
 
$$V_{g_4,\,g_2/y_p} = \max. \quad 500 \quad V$$
 Screen dissipation 
$$W_{\ell} = \max. \quad 3 \quad \text{mW/cm}^2$$

= max.

<sup>1)</sup> The sensitivity at a deflection of less than 75% of the useful scan will not differ from the sensitivity at a deflection of 25% of the useful scan by more than the indicated value.

<sup>2)</sup> A graticule, consisting of concentric rectangles of 40.8 mm x 40.8 mm and 39.2 mm x 39.2 mm is aligned with the electrical x axis of the tube. The edges of a raster will fall between these rectangles with optimum correction potentials applied.

#### CIRCUIT DESIGN VALUES

Focusing voltage 
$$V_{g_3} = 165 \text{ to } 265 \text{ V per kV of } V_{g_4, g_2}$$

Control grid voltage for visual extinction of focused spot 
$$-V_{g_1}$$
 = 27 to 53 V per kV of  $V_{g_4,g_2}$ 

Deflection coefficient

horizontal 
$$M_X = 16.3 \text{ to } 20.0 \text{ V/cm per kV of V}_{g_4, g_2}$$

vertical 
$$M_y = 11.2 \text{ to } 13.7 \text{ V/cm per kV of } V_{g_4}, g_2$$

Control grid circuit

resistance 
$$R_{g_1} = max$$
. 1.5  $M\Omega$ 

Deflection plate circuit

resistance 
$$R_x$$
,  $R_y$  = max. 5  $M\Omega$ 


Focusing electrode current 
$$I_{g3} = -15 \text{ to } +10 \mu \text{A}^3$$
)



 $<sup>^1</sup>$ ) The sensitivity at a deflection of less than 75% of the useful scan will not differ from the sensitivity at a deflection of 25% of the useful scan by more than the indicated value.

<sup>2)</sup> A graticule, consisting of concentric rectangles of 40.8 mm x 40.8 mm and 39.2 mm x 39.2 mm is aligned with the electrical x axis of the tube. The edges of a raster will fall between these rectangles with optimum correction potentials applied.

 $<sup>^{3}</sup>$ ) Values to be taken into account for the calculation of the focus potentiometer.

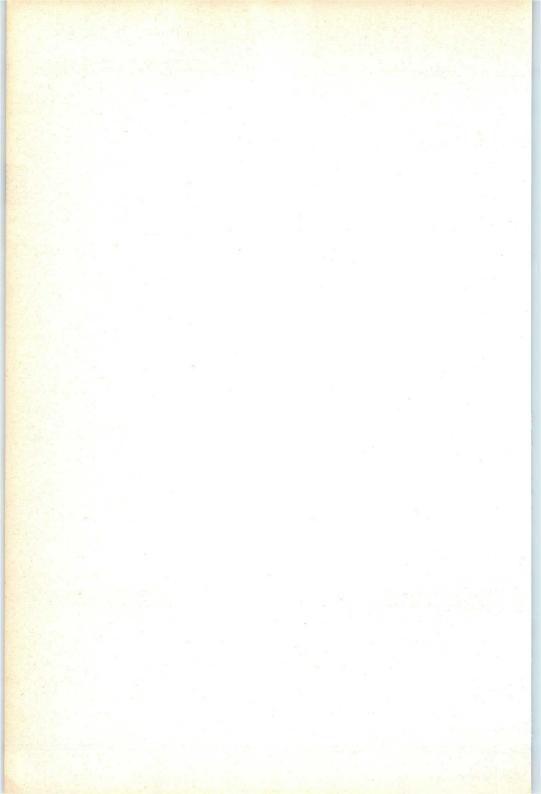

Oscilloscope tube with 7 cm diameter flat faceplate and post deflection acceleration by means of a helical electrode. The tube is intended for small service oscilloscopes.

QUICK REFERENCE	CE DATA			1 1
Final accelerator voltage	Vg6(1)	=	1200	V
Display area		=	4.5x6	cm
Deflection coefficient, horizontal	$M_X$	=	10.7	V/cm
vertical	$M_y$	=	3.65	V/cm

#### SCREEN

	Colour	Persistence
DH7 - 78	green	medium short
DN7 - 78	bluish green	medium short
DP 7 - 78	yellowish green	long

Useful screen diameter

min. 68 mm

min. 60 mm

Useful scan at  $V_{g_6(\ell)}/V_{g_4} = 4$ 

horizontal

vertical min. 45 mm

# HEATING

Indirect by A.C. or D.C.; parallel supply


Heater voltage


Heater current

 $\frac{V_f}{I_f} = \frac{6.3}{300} \frac{V}{mA}$ 

### MECHANICAL DATA

Dimensions in mm

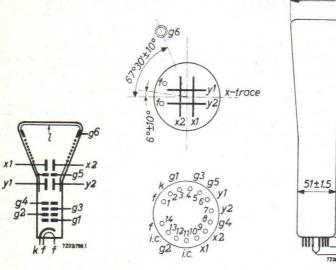

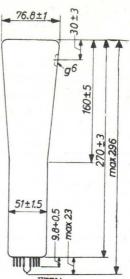

14 pins all glass

# Mounting position: any

Rase

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

Dase	14 pins	arr gra	00	
Dimensions and connections				
Overall length	max.	296	mm	
Face diameter	max.	77.8	mm	
Net weight	approx	. 370	g	
Accessories				
Socket (supplied with the tube)	type	40467		
Final accelerator contact connector	type	55563		
Mu-metal shield	type	55532		

#### CAPACITANCES

x <sub>1</sub> to all other elements except x <sub>2</sub>	$C_{x_1(x_2)}$	=	3.5	pF	
$\mathbf{x}_2$ to all other elements except $\mathbf{x}_1$	$C_{x_2(x_1)}$	=	3.5	pF	
y <sub>1</sub> to all other elements except y <sub>2</sub>	$C_{y_1(y_2)}$	=	3.0	pF	
$\mathbf{y}_2$ to all other elements except $\mathbf{y}_1$	$C_{y_2(y_1)}$	=	3.0	pF	
$x_1$ to $x_2$	$C_{x_1x_2}$	=	1.7	pF	
$y_1$ to $y_2$	$C_{y_1y_2}$	=	1.6	pF	
Control grid to all other elements	$C_{g_1}$	= ,	3.5	pF	
Cathode to all other elements	$C_k$	=	2.6	pF	

**FOCUSING** 

electrostatic

DEFLECTION

double electrostatic

x plates

symmetrical

y plates

symmetrical

If use is made of the full deflection capabilities of the tube the deflection plates will intercept part of the electron beam; hence a low impedance deflection plate drive is desirable.

Angle between x and y traces

 $90 \pm 1^{\circ}$ 

#### LINE WIDTH

Measured with the shrinking raster method in the centre of the screen.

Final accelerator voltage	$V_{g_6(l)}$	=	1200	V
Astigmatism control electrode voltage	V <sub>g4</sub>	Ŧ	300	$V^2$ )
First accelerator voltage	$V_{g_2}$	=	1200	V
Beam current	I(2)	=	10	μΑ
Line width	l.w.	=	0.65	mm

#### HELIX

Post deflection accelerator helix resistance

min.  $40 M\Omega$ 

<sup>2)</sup> See page 5



TYPICAL	OPERATING	CONDITIONS

TYPICAL OPERATING CONDIT	<b>FIONS</b>				
Final accelerator voltage	$V_{g_6(\ell)}$	=	1200	4000	V
Geometry control electrode voltage	V	=	300 ± 30	1000 ± 100	v 1)
	$v_{g_5}$		500 1 50	1000 - 100	. ,
Astigmatism control electrode voltage	$v_{g_4}$	=	300 ± 40	1000 ± 50	V <sup>2</sup> )
Focusing electrode voltage	$v_{g_3}$	=	20 to 150	35 to 165	V
First accelerator voltage	$v_{g_2}$	=	1200	1000	V
Control grid voltage for visual extinction of					
focused spot	$-v_{g_1}$	=	36 to 72	30 to 60	V
Modulation voltage for $I(\ell) = 10 \mu A$	$v_{g_1}$	=	max. 25	max. 25	V
Deflection coefficient					
horizontal	$M_X$	=	9.4 to 12	31.3 to 40.0	V/cm
vertical	$M_{y}$	=	3.2 to 4.1	10.7 to 13.7	V/cm
Deviation of linearity of deflection		=	max. 2	max. 2	% <sup>3</sup> )
Geometry distortion			See note 4		
Useful scan					
horizontal		=	min. 60	60	mm
vertical		=	min. 45	45	mm
CIRCUIT DESIGN VALUES					
Focusing voltage	$V_g$	=	35 to 165	V per kV of V	g <sub>4</sub>
Control grid voltage for visual extinction of focused spot	$-v_{g_1}$	=	30 to 60	V per kV of V	$g_2$
Deflection coefficient at $V_{g_6(\ell)}$					-2
horizontal	M <sub>X</sub>	=	31.3 to 40.0	V/cm per kV	of VgA
vertical	$M_{V}$			V/cm per kV	0.1
Control grid circuit resistance	$R_{g_1}$	=	max. 1.5	$M\Omega$	-1
Deflection plate circuit	61				
resistance	$R_{x}, R_{y}$	=	max. 50	kΩ	
Focusing electrode current	$I_{g_3}$	=	-15 to +10	$\mu$ A <sup>5</sup> )	

## **LIMITING VALUES** (Absolute max. rating system)

Final accelerator voltage	$V_{g_6(\ell)}$	=	max. min.		V V
Geometry control electrode voltage	$v_{g_5}$	=	max.	2200	V
Astigmatism control electrode voltage	$v_{g_4}$	=	max. min.	2100 300	V V
Focusing electrode voltage	$v_{g_3}$	=	max.	1000	V
First accelerator voltage	$v_{g_2}$	=	max. min.	1600 800	V V
Control grid voltage					
negative	$-v_{g_1}$	=	max.	200	V
positive	$v_{g_1}$	=	max.	0	V
positive peak	$v_{g_{1p}}$	=	max.	2	V
Cathode to heater voltage					
cathode positive	V <sub>+k/f</sub> -	=	max.	200	V
cathode negative	$V_{-k/f+}$	=	max.	125	V
Voltage between astigmatism control	V <sub>g4/x</sub> V <sub>g4/y</sub>	=	max.	500	V
electrode and any deflection plate	$V_{g_4/y}$	=	max.	500	V
Screen dissipation	$\mathbf{w}_{\ell}$	=	max.	3	$mW/cm^2$
Ratio $V_g 6_{(1)}/V_g 4$	$V_g6_{(l)}/V_g4$	=	max.	4	

 $<sup>^{1})</sup>$  This tube is designed for optimum performance when operating at the ratio  $v_{g_{6}(\ell)}/v_{g_{4}}$  = 4. Operating at other ratio may result in changes in deflection uniformity and geometry distortion. The geometry control electrode voltage should be adjusted for optimum performance. For any necessary adjustment its potential will be within the stated range.


<sup>2)</sup> The astigmatism control electrode voltage should be adjusted for optimum spot shape. For any necessary adjustment its potential will be within the stated range.

<sup>3)</sup> The sensitivity at a deflection of less than 75% of the useful scan will not differ from the sensitivity at a deflection of 25% of the useful scan by more than the indicated value.

<sup>4)</sup> A graticule, consisting of concentric rectangles of 40.8 mm x 40.8 mm and 39.2 mm x 39.2 mm is aligned with the electrical x axis of the tube. The edges of a raster will fall between these rectangles with optimum correction potentials applied.

<sup>5)</sup> Values to be taken into account for the calculation of the focus potentiometer.



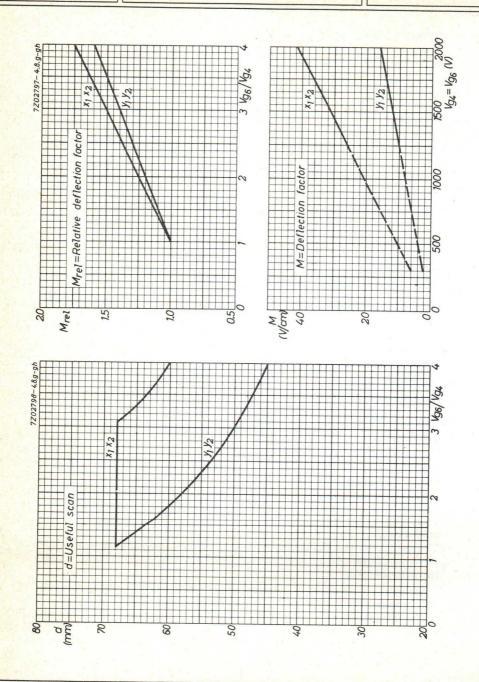

#### SCREEN

	colour	persistence
DG10-6	yellowish green	medium
DP10-6	yellowish green	long

HEATING: Indirect by A.C. or D.C.; parallel supply

Heater voltage


Heater current

 $\frac{V_{\rm f}}{I_{\rm f}} = \frac{6.3 \text{ V}}{300 \text{ mA}}$ 

### MECHANICAL DATA

Dimensions in mm

Base: Magnal

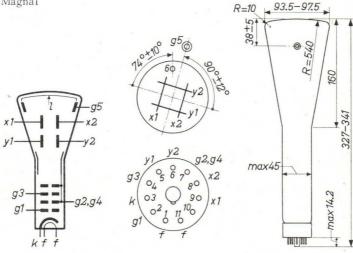

Accessories

Socket

type 2422 515 00001

**FOCUSING** 

electrostatic

DEFLECTION

double electrostatic

x plates

symmetrical

y plates

symmetrical

Angle between x and y traces

 $90 + 1.5^{\circ}$ 

## TYPICAL OPERATING CONDITIONS

Final accelerator voltage	$V_{g_5(\ell)}$	4000	V
First accelerator voltage	$v_{g_4,g_2}$	2000	V
Focusing electrode voltage	$v_{g_3}$	400 to 720	V

Control grid voltage for visual

extinction of focused spot  $-V_{g_1} \hspace{1cm} 45 \text{ to } 100 \hspace{0.2cm} V$  Deflection coefficient, horizontal  $M_X \hspace{1cm} 40 \text{ to } 52.5 \hspace{0.2cm} V/\text{cm}$ 

vertical  $M_V$  32 to 40 V/cm

# LIMITING VALUES

Final accelerator voltage  $V_{g_5(\ell)}$  max. 5000 V First accelerator voltage  $V_{g_4,g_2}$  max. 2500 V

#### **SCREEN**

r	colour	persistence
DG10-74 DP10-74	yellowish green	medium long

**HEATING:** Indirect by A.C. or D.C.; parallel supply

Heater voltage


Heater current

 $\frac{V_f}{I_f} = \frac{6.3 \text{ V}}{300 \text{ mA}}$ 

## MECHANICAL DATA

Dimensions in mm

Base: Magnal

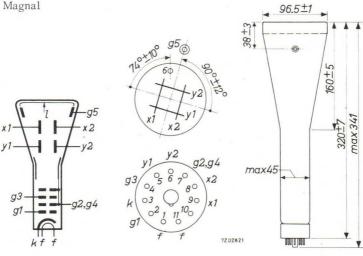

Accessories

Socket

type 2422 515 00001

FOCUSING

electrostatic

DEFLECTION

double electrostatic

x plates

symmetrical

y plates

symmetrical

Angle between x and y traces

90 + 1.50

 $M_V$ 

### TYPICAL OPERATING CONDITIONS

Final accelerator voltage	Vg5(1)	4000	V
First accelerator voltage	$v_{g_4,g_2}$	2000	V
Focusing electrode voltage	$v_{g_3}$	400 to 720	V

Control grid voltage for visual extinction of focused spot

-Vg1 40 to 52.5 V/cm  $M_X$ Deflection coefficient, horizontal

vertical

32 to 40 V/cm

45 to 100 V

# LIMITING VALUES

max. 5000 V Final accelerator voltage  $V_{g_5(l)}$  $v_{g_2,g_4}$ max. 2500 V First accelerator voltage

General purpose cathode-ray tube with flat face and post deflection acceleration by means of a helical electrode.

#### SCREEN

,	Colour	Persistence		
DH10-78	green	medium short		
DN10-78	bluish green	medium short		
DP10-78	yellowish green	long		

#### HEATING


Indirect by A.C. or D.C.; parallel supply

Heater voltage


Heater current

 $\frac{V_f}{I_f} = \frac{6.3}{300} \frac{V}{mA}$ 

### MECHANICAL DATA

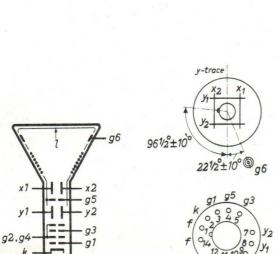

7701612

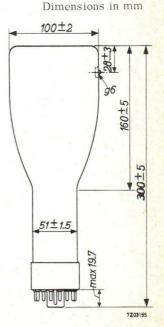

7207006.1

Base

Diheptal 12 pins

Accessories

Socket type 2422 517 00001

Final accelerator contact connector type 55560

Mu-metal shield type 55541

FOCUSING

electrostatic

**DEFLECTION** double electrostatic

x plates symmetrical

y plates symmetrical

Is use is made of the full deflection capabilities of the tube the deflection plates will intercept part of the electron beam; hence a low impedance deflection plate  $\operatorname{driv}\mathbf{e}$  is desirable.

Angle between x and y traces

 $90 \pm 1^{\circ}$ 

# TYPICAL OPERATING CONDITIONS

Final accelerator voltage	$V_{g_6(\ell)}$	=		4000	V
Geometry control electrode voltage	$V_{g_5}$	= "	1000	<u>+</u> 100	$_{\alpha}V$
Astigmatism control electrode voltage	$V_{g_4,g_2}$	=	1000	$\pm$ 50	V
Focusing electrode voltage	$v_{g_3}$	=	150 t	0 350	V
Control grid voltage for visual					

Control grid voltage for visual

extinction of focused spot  $-V_{g_1} = 22.5 \text{ to } 37.5 \text{ V}$ 

Deflection coefficient

horizontal  $M_X$  = 29 to 39 V/cm vertical  $M_V$  = 9.4 to 12.6 V/cm

Deviation of linearity of deflection = max. 2 %


Useful scan

horizontal = min. 75 mm

vertical = min, 55 mm

# LIMITING VALUES (Absolute max. rating system)

		-	0000	V
Final accelerator voltage	$V_{g_6(l)}$	=	max, 8000 min, 1500	
Geometry control electrode voltage	$v_{g_5}$	=	max. 2200	V
Astigmatism control electrode	V	=	max. 2100	V
voltage	$v_{g_4,g_2}$	=	min. 1000	V
Focusing electrode voltage	$v_{g_3}$	=	max. 1500	V
Control grid voltage,				
negative	$-v_{g_1}$	=	max. 200	V
positive	$v_{g_1}$	=	max. 0	V
positive peak	$v_{g_{1p}}$	=	max. 2	V
Cathode to heater voltage,				
cathode positive	$V_{+k/f}$	=	max. 200	V
cathode negative	V-k/f+	=	max. 125	V
Voltage between astigmatism control electrode	$v_{g_4,g_2/x}$	=	max. 500	V
and any deflection plate	Vg4,g2/y	=	max. 500	V
Screen dissipation	W	=	max. 3	mW/cm <sup>2</sup>
Ratio Vg6(1)Vg4,g2	$V_{g_6(\ell)}/V_{g_4,g_2}$	=	max. 4	

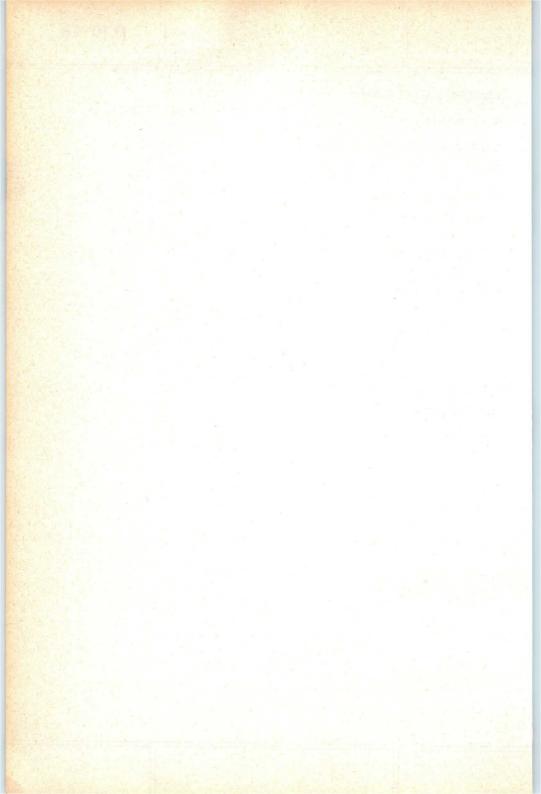

The DG13-2 is a 13 cm spherical faced cathode ray tube primarily intended for inexpensive service oscilloscopes.

QUICK REFE	RENCE DA	ATA		
Final accelerator voltage	-	$V_{g_5}(l)$	4	kV
Display area		Both directions full scan		
Deflection coefficient, horizontal		$M_X$	31	V/cm
vertical		$M_y$	26.5	V/cm

#### SCREEN

	colour	persistence	
DG13-2	yellowish green	medium	
DP 13-2	yellowish green	long	

Useful screen diameter

min. 114 mm

Useful scan, horizontal

full scan

vertical

full scan

#### HEATING

Indirect by A.C. or D.C.; parallel supply

Heater voltage


 $V_f$  6.3 V

Heater current

 $I_f$  300 mA

# MECHANICAL DATA

Dimensions in mm

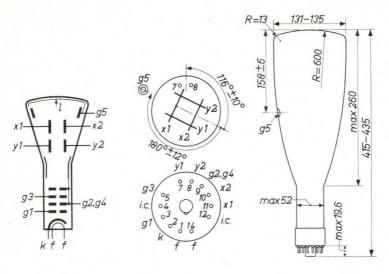

# Mounting position: any

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

Base		Diheptal				
Dimensions and connections						
Overall length			max.	435	mm	
Face diameter			max.	135	mm	
Accessories						
Socket			type	2422	2 517 00001	
Final accelerator contact connector		type	55	5560		
Mu-metal shield			type	55	5550	

#### CAPACITANCES

$\mathbf{x}_1$ to all other elements except $\mathbf{x}_2$	$C_{x_1(x_2)}$	5.5 pF
$\mathbf{x}_2$ to all other elements except $\mathbf{x}_1$	$C_{x_2(x_1)}$	5.5 pF
$\mathbf{y}_1$ to all other elements except $\mathbf{y}_2$	$C_{y_1(y_2)}$	4.7 pF
$y_2$ to all other elements except $y_1$	$C_{y_2(y_1)}$	4.7 pF
$\mathbf{x}_1$ to $\mathbf{x}_2$	$C_{x_1x_2}$	2.5 pF
$y_1$ to $y_2$	$C_{y_1y_2}$	1.9 pF
Control grid to all other elements	$C_{g_1}$	4.6 pF
Cathode to all other elements	$C_{\mathbf{k}}$	6.0 pF

**FOCUSING** 

electrostatic

DEFLECTION

double electrostatic

x plates

symmetrical

y plates

symmetrical

Angle between x and y traces

 $90 \pm 10$ 

#### LINE WIDTH

Measured on a circle of 50 mm diameter

Final accelerator voltage	$V_{g_5}(\ell)$	4000	V	
First accelerator voltage	$v_{g_4,g_2}$	2000	V	
Beam current	I(Q)	0.5	μΑ	
Line width	1.w.	0.3	mm	

TYPICAL OPERATING CONDITIONS				
Final accelerator voltage	Vg5	(1)	4000	V
First accelerator voltage	Vg4	g <sub>2</sub>	2000	V
Focusing electrode voltage	$V_{g_3}$		to 720	V
Control grid voltage for visual extinction of focused spot	-V <sub>g1</sub>	45	to 100	V
Deflection coefficient, horizontal	$M_X$	27	to 35	V/cm
vertical	$M_{y}$	24	to 29	V/cm
Useful scan, horizontal		ful	1 scan	
vertical		ful	l scan	
LIMITING VALUES				
Final accelerator voltage	Vg5(1)	max.	5000	V
Final accelerator voltage	$V_{g_4,g_2}$	max.	2500	V
Focusing electrode voltage	$v_{g_3}$	max.	1000	V
Control grid voltage,	- 0			
negative	-Vg1	max.	200	V
positive	$v_{g_1}$	max.	0	V
positive peak	$v_{g_{1p}}$	max.	2.	V
Cathode to heater voltage,	P			
cathode positive	V+k/f-	max.	200	V
cathode negative	V-k/f+	max.	125	V
Voltage between accelerator and any deflection plate	Vg <sub>4</sub> /x	max.	500	V
	$V_{g_{4}/y}$	max.	500	V
Screen dissipation	We	max.	3	mW/cm



# INSTRUMENT CATHODE-RAY TUBE

13 cm diameter oscilloscope tube for inexpensive oscilloscopes.

QUICK REFEREN	CE DATA				
Final accelerator voltage	V <sub>g4</sub> , <sub>g2</sub> (1)	2	kV		
Display area	Both directi	Both directions full scan			
Deflection coefficient, horizontal	$M_X$	26	V/cm		
vertical	$M_y$	21	V/cm		

#### SCREEN

	colour	persistence
DG13-32	yellowish green	medium

#### HEATING

Indirect by A.C. or D.C.; parallel supply


Heater voltage


Heater current

 $\frac{V_{\rm f}}{I_{\rm f}} \frac{6.3}{600} \frac{V}{\rm mA}$ 

#### MECHANICAL DATA

Dimensions in mm

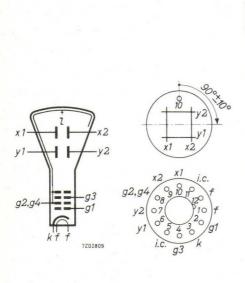

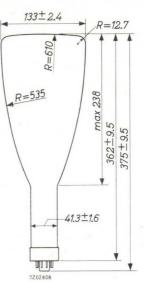

Mounting position: any

Base

Duodecal 12 p

## Accessories

Socket

Final accelerator contact connector

Mu-metal shield

type 2422 516 00001

type 55560

type 55550

FOCUSING electrostatic

**DEFLECTION** double electrostatic

x plates symmetrical y plates symmetrical


Angle between x and y traces  $90 \pm 1^{\circ}$ 

TYPICAL	OPERATING	CONDITIONS

Accelerator voltage	Vg4,g2(1)	4	2000	V	
Focusing electrode voltage	$v_{g_3}$	340 to	640	V	
Control grid voltage for visual extinction of focused spot	-V <sub>g1</sub>	max.	90	V	
Deflection coefficient, horizontal	$M_{\mathbf{x}}$	22 to	30	V/cm	
vertical	$M_{y}$	18.2 to 2	24.2	V/cm	
Useful scan, horizontal		full	scan		
vertical		full	scan		
LIMITING VALUES					
Final accelerator voltage	$V_{g_4,g_2(\ell)}$ max.	2500	V		

Final accelerator voltage	$V_{g_4,g_2(\ell)}$	max.	2500	V
Focusing electrode voltage	$v_{g_3}$	max.	1000	V
Control grid voltage,				
negative	$-v_{g_1}$	max.	200	V
positive	$v_{g_1}$	max.	0	V
positive peak	$v_{g_{1p}}$	max.	2 -	V
Cathode to heater voltage,				
cathode positive	$V_{+k/f}$	max.	200	V
cathode negative	$V_{-k/f+}$	max.	125	V
Voltage between				
and any deflection plate	$V_{g_4/x}$	max.	500	V
	$v_{g_4/y}$	max.	500	V
Screen dissipation	$W_{\varrho}$	max.	3	mW/cm <sup>2</sup>



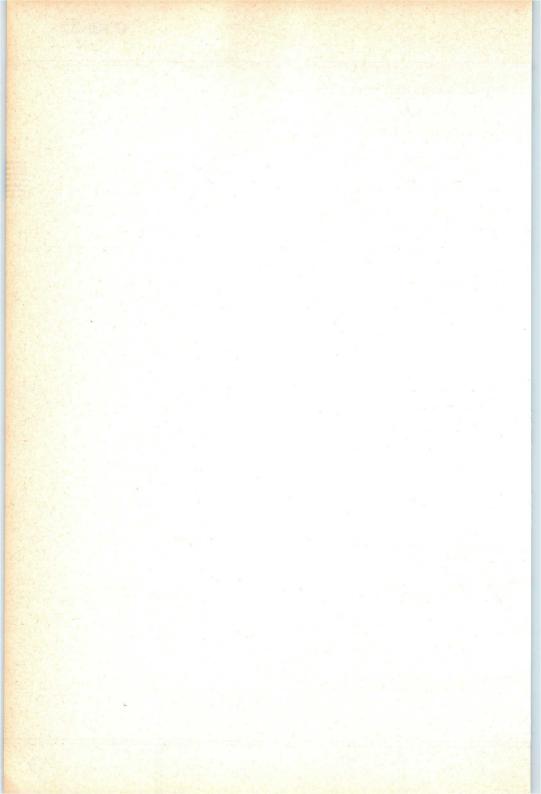

# INSTRUMENT CATHODE-RAY TUBE

13 cm diameter flat faced oscilloscope tube for general purpose oscilloscopes.

QUICK REFERENCE DATA							
Final accelerator voltage	$V_{g_5}(\ell)$	4	kV				
Display area		10.2 x 10.2	cm				
Deflection coefficient, horizontal	$M_X$	23.7	V/cm				
vertical	$M_y$	17.7	V/cm				

#### **SCREEN**

-	colour	persistence
DG13-34	yellowish green	medium short
DP 13-34	yellowish green	long

Useful screen diameter

min. 114 mm

Useful scan at  $V_{g_5}(\ell)/V_{g_4,g_2} = 2$ 

horizontal min. 102 mm

vertical min. 102 mm

#### HEATING

Indirect by A.C. or D.C.; parallel supply


Heater voltage  $V_{\mathbf{f}}$  6.3 V

Heater current

#### MECHANICAL DATA

Dimensions in mm

133±1.5

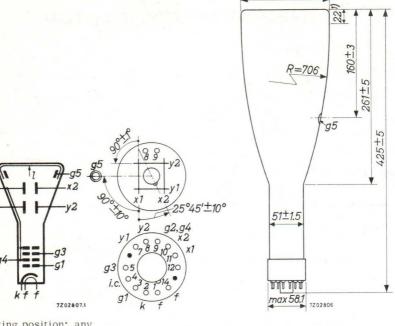

#### Mounting position: any

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

Base	Diheptal 12 p

#### Dimensions and connections

Overall length max. 430 mm

Face diameter max. 134.5 mm

Net weight approx. 1100 g

#### Accessories

Socket type 2422 517 00001

Final accelerator contact connector type 55560

Mu-metal shield type 55550

<sup>1)</sup> Lower side of straight part.

#### CAPACITANCES

-					
X	1 to all other elements except x2	$C_{x_1(x_2)}$	4	pF	
X	$_2$ to all other elements except $\mathrm{x}_1$	$C_{x_2(x_1)}$	4	pF	
У	1 to all other elements except y <sub>2</sub>	$C_{y_1(y_2)}$	4	pF	
У	2 to all other elements except y <sub>1</sub>	$C_{y_2(y_1)}$	4	pF	
х	1 to x2	$C_{x_1x_2}$	2.5	pF	
У	1 to y2	$C_{y_1y_2}$	1.1	pF	
C	Control grid to all other elements	$c_{g_1}$	5	pF	
C	Cathode to all other elements	Ck	4	pF	

**FOCUSING** 

electrostatic

DEFLECTION

double electrostatic

x plates

symmetrical

y plates

symmetrical

If use is made of the full deflection capabilities of the tube the deflection plates will intercept part of the electron beam; hence log regardance deflection plate drive is desirable.

Angel between x and y traces

 $90 \pm 10$ 

#### LINE WIDTH

Measured on a circle of 50 mm diameter.

Final accelerator voltage	$V_{g_5(\ell)}$	4000	17.
First accelerator voltage	$V_{g_4,g_2}$	2000	V
Beam current	I(L)	0.5	$\mu A$
Line width	1.w.	0.3	mm

# Notes to page 4

- 1) The sensitivity at a deflection of less than 75% of the useful scan will not differ from the sensitivity at a deflection of 25% of the useful scan by more than the indicated value.
- 2) A graticule, consisting of concentric rectangles of 81.6 mm x 81.6 mm and 78.4 mm x 78.4 mm is aligned with the electrical x axis of the tube. The edges of a raster will fall between these rectangles with optimum correction potentials applied.

TYPICAL OPERATING CONDITIONS		N	
		1 1 1 1	
Final accelerator voltage	$V_{g_5(\ell)}$	4000	V
First accelerator voltage	$v_{g_4,g_2}$	2000	V
Focusing electrode voltage	$v_{g_3}$	400 to 690	V
Control grid voltage for visual extinction of focused spot	on -V <sub>g1</sub>	45 to 75	V
Deflection coefficient, horizontal	$M_{ m X}$	21.2 to 26.2	V/cm
vertical	$ m M_{ m V}$	15.8 to 19.6	V/cm
Deviation of linearity of deflection	max.	2	% <sup>1</sup> )
Geometry distortion		see note 2	
Useful scan, horizontal	min.	102	mm
vertical	min.	102	mm
LIMITING VALUES			
Final accelerator voltage	$v_{g_5(\ell)}$	max. 6000 min. 1000	V V
First accelerator voltage	$v_{g_4,g_2}$	max. 2600	V
Focusing electrode voluge	V <sub>g3</sub>	max. 1000	V
Control grid voltage,	55	min. 1000	V
negative	$-v_{g_1}$	max. 200	V
positive	$v_{g_1}$	max. 0	V
positive peak	$v_{g_{1p}}$	max. 2	V
Cathode to heater voltage,	ЭТр		
cathode positive	$V_{+k/f}$	max. 200	V
cathode negative	V-k/f+	max. 125	V
Voltage between			
and any deflection plate	$v_{g_4/x}$	max. 500	V
	$V_{g_4/y}$	max. 500	V
Cathode current	$I_{k_{eff}}$	max.	mA
Screen dissipation	$W_{\ell}$	max. 3	W/cm <sup>2</sup>

Ratio  $V_{g_5}(l)/V_{g_4,g_2}$ 

 $V_{g_5}(l)/V_{g_4,g_2}$  max. 2.3

<sup>1), 2)</sup> See page 3


#### CIRCUIT DESIGN VALUES

Focusing voltage	$v_{g_3}$	200 to 345	V per kV of Vg4,g2		
Control grid voltage for visual extinction of focused spot	$-v_{g_1}$	22.5 to 37.5	V per kV of V <sub>g4</sub> , <sub>g2</sub>		
Deflection coefficient at $V_{g_5}(\ell)/V_{g_4} = 2$					
horizontal	$M_X$	10.6 to 13.1	V/cm per kV of Vg4,g2		
vertical	$M_y$	7.9 to 9.8	V/cm per kV of Vg4,g2		
Control grid circuit resistance	$Mg_1$	max. 1.5	ΜΩ		
Deflection plate circuit resistan	$ceR_{x},R_{y}$	max. 1	MΩ		
Focusing electrode current	$I_{g_3}$	-15 to $+15$	$\mu A^{3}$ )		

 $<sup>^{1}</sup>$ ) The sensitivity at a deflection of less than 75% of the useful scan will not differ from the sensitivity at a deflection of 25% of the useful scan by more than the indicated value.

<sup>2)</sup> A graticule, consisting of concentric rectangles of 81.6 mm x 81.6 mm and 78.4 mm x 78.4 mm is aligned with the electrical x axis of the tube. The edges of a raster will fall between these rectangles with optimum correction potentials applied.

<sup>3)</sup> Values to be taken into account for the calculation of the focus potentiometer.

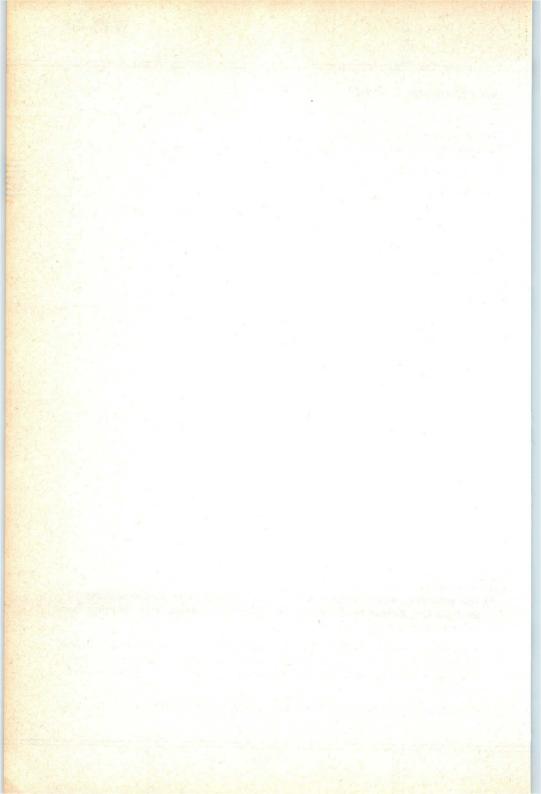

# INSTRUMENT CATHODE-RAY TUBE

10 cm diameter flat faced double gun oscilloscope tube, post-deflection acceleration by means of a helical electrode and low interaction between traces. The tube features beam-blanking.

QUICK REFERENCE DATA				
Final accelerator voltage	V <sub>g8</sub> (1)	3000	V	
Display area	horizontal f	ull scan 7	cm	
Deflection coefficient, horizontal	$M_X$	15	V/cm	
vertical	$M_{y}$	7	V/cm	

#### SCREEN

	colour	persistence
E10-12GH	green	medium short
E10-12GM	yellowish green	long
E10-12GP	bluish green	medium short

Useful screen diameter

min. 85 mm

Useful scan (each gun) at  $V_{g_8}(\ell)/V_{g_5} = 3$ 

horizontal

full scan

vertical

min. 70 mm

The useful scan may vertically be shifted to a max. of 5 mm with respect to the geometric centre of the face plate.


#### HEATING

Indirect by A.C. or D.C.; parallel supply

Heater voltage Heater current

each gun

 $\frac{V_{f}}{I_{f}} \frac{6.3}{300} \frac{V}{mA}$ 

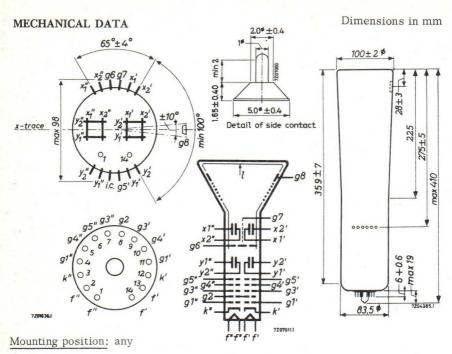

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

Base		14 pin all glass		
Dimensions and connections				
Overall length	max.	410	mm	
Face diameter	max.	102	mm	
Net weight	appro	x. 800	g	
Accessories				
Socket, supplied with tube	type	55566		
Final accelerator contact connector	type	55563		
Side contact connector	type	55561		
Mu-metal shield	type	55545		

CAPACITANCES	(each	gun)
--------------	-------	------

x <sub>1</sub> ' to all elements except x <sub>2</sub> '	$C_{x_1}'(x_2')$	4.5	pF	
$x_2$ ' to all elements except $x_1$ '	$C_{x_2}'(x_1')$	3	pF	
$x_1$ " to all other elements except $x_2$ "	$C_{x_1}''(x_2'')$	3	pF	
$x_2$ " to all other elements except $x_1$ "	C <sub>x2</sub> "( <sub>x1</sub> ")	4.5	pF	
y1 to all other elements except y2	$C_{y_1}(y_2)$	2	pF	
$\mathbf{y}_2$ to all other elements except $\mathbf{y}_1$	$C_{y_2}(y_1)$	2	pF	
$x_1$ to $x_2$	$C_{x_1x_2}$	2	pF	
y1 to y2	$C_{y_1y_2}$	1.5	pF	
Grid No.1 to all other elements	$C_{g_1}$	5.2	pF	
Cathode to all other elements	Ck	5	pF	

#### FOCUSING

electrostatic

#### DEFLECTION

double electrostatic

x plates symmetrical y plates symmetrical

Angle between x and y traces

 $90 \pm 1^{\circ}$ 

Angle between x-traces  $\pm 0.8^{\circ}$  max. in the centre of the screen.

Angle between y-traces  $\pm$   $1^{\circ}$  max. in the centre of the screen.

If use is made of the full deflection capabilities of the tube the deflection plates will intercept part of the electron beam; hence a low impedance deflection plate drive is desirable.

#### LINE WIDTH

Measured with the shrinking raster method in the centre of the screen.

Final accelerator voltage	Vg8(1)	3000	V
Astigmatism control electrode voltage	$v_{g_5}$	1000	$V^3$ )
First accelerator voltage	$v_{g_2}$	1000	V
Beam current	$I_{g_8}(\ell)$	10	$\mu$ A
Line width	1.w.	0.50	mm

#### HELIX

Post deflection accelerator helix resistance:	min.	100	$M\Omega$

<sup>3)</sup> See page 6.

TYPICAL	<b>OPERATING</b>	CONDITIONS(e	ach gun)
---------	------------------	--------------	----------

Final accelerator voltage	Vg8(1)	3000	V
Intergun shield voltage	Vg7	1000±100	$V^{1}$ )
Geometry control electrode voltage	Vg6	1000 <u>+</u> 100	$V^{1})^{2}$
Astigmatism control electrode voltage	Vg <sub>5</sub>	1000±100	V 3)
Focusing electrode voltage	$v_{g_4}$	180 to 380	V
Deflection blanking electrode voltage	$v_{g_3}$	1000	V
Deflection blanking control voltage for beam blanking of a current $I_{g_9}(\ell)$ = 10 $\mu A$	$\Delta V_{g_3}$	max. 40	V
First accelerator voltage	$v_{g_2}$	1000	V
Control grid voltage for visual extinction of focused spot	$v_{g_1}$	-25 to -90	V
Deflection coefficient, horizontal	$M_{X}$	12 to 18	V/cm
vertical	$M_y$	6 to 8	V/cm
Deviation of linearity of deflection		max. 2.5	% <sup>4</sup> )
Geometry distortion		See note 5	
Interaction factor		2.10-3	mm/Vdc 6)
Tracking error		1.5	mm <sup>7</sup> )

<sup>1)2)3)4)5)6)7)</sup> See page 6

# LIMITING VALUES (each gun, if applicable) (Absolute max. rating system)

Final accelerator voltage	Vg8(1)	max.	3300 2700	V
Intergun shield voltage	Vg7	max.	1200	v
Geometry control electrode voltage	Vg <sub>6</sub>	max.	1200	V
Astigmatism control electrode voltage	$v_{g_5}$	max.	1200 800	V V
Focusing electrode voltage	$V_{g_4}$	max.	1200	V
Beam blanking electrode voltage	$V_{g_3}$	max.	1200	V
First accelerator voltage	$v_{g_2}$	max. min.	1200 200	V V
Control grid voltage,				
negative	$-v_{g_1}$	max.	200	V
positive	$v_{g_1}$	max.	0	V
positive peak	$v_{g_{1p}}$	max.	2	V
Cathode to heater voltage,				
cathode positive	v <sub>kf</sub>	max.	200	V
cathode negative	-V <sub>kf</sub>	max.	125	V
Average cathode current	$I_{\mathbf{k}}$	max.	300	μΑ
Screen dissipation	$W_{\ell}$	max.	3	mW/cm <sup>2</sup>
Ratio Vg8(1)/Vg5	$V_{g_8}(l)/V_{g_5}$	max.	3	

#### CIRCUIT DESIGN VALUES (each gun, if applicable)

Focusing voltage	$v_{g_4}$	180 to 380	V/kV of Vg2
Control grid voltage for visual cut-off focused spot	$v_{g_1}$	25 to <b>-</b> 90	V/kV of Vg <sub>2</sub>
Deflection coefficient $V_{g_8}(\ell)/V_{g_5} = 3$			
horizontal	$M_X$	10 to 20	$V/cm$ per $kV$ of $V_{g_5}$
vertical	My	6 to 8	V/cm per kV of Vg5
Focusing electrode current	$I_{g_4}$	-15 to +10	$\mu$ A
Control grid circuit resistance	Rg <sub>1</sub>	max. 1.5	$M\Omega$

<sup>1)</sup> This tube is designed for optimum performance when operating at the ratio  $V_{g8}(\varrho)/V_{g5}$  = 3. Operation at other ratio may result in changes in deflection uniformity and geometry distortion. The geometry control electrode voltage and the intergunshield voltage should be adjusted for optimum performance. For any necessary adjustment its potential will be within the stated range.

<sup>2)</sup> This voltage should be equal to the mean x- and y plates potential.

<sup>3)</sup> The astigmatism control electrode voltage should be adjusted for optimum spot shape. For any necessary adjustment its potential will be within the stated range.

<sup>4)</sup> The sensitivity at a deflection of less than 75% of the useful scan will not differ from the sensitivity at a deflection of 25% of the useful scan by more than the indicated value.

<sup>5)</sup> A graticule consisting of concentric rectangles of 60 mm x 60 mm and 57 mm x 57 mm is aligned with electrical x axis of the tube. The edges of a raster will fall between these rectangles with optimum potentials applied.

<sup>6)</sup> The deflection of one beam when balanced dc voltage are applied to the deflection plates of the other beam, will not be greater than the indicated value.

<sup>7)</sup> With 50 mm vertical traces superimposed at the tube face centre and deflected horizontally ± 4 cm by voltages proportional to the relative deflection factors, horizontal separation of the corresponding points of the traces shall not be greater than the indicated value.

# INSTRUMENT CATHODE-RAY TUBE

10 cm diameter metal-backed flat-faced double gun oscilloscope tube with post-deflection acceleration by means of a helical electrode and low interaction between beams.

QUICK REFERENCE DATA					
Final accelerator voltage	$V_{g_8}(\ell)$	4000	V		
Display area	horizontal vertical	fu 7	ll scan		
Deflection coefficient, horizontal	$M_X$	17	V/cm		
vertical	$M_y$	7.4	V/cm		

#### SCREEN

	Colour	Persistence
E10-130GH E10-130GM	green yellowish green	medium short
E10-130GP	bluish green	medium short

Useful screen diameter

min. 85 mm

Useful scan (each gun) at  $V_{g_8}(\ell)/V_{g_5} = 4$ 

horizontal full scan

vertical

min. 70 mm

The useful scan may be shifted vertically to a maximum of 5 mm with respect to the geometric centre of the face plate.

#### HEATING


Indirect by A.C. or D.C.; parallel supply

Heater voltage

Heater current

 $\frac{V_{\rm f}}{I_{\rm f}}$  6.3 V  $\frac{V_{\rm f}}{I_{\rm f}}$  300 mA

# MECHANICAL DATA

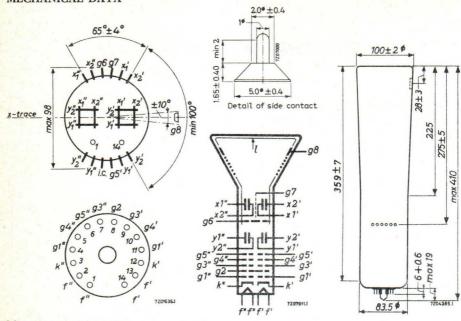

# Mounting position: any

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

Base 14 pin, all glass			
Dimensions and connections			
Overall length	max.	410	mm
Face diameter	max.	102	mm
Net weight	approx.	800	g
Accessories			
Socket, supplied with tube	type	55566	
Final-accelerator contact connector	type	55563	
Side contact connector	type	55561	
Mu-metal shield	type	55545	

max. 0.6

max. 1

#### CAPACITANCES

x1' to all other elements	s except x2'	$C_{x_1}'(x_2')$	4.5	pF	
x2' to all other elements	s except x1'	$C_{x_2}'(x_1')$	3	pF	
x1" to all other elements	s except x2"	C <sub>x1</sub> "( <sub>x2</sub> ")	3	pF	
x2" to all other elements	s except x1"	$C_{x_2}$ " $(x_1$ ")	4.5	pF	
y <sub>1</sub> to all other elements	except y2	$C_{y_1}(y_2)$	2	pF	
y2 to all other elements	except y <sub>1</sub>	$C_{y_2}(y_1)$	2	pF	
x <sub>1</sub> to x <sub>2</sub>		$C_{x_1x_2}$	2	pF	
y <sub>1</sub> to y <sub>2</sub>		$C_{y_1y_2}$	1.5	pF	
Grid No.1 to all other e	lements	$C_{g_1}$	5.2	pF	
Cathode to all other elements	ments	$C_k$	5	pF	
FOCUSING	Electrostatic				
DEFLECTION	Double electrostatic				
x plates	symmetrical				
y plates	symmetrical				
Angle between x and y	traces (each gun)		90 ± 1	0	

If use is made of the full deflection capabilities of the tube the deflection plates will intercept part of the electron beam; hence a low impedance deflection plate drive is desirable.

#### LINE WIDTH

Angle between corresponding x traces at the centre of the screen

Angle between corresponding y traces at the centre of the screen

Measured with the shrinking-raster method in the centre of the screen.

Final accelerator voltage	$V_{g_8}(\ell)$	4000	V
Astigmatism-control electrode voltage	$V_{g5}$	1000	V 2)
First accelerator voltage	$v_{g_2}$	1000	V
Beam current	Ig8(1)	10	μΑ
Line width	1.w.	0.4	mm
HELIX			
Post-deflection accelerator helix resistance		min. 100	$M\Omega$

<sup>2)</sup> See page 5

Interaction factor

Tracking error

Final accelerator voltage	$V_{g_8}(\ell)$		4000	V		
Intergun shield voltage	Vg7	1000	+100	V		1)
Geometry-control electrode voltage	$V_{g_6}$	1000	<u>+</u> 100	V		1)
Astigmatism-control electrode voltage	$v_{g_5}$	1000	<u>+</u> 100	V		2)
Focusing electrode voltage	$v_{g_4}$	200 to	320	V		
Deflection-blanking electrode voltage	$v_{g_3}$		1000	V		
Deflection-blanking control voltage for blanking a beam current $I_{g_8}(\ell) = 10  \mu$		max.	40	V		
First accelerator voltage	$v_{g_2}$		1000	V		
Control grid voltage for extinction of focused spot	$v_{g_1}$	-25 to	-90	V		
Deflection coefficient, horizontal	$M_X$	14 t	o 20	V/cm	1	
vertical	$M_V$	6.4 to	8.4	V/cm	1	1,0
Deviation of linearity of deflection		max.	2	%		3)
Geometry distortion		seen	ote 4			

TYPICAL OPERATING CONDITIONS (each gun, if applicable)

LIMITING VALUE	ES (each gun.	, if applicable	) (Absolute max.	rating system)

( 8 , 11	, ,		0 ,	
Final accelerator voltage	$V_{g_8}(l)$	max.	5000	V
That accelerator voltage	80	min.	2700	V
Intergun shield voltage	Vg7	max.	1200	V
Geometry control electrode voltage	$v_{g_6}$	max.	1200	V
Astigmatism control electrode voltage	$v_{g_5}$	max.	1200	V
	23	min.	800	V
Focusing electrode voltage	$v_{g_4}$	max.	1200	V
Beam blanking electrode voltage	$V_{g_3}$	max.	1200	V
First accelerator voltage	$v_{g_2}$	max.	1200	V
Tilbe accelerator voltage	82	min.	200	V
Control grid voltage, negative	$-v_{g_1}$	max.	200	V
positive	$v_{g_1}^{s_1}$	max.	0	V
Cathode to heater voltage,	-1			
cathode positive	Vkf	max.	125	V
cathode negative	-V <sub>kf</sub>	max.	125	V
Average cathode current	$I_{\mathbf{k}}$	max.	300	$\mu$ A
Screen dissipation	$W_{\ell}$	max.	3	$mW/cm^2$
Ratio Vg8(1)/Vg5	Vg8(1)/Vg5	max.	4	



max.  $2.10^{-3}$  mm/ $V_{DC}^{5}$ )

1.2 mm

<sup>1)2)3)4)5)6)</sup> See page 5

#### CIRCUIT DESIGN VALUES (each gun, if applicable)

Focusing voltage	$v_{g_4}$	200 to 320 V per kV of Vg <sub>2</sub>
Control grid voltage for extinction of focused spot	$v_{g_1}$	-25 to -90 V per kV of $V_{g_2}$
Deflection coefficient at $V_{g_8}(l)/V_{g_5} = 4$		
horizontal	$M_X$	14 to 20 V/cm per kV of $V_{g5}$
vertical	$M_y$	$6.4 \text{ to } 8.4 \text{ V/cm per kV of Vg}_5$
Focusing electrode current	$I_{g_4}$	-15 to +10 μA
Control grid circuit resistance	$R_{g_1}$	max. $1.5 \mathrm{M}\Omega$

 $<sup>^{1})</sup>$  This tube is designed for optimum performance when operating at the ratio  $v_{g_8}(\mathbf{r})/v_{g_5}$  = 4. Operation at higher ratio may result in changes in deflection uniformity and geometry distortion. The geometry control electrode voltage and the intergun shield voltage should be adjusted for optimum performance. For any necessary adjustment its potential will be within the stated range.

<sup>2)</sup> The astigmatism control electrode voltage should be adjusted for optimum spot shape. For any necessary adjustment its potential will be within the stated range.

<sup>&</sup>lt;sup>3</sup>) The sensitivity at a deflection of  $\leq$ 75% of the useful scan will not differ from the sensitivity at a deflection of 25% of the useful scan by more than the indicated value.

<sup>4)</sup> A graticule consisting of concentric rectangles of 60 mm x 60 mm and 57.5 mm x 57.5 mm is aligned with the electrical x axis of the tube. The edges of a raster will fall between these rectangles with optimum potentials applied.

<sup>5)</sup> The deflection of one beam when balanced DC voltages are applied to the deflection plates of the other beam, will not be greater than the indicated value.

 $<sup>^6</sup>$ ) With 50 mm vertical traces superimposed at the tube face centre and deflected horizontally  $\pm 4$  cm by voltages proportional to the relative deflection factors, horizontal separation of the corresponding points of the traces will not be greater than the indicated value.



# **MONITOR TUBES**

PREFERED TYPES

(Recommended types for new designs)

M17-140W

M17-141W

M24-100W

M38-120W

# MONITOR TUBE

17 cm flat-faced rectangular picture tube primarily intended for use as a viewfinder in television cameras.

QUICK REFERENCE DATA	
Deflection angle, diagonal	70 0
Focusing	electrostatic
Resolution	min. 1100 lines
Overall length	max. 234 mm

#### **SCREEN**


Metal-backed phosphor

Luminescence white Useful rectangle  $\min. 124 \times 93 \text{ mm}^2$ 

#### HEATING

Indirect by A.C. or D.C.; parallel supply

 $\begin{array}{cccc} \text{Heater voltage} & & \underline{\text{V}_{f}} & \text{6.3 V} \\ \text{Heater current} & & \underline{\text{I}_{f}} & \text{300 mA} \end{array}$ 

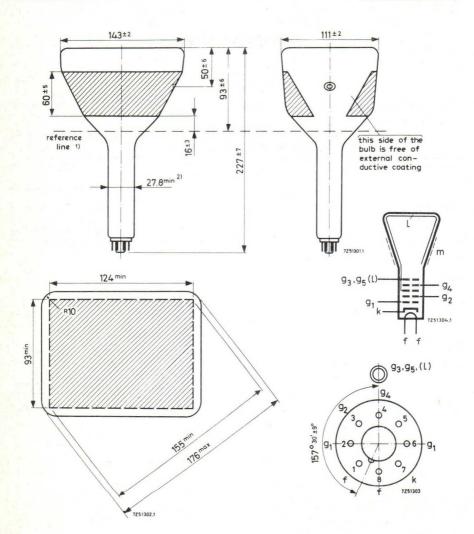

<sup>1)</sup> Reference line, determined by the plane of the upper edge of the flange of the reference line gauge when the gauge is resting on the cone.

<sup>2)</sup> The maximum dimension is determined by the reference line gauge.

#### MECHANICAL DATA (continued)

Mounting position: any

Base: Neo Eightar (B8H)

Cavity contact CT8

Accessories

Socket 2422 501 06001

Final-accelerator contact connector 55563

FOCUSING Electrostatic


The range of focus voltage shown under "Typical operating conditions" results in optimum focus at a beam current of 50  $\mu \rm A$  .

**DEFLECTION** Magnetic

Diagonal deflection angle 70°


REFERENCE LINE GAUGE

Dimensions in mm

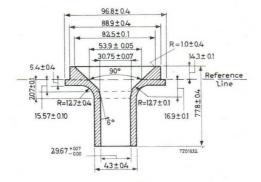

#### REMARK

With the high voltage used with this tube internal flash-overs may occur, which may destroy the cathode. Therefore it is necessary to provide protective circuits using sparkgaps. The sparkgaps must be connected as follows:

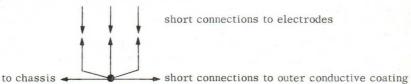

No other connections between outer conductive coating and chassis are permissible.

#### CAPACITANCES

Final accelerator to external			
conductive coating	$C_{g_3,g_5(\ell)/m}$	300	pF
Cathode to all other elements	$C_k$	5	pF
Grid No.1 to all other elements	$C_{g_1}$	7	pF

#### TYPICAL OPERATING CONDITIONS

Final accelerator voltage	$V_{g_3,g_5(\ell)}$	14	kV
Focusing electrode voltage	$v_{g_4}$	0 to 400	V
First accelerator voltage	$v_{g_2}$	400	V
Grid No.1 voltage for extinction of focused raster	$v_{g_1}$	-30 to -62	V

#### RESOLUTION

Resolution at screen centre measured with the shrinking raster method

at 
$$V_{g_3,g_5(\ell)} = 14 \text{ kV}$$
,  $V_{g_2} = 400 \text{ V}$ ,  $I_{\ell} = 50 \mu\text{A}$ ,  $B = 50 \text{ mcd/cm}^2$  (500 Nit) min. 1000 lines 1) at  $V_{g_3,g_5(\ell)} = 16 \text{ kV}$ ,  $V_{g_2} = 600 \text{ V}$ ,  $I_{\ell} = 50 \mu\text{A}$ ,  $B = 60 \text{ mcd/cm}^2$  (600 Nit) min. 1100 lines 1)

### LIMITING VALUES (Absolute max. rating system)

Final accelerator vo	ltage	V	max.	16	kV	
Tillal accelerator voltage		$V_{g_3,g_5(\ell)}$	min.	12	kV	
Focusing electrode	voltage	$V_{g_A}$	max.	1	kV	
Focusing electrode voltage		${}^{\mathrm{V}_{\mathrm{g}_{4}}}_{-\mathrm{V}_{\mathrm{g}_{4}}}$	max.	500	V	
First accelerator vo	ltage		max.	800	V	
Tilst accelerator vo	itage	$v_{g_2}$	min.	300	V	
Cathode to heater vo	oltage, positive	$V_{\mathbf{k}\mathbf{f}}$	max.	250	V	
	positive peak	V <sub>kf</sub> <sub>p</sub>	max.	300	$V^2$ )	
	negative	$-V_{\mathbf{kf}}^{\mathbf{P}}$	max.	135	V	
	negative peak	-Vkf-	max.	180	V	

#### WARNING

X-ray shielding of the cone is advisable to give protection against possible danger of personal injury arising from prolonged exposure at close range to this tube when operated above 14 kV.

<sup>1)</sup> If necessary the resolution can be improved by the use of a beam centring magnet. This magnet, type number 3322 142 11401, together with directions for use, is supplied on request.

<sup>2)</sup> During a warm-up period not exceeding 15 s the heater may be 410 V negative with respect to the cathode.

# MONITOR TUBE

17 cm flat-faced rectangular picture tube primarily intended for use as a viewfinder in television cameras. The tube is provided with a bonded face plate and a metal mounting band.

QUICK REFERENCE DATA			
Deflection angle, diagonal		70	0
Focusing	ele	ctro	static
Resolution	min. 11	100	lines
Overall length	max. 2	240	mm

#### SCREEN

Metal-backed phosphor

Luminescence white

Useful rectangle min. 124 x 93 mm<sup>2</sup>


#### HEATING

Indirect by A.C. or D.C.; parallel supply

Heater voltage  $\frac{V_f}{M} = \frac{6.3 \text{ V}}{M}$ 

#### MECHANICAL DATA

Dimensions in mm

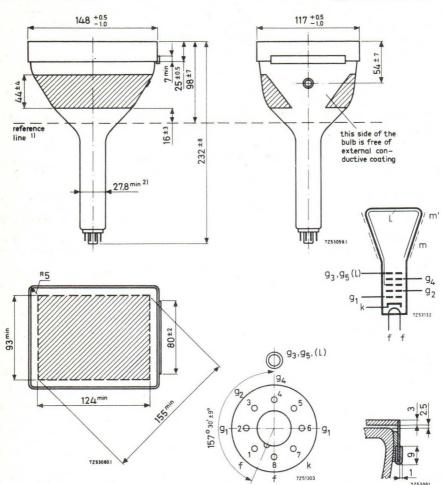

<sup>1)</sup> Reference line, determined by the plane of the upper edge of the flange of the reference line gauge when the gauge is resting on the cone.

<sup>2)</sup> The maximum dimension is determined by the reference line gauge.

#### MECHANICAL DATA (continued)

Mounting position: any

Base: Neo Eightar (B8H)

Cavity contact CT8

Accessories

Socket 2422 501 06001

Final-accelerator contact connector 55563

FOCUSING Electrostatic


The range of focus voltage shown under "Typical operating conditions" results in optimum focus at a beam current of 50  $\mu A$ .

**DEFLECTION** Magnetic

Diagonal deflection angle 70°

REFERENCE LINE GAUGE

Dimensions in mm

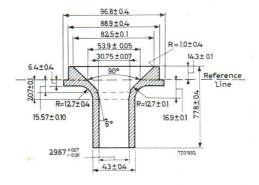

#### REMARK

With the high voltage used with this tube internal flash-overs may occur, which may destroy the cathode. Therefore it is necessary to provide protective circuits using sparkgaps. The sparkgaps must be connected as follows:

short connections to electrodes

to chassis short connections to outer conductive coating

No other connections between outer conductive coating and chassis are permissible.



#### CAPACITANCES

Final accelerator to metal band Final accelerator to external	$C_{g_3,g_5(\ell)/m}$	135 pF
conductive coating Cathode to all other elements Grid No.1 to all other elements	$C_{g_3,g_5(\ell)/m}$ $C_k$ $C_{g_1}$	240 pF 5 pF 7 pF

#### TYPICAL OPERATING CONDITIONS

Final accelerator voltage	$V_{g_3,g_5}(\ell)$	14	16 kV	
Focusing electrode voltage	$V_{g_4}$	0 to 400	0 to 400 V	
First accelerator voltage	$v_{g_2}$	400	600 V	
Grid No.1 voltage for extinction				
of focused raster	$v_{g_1}$	-30  to  -62	-40 to -90 V	

#### RESOLUTION

Resolution at screen centre measured with the shrinking raster method

at 
$$V_{g_3,g_5(\ell)} = 14 \text{ kV}$$
,  $V_{g_2} = 400 \text{ V}$ ,  $I_{\ell} = 50 \mu\text{A}$ ,  $B = 50 \text{ mcd/cm}^2$  (500 Nit) min. 1000 lines <sup>1</sup>) at  $V_{g_3,g_5(\ell)} = 16 \text{ kV}$ ,  $V_{g_2} = 600 \text{ V}$ ,  $I_{\ell} = 50 \mu\text{A}$ ,  $B = 60 \text{ mcd/cm}^2$  (600 Nit) min. 1100 lines <sup>1</sup>)

### LIMITING VALUES (Absolute max. rating system)

Final accelerator voltage	V	max.	18	kV
Tillar accelerator voltage	$V_{g_3,g_5(l)}$	min.	12	kV
Focusing electrode voltage	$V_{g_A}$	max.	1	kV
rocusing electrode voltage	${\overset{ m Vg_4}{-V_{g_4}}}$	max.	500	V
First accelerator voltage		max.	800	V
First accelerator voltage	$v_{g_2}$	min.	300	V
Cathode to heater voltage, positive	$V_{kf}$	max.	250	V
positive peak	$V_{kf_n}$	max.	300	$V^2$ )
negative	V <sub>kf</sub> <sub>p</sub> -V <sub>kf</sub>	max.	135	V
negative peak	-V <sub>kfp</sub>	max.	180	V

#### WARNING

X-ray shielding of the cone is advisable to give protection against possible danger of personal injury arising from prolonged exposure at close range to this tube when operated above 14 kV.

<sup>1)</sup> If necessary the resolution can be improved by the use of a beam centring magnet. This magnet, type number 3322 142 11401, together with directions for use, is supplied on request.

<sup>2)</sup> During a warm-up period not exceeding  $15\,\mathrm{s}$  the heater may be  $410\,\mathrm{V}$  negative with respect to the cathode.

# MONITOR TUBE

 $21\ \mathrm{cm}$  rectangular television tube with metal-backed screen primarily intended for use as a precision monitor.

QUICK REFERE	NCE DATA	
Deflection angle	90	0
Focusing	electros	tatic
Resolution	min. 650	lines
Overall length	max. 222	mm

#### SCREEN

Metal backed phosphor

Lumenescence white

Useful diagonal min. 195 mm Useful width min. 180 mm

Useful height min. 135 mm

#### HEATING

Indirect by A.C. or D.C.; parallel supply

heater voltage  $V_f = 11 V + 10\%$ 

heater current  $I_f = 70 \text{ mA}$ 

#### CAPACITANCES

Final accelerator to external

conductive coating  $C_{g3,g5(l)/m} = max. 375 pF$ 

Cathode to all other elements  $C_k = 5.0 \text{ pF}$ 

Grid No.1 to all other elements  $C_{g_1} = 9.0 pF$ 

# Dimensions in mm MECHANICAL DATA max 156 max 202.5 200±1.5 154±1.5 13.9 R=686 R=597 R=597 R=686 100±4 R=70 max 2.5 85° 1) 1) max 25 25 64 min 27,8 <sup>2)</sup> g3,g5,(1) 157°30' ±9° min 180 91 R=38 R=470 min 135 R=310 93,95,(L) useful screen area

## Mounting position: any

Except vertical with the screen downward and the axis of the tube making an angle of less than 20  $^{\rm O}$  with the vertical.

#### MECHANICAL DATA (continued)

Base: Neo Eightar (B8H)

Cavity contact CT8

Accessories

Final accelerator connector type 55563 Socket 2422 501 06001

FOCUSING electrostatic


The range of focus voltage shown under "Typical operating conditions" results in optimum focus at a beam current of 100  $\mu\text{A}_{\star}$ 

**DEFLECTION** magnetic

Diagonal deflection angle 90°

REFERENCE LINE GAUGE

Dimensions in mm

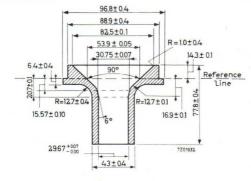

#### TYPICAL OPERATING CONDITIONS

Final accelerator voltage	$v_{g_3,g_5(\ell)}$	=	12	kV
Focusing electrode voltage	$v_{g_4}$	=	0 to 400	V
First accelerator voltage	$v_{g_2}$	=	400	V
Grid No.1 voltage for visual extinction of focused raster (grid drive service)	$-v_{g_1}$	= ,	32 to 69	V
Cathode voltage for visual extinction of focused raster (cathode drive service)	$v_k$	=	29 to 62	V

1) Reference line

<sup>2)</sup> The maximum dimension is determined by the reference line gauge

#### RESOLUTION

Resolution at screen centre

min. 650 lines

Measured at:

$$V_{g_3,g_5(\ell)} = 12 \text{ kV}$$

$$V_{g_2}$$

16 1-17

This tube will resolve 650 lines measured at a brightness of 340 Nits based on a picture height of 135 mm.

The focus voltage is adjusted to obtain the smallest roundest spot. For optimum overall resolution an external centring magnet may be required.

#### LIMITING VALUES (Absolute max. rating system)

Final accelerator	vvoltamo	77		IIIaA.	10	NV	
rillar accelerator	voitage	$V_{g_3,g_5(\ell)}$	=	min.	9	kV	

#### Focus voltage

positive 
$$V_{g_4} = max. 1000 V$$
negative  $-V_{g_4} = max. 500 V$ 

First accelerator voltage 
$$V_{g_2} = max. 800 \text{ V}$$

### Grid No.1 voltage

positive 
$$V_{g_1} = \max_{i=1}^{n} 0 V_{g_1}$$

positive peak 
$$V_{g_{1p}} = \max_{s} 2 V$$

negative 
$$-V_{g_1}$$
 = max. 180 V

# Cathode to heater voltage

positive 
$$V_{k-f} = max. 80 \text{ V}$$
positive peak  $V_{k-f_D} = max. 130 \text{ V}$ 

Focusing electrode current 
$$I_{g_A} = \max_{\pm 25} \mu A$$

Accelerator current 
$$I_{g_2} = \max_{k} \pm 5 \mu A$$

### MAXIMUM CIRCUIT VALUES

Resistance between cathode and heater	R <sub>k/f</sub>	=	max.	1	MSZ
Impedance between cathode and heater	$Z_{k/f}$ (50 Hz)	=	max.	500	kΩ

Impedance between cathode and earth 
$$Z_k$$
 (50 Hz) = max. 100 k $\Omega$ 

Grid No.1 circuit resistance 
$$R_{g_1} = max. 1.5 M\Omega$$

Grid No.1 circuit impedance 
$$Z_{g_1}$$
 (50 Hz) = max. 500 k $\Omega$ 

Accelerator circuit resistance 
$$R_{g_2} = max.$$
 1  $M\Omega$ 

Focusing electrode circuit resistance 
$$R_{g_4} = max.$$
 3 M $\Omega$ 

# MONITOR TUBE

21 cm rectangular television tube with metal backed screen primarily intended for use as a picture monitor tube.

QUICK REFERENCE DATA					
Deflection angle	110	0			
Focusing	electro	static			
Resolution	625	lines			
Overall length	max. 205	mm			

#### SCREEN

Metal backed phosphor

Lumenescence white

Light transmission of face glass  $$80\ \%$ 

Useful diagonal min. 200 mm

Useful width min. 190.5 mm
Useful height min. 149.2 mm

HEATING

Indirect by A.C. or D.C.; parallel supply

Heater voltage

Heater current  $I_f = 300 \text{ mA}$ 

CAPACITANCES

Final accelerator to external conductive

coating

Cathode to all other elements  $C_k = 4.0 \text{ pF}$ 

Grid No.1 to all other elements  $C_{g_1} = 7.0 \text{ pF}$ 


 $V_{f} = 6.3 V$ 


 $Cg_3, g_5(\ell)/m = 250 pF$ 

2

# MECHANICAL DATA


Dimensions in mm

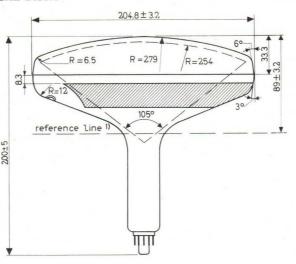

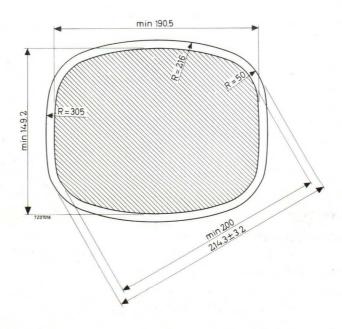

### MECHANICAL DATA (continued)

### Dimensions in mm

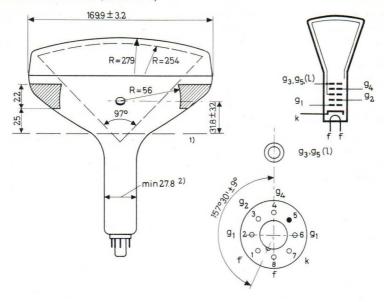

# Mounting position: any

Except vertical with the screen downward and the axis of the tube making an angle of less than  $20^{\rm o}$  with the vertical.

Base:	Neo Eightar (B8H	()

Cavity contact CT8

# Accessories

Final accelerator connector type 55563
Socket 2422 501 06001



<sup>1)</sup> Reference line, determined by the plane of the upper edge of the flange of the reference line gauge JEDEC 126 when the gauge is resting on the cone.

<sup>2)</sup> The maximum dimension is determined by the reference line gauge.

# M21-12W

### **FOCUSING**

electrostatic

The range of focus voltage shown under "Typical operating conditions" results in optimum focus at a beam current of 100  $\mu A_{\star}$ 

### **DEFLECTION**

magnetic

Diagonal deflection angle

110°

#### PICTURE CENTRING MAGNET

Field intensity perpendicular to the tube axis adjustable from 0 to 79.6~A/m (0 to 10 Oerstedt).

Adjustment of the centring magnet should not be such that a general reduction in brightness or shading of the raster occurs.

### TYPICAL OPERATION

Final accelerator voltage	$V_{g_3}, g_5(\ell)$	=	16	kV
Focusing electrode voltage	$v_{g_4}$	=	0 to 400	$V^{-1}$ )
First accelerator voltage	$v_{g_2}$	Ξ	300	V
Crid No. 1 voltage for extinction of				

Grid No.1 voltage for extinction of focused raster

 $v_{g_1} = -35 \text{ to } -72 \text{ V}$ 

#### RESOLUTION

Resolution at screen centre measured at 
$$V_{g_3}$$
,  $g_5(\ell)$  = 16 kV,  $V_{g_2}$  = 300 V

625 lines

### BRIGHTNESS

Brightness at 
$$V_{g_3}$$
,  $g_5(\ell)$  = 16 kV,  
 $I_{g_3}$ ,  $g_5(\ell)$  = 80  $\mu$ A measured with  
a raster of 14 x 14 cm<sup>2</sup>

450 Nit

<sup>1)</sup> With the small change in focus spot size with variation of focus voltage, the limit of 0 to 400 V is such that an acceptable focus quality is obtained within this range. If it is required to pass through the point of focus, a voltage of at least -100 to +500 V will be required.

### **LIMITING VALUES** (Absolute max. rating system)

Final accelerator voltage	$v_{g_3,g_5(\ell)}$	=	max. 20 min. 13	kV kV	
Focusing electrode voltage	$v_{g_4} - v_{g_4}$	=	max. 1 max. 500	kV V	
First accelerator voltage	$v_{g_2}$	=	max. 450 min. 200	V V	
Cathode to heater voltage	$V_{+k/f}$	=	max. 200	V	
	$V_{+k/f-p}$	=	max. 300	V 1)	
	V-k/f+	=	max. 125	V	
	$V_{-k/f+p}$	=	max. 250	V	
Grid No.1 voltage					
positive	$v_{g_1}$	=	max. 0	$V^2$ )	
positive peak	$v_{g_{1p}}$	=	max. 2	V	
negative	$-v_{g_1}$	=	max. 150	V	
Focusing electrode current	$I_{g_4}$	=	max. <u>+</u> 25	μΑ	
First accelerator current	$^{\mathrm{I}}\mathrm{g}_{2}$	=	max. ± 5	μΑ	
CIRCUIT DESIGN VALUES					
Resistance between cathode and heater	Rkf	=	max. 1	$M\Omega$	
Impedance between cathode and heater	$Z_{\mathrm{kf}}(50~\mathrm{Hz})$	=	max. 0.5	$M\Omega$	
Impedance between cathode and earth	Z <sub>k</sub> (50 Hz)	=	max. 0.1	$M\Omega$	

1) During a warm-up period not exceeding 45 s the heater may be 410 V negative with respect to the cathode.

Rg<sub>1</sub>

 $R_{g_2}$ 

 $R_{g_4}$ 

 $Z_{g_1}$ (50 Hz)



Grid No.1 circuit resistance

Grid No.1 circuit impedance

First accelerator circuit resistance

Focusing electrode circuit resistance

=  $\max. 1.5 M\Omega$ 

 $M\Omega$ 

 $M\Omega$ 


 $M\Omega$ 

= max. 0.5

max.

max.

<sup>2)</sup> The d.c. value of bias must not be such as to allow the grid to become positive with respect to the cathode, except during the period immediately after switching the receiver on or off when it may be allowed to rise to +1 V. The maximum positive excursion of the video signal must not exceed +2 V, and at this voltage the grid current may be expected to be approximately 2 mA.

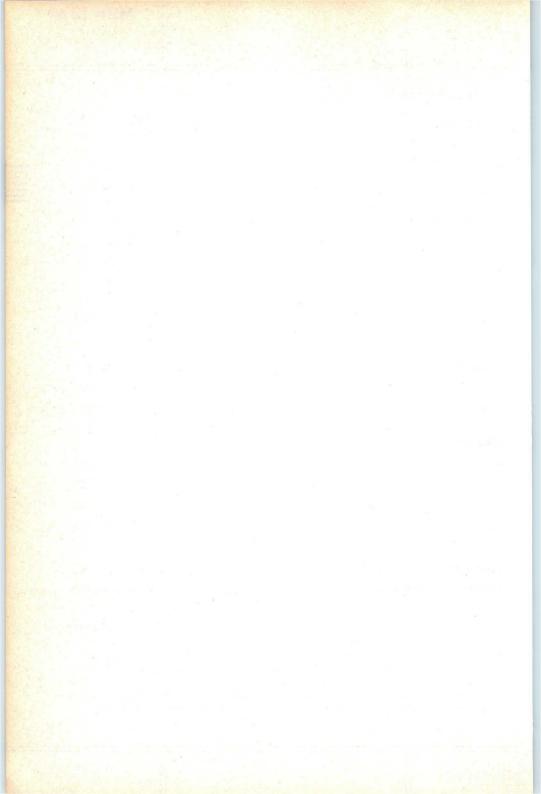

# MONITOR TUBE

The  $M24-100\,\mathrm{W}$  is a 24 cm diagonal rectangular television tube with metal backed screen primarily intended for use as a monitor or display tube.

QUICK REFERENCE DATA					
Deflection angle	90 o				
Focusing	electrostatic				
Resolution	900 lines				
Overall length	max. 260 mm				

### **SCREEN**

Metal backed phosphor

Luminescence		white		
Light transmission of face glass		52	%	
Useful diagonal		min. 225	mm	
Useful width		min. 190	mm	
Useful height		min. 140	mm	

### **HEATING**

Indirect by A.C. or D.C.; parallel supply

Heater voltage	$V_{f}$	6.3	V
Heater current	$\overline{\mathrm{I_f}}$	300	mA

### CAPACITANCES


Final accelerator to external conductive coating	C 2 7/11/	420	nF
Conductive Coating	$C_{g3, g5(\ell)/m}$	420	pr.
Cathode to all other elements	$C_k$	4	pF
Control grid to all other elements	$c_{g_1}$	7	pF


Data based on pre-production tubes




# MECHANICAL DATA


### Dimensions in mm

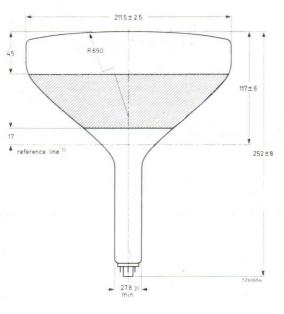


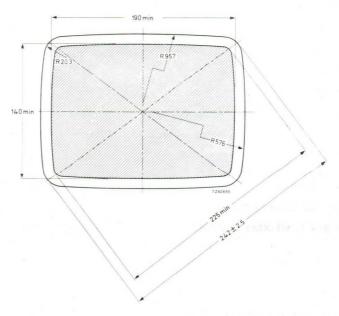

### MECHANICAL DATA (continued)

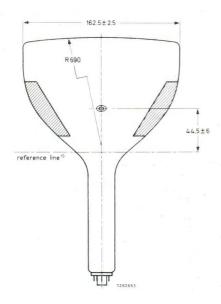

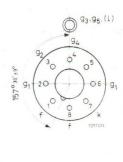

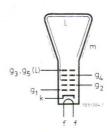

 $\underline{\text{Mounting position:}}$  any, except vertical with the screen downward and the axis of the tube making an angle of less than  $20^{\rm o}$  with the vertical.

Base

Neo eightar (B8H)

Cavity contact

CT8

Accessories

Socket

2422 501 06001

Final accelerator contact connector

type 55563

**FOCUSSING** 

electrostatic

The range of focus voltage shown under "Typical operating conditions" results in optimum focus at a beam current of 100  $\mu\text{A}_{\star}$ 

DEFLECTION 3)

magnetic

diagonal deflection angle 900

<sup>1)2)3)</sup> See page 5


# M24-100W

### PICTURE CENTRING MAGNET

Field intensity perpendicular to the tube axis adjustable from 0 to 79.6 A/m (0 to 10 Oerstedt). Adjustment of the centring magnet should not be such that a general reduction in brightness or shading of the raster occurs.

### REFERENCE LINE GAUGE

Dimensions in mm

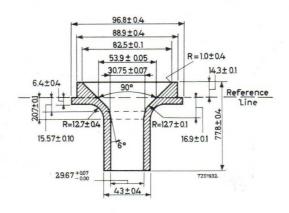

### TYPICAL OPERATING CONDITIONS

Final accelerator voltage	$V_{g3,g5(\ell)}$		14	kV
Focusing electrode voltage	$V_{g4}$	0 to	400	V
First accelerator voltage	$V_{g2}$		600	V
Grid No. 1 voltage for extinction of focused raster	$v_{g_1}$	<b>-</b> 32 to	<b>-</b> 85	V

#### RESOLUTION

Resolution at screen centre measured with the shrinking raster method (non-interlaced raster), under typical operating conditions, and a brightness of  $60 \text{ mcd/cm}^2$  (600 Nit):

### LIMITING VALUES (Absolute max. rating system)

Final accelerator voltage	$V_{g3}, g5(\ell)$	max. min.	16 10	kV kV
Focusing electrode voltage	$^{\mathrm{V}_{\mathrm{g}4}}_{-\mathrm{V}_{\mathrm{g}4}}$	max.	1 500	kV V
First accelerator voltage	$V_{\mathbf{g}2}$	max. min.	800 300	V V
Cathode to heater voltage,				
positive positive peak	V <sub>kf</sub> V <sub>kfp</sub>	max.	250 300	V V 4)
negative negative peak	$-V_{\mathrm{kf}}$	max.	135 180	V V


### NOTES

<sup>1)</sup> Reference line is determined by the plane of the upper edge of the flange of the reference line gauge when the gauge is resting on the cone.

<sup>2)</sup> The maximum dimension is determined by the reference line gauge.

<sup>3)</sup> For a deflection coil the AT1040 is recommended. If another coil is considered, it is advisable to contact the local tube supplier.

<sup>4)</sup> During a warm-up period not exceeding 15 sthe heater may be 410 V negative with respect to the cathode.

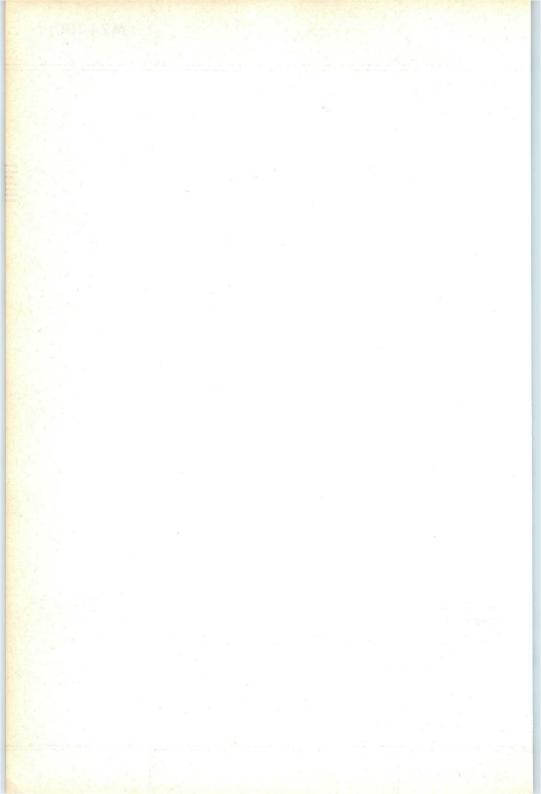

# MONITOR TUBE

The M28-12W is a rectangular  $28~{\rm cm}~90^{\rm O}$  deflection angle direct viewing picture tube primarily intended as a monitor tube.

QUICK REFI	ERENCE DATA	
Face diagonal	28	cm (11 inch)
Deflection angle	900	
Overall length	245	mm
Neck length	105.5	mm
Neck diameter	20	mm
Light transmission of face glass	50	%
Focusing		electrostatic
Bulb		reinforced
Heating	11 V, 75	mA
Resolution	min. 850	lines

# SCREEN 1)

Metal backed phosphor

Luminescence			white			
Light transmission of face glass			50	%		
Useful diagonal		min.	262.5	mm		
Useful width		min.	228	mm		
Useful height		min.	171	mm		


### HEATING


Indirect by A.C. or D.C.


Heater voltage	$V_{f}$	11	V	
heater current	$\overline{\mathrm{I_f}}$	75	mA	4

<sup>&</sup>lt;sup>1</sup>) Certain applications require a phosphor with a longer persistence. Tubes with such phosphors (LA, GM, GR for instance) are supplied to special order.



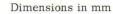


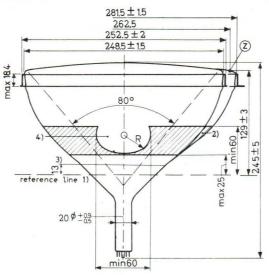

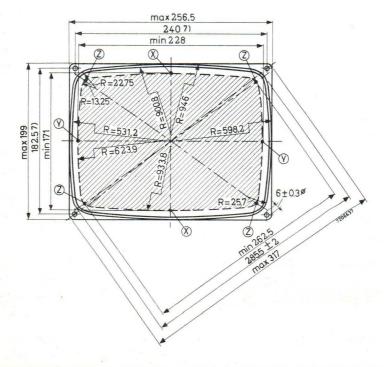

## MECHANICAL DATA (continued)

Dimensions in mm

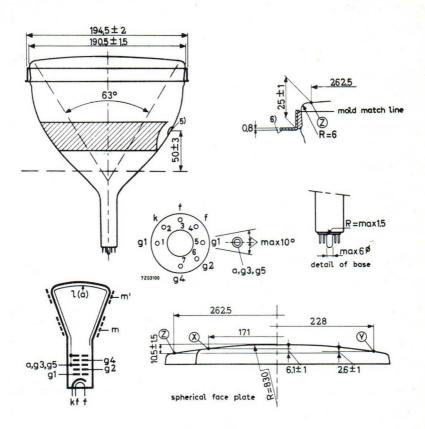

Mounting position: any

Base : 7 pins miniature, with pumping stem

Net weight : approx. 2.2 kg

The socket for the base should not be rigidly mounted; it should have flexible leads and be allowed to move freely.

For notes see page 4

### **CAPACITANCES**

Final accelerator to external conductive coating	$C_{a,g3,g5/m}$	< 850 > 550	pF pF
Final accelerator to metal band	$C_{a,g_3,g_5/m}$	150	pF
Cathode to all	$C_k$	3	pF
Grid No.1 to all	$c_{g_1}$	7	pF

FOCUSING electrostatic

**DEFLECTION** magnetic

Diagonal deflection angle  $90^{\circ}$ Horizontal deflection angle  $80^{\circ}$ Vertical deflection angle  $63^{\circ}$ 

### PICTURE CENTRING MAGNET

Field intensity perpendicular to the tube axis adjustable from 0 to 800 A/m (0 to 10 Oerstedt).

Maximum distance between centre of field of this magnet and reference line: 55mm. The centring magnet should be mounted as close to the deflection coils as possible.

#### NOTES TO OUTLINE DRAWING

- 1. The reference line is determined by the plane of the upper edge of the flange of the reference line gauge when the gauge is resting on the cone.
- $2. \ \,$  The configuration of the external conductive coating is optional but contains the contact area shown in the drawing.

The external conductive coating must be earthed.

- End of guaranteed contour. The maximum neck and cone contour is given by the reference line gauge.
- 4. This area must be kept clean.
- 5. Recessed cavity contact.
- 6. Maximum unflatness of the rim is 1 mm.
- The mounting screws in the cabinet must be situated inside a circle with a diameter of 5 mm drawn around the corner points of a geometrical rectangle of 240 mm x 182.5 mm.

### TYPICAL OPERATING CONDITIONS

### Grid drive service

Final accelerator voltage	$V_{a,g_3,g_5}(l)$	11	13	kV
Focusing electrode voltage	$v_{g_4}$	0 to 350	50 to 400	V 1)
Grid No.2 voltage	$v_{g_2}$	250	350	V
Grid No.1 voltage for visual extinction of focused raster	$v_{g_1}$	-35 to -69	-46 to -91	V

# Cathode drive service

Voltages are specified with respect to grid No.1

Final accelerator voltage	$V_{a,g3,g5}(l)$	) 11	13	kV
Focusing electrode voltage	$v_{g_4}$	0 to 350	50 to 400	V 1)
Grid No.2 voltage	$v_{g_2}$	200 to 350	350	V
Cathode voltage for visual extinction of focused raster	$v_k$	approx.45	44 to 80	V

# LIMITING VALUES (Absolute max. rating system)

Final accelerator voltage	$V_{a,g_3,g_5(l)}$	max. min.	14 7.5	kV kV
Grid No.4 voltage	Vg			
positive	$v_{g_4}$	max.	500	V
negative	$-v_{g_4}$	max.	50	V
C : 1 No. 2 and bear	7.7	max.	350	V
Grid No.2 voltage	$v_{g_2}$	min.	200	V
Grid No.2 to grid No.1 voltage	$v_{g_2}/v_{g_1}$	max.	450	V
Grid No.1 voltage				
positive	$v_{g_1}$	max.	0	V
positive peak	$v_{g_{1p}}$	max.	2	V
negative	$-v_{g_1}$	max.	100	V
negative peak	$-V_{g_{1p}}$	max.	350	$V^2$ )

 $<sup>\</sup>overline{\text{1}}$ ) Voltage range to obtain optimum overall focus at 100  $\mu\text{A}$  beam current.



<sup>2)</sup> Maximum pulse duration 22% of a cycle but max. 1.5 ms.

# LIMITING VALUES (continued)

Cathode to grid No.1 voltage

positive	$v_{k/g_1}$	max. 100	V
positive peak	V <sub>k/g1p</sub>	max. 350	$V^{1}$
negative	$-v_{k/g_1}$	max. 0	V
negative peak	$-v_{k/g_{lp}}$	max. 2	V
Cathode to heater voltage			
positive	$v_{k/f}$	max. 110	V
positive peak	V <sub>k/fp</sub>	max. 130	V

### MAXIMUM CIRCUIT VALUES

Resistance between cathode and heater	R <sub>k</sub> /f	max. 1	$M\Omega$
Impedance between cathode and heater	$Z_{k/f}$ (50 Hz)	max. 0.1	$M\Omega$
Grid No.1 circuit resistance	$R_{g_1}$	max. 1.5	$M\Omega$
Grid No.1 circuit impedance	Z <sub>g1</sub> (50 Hz)	max. 0.5	$M\Omega$
Resistance between external conductive coating and rimband	R <sub>m/m</sub> '	max. 2	$M\Omega$

<sup>1)</sup> Maximum pulse duration 22% of a cycle but max. 1.5 ms.

# MONITOR TUBE

 $31 \, \mathrm{cm}$  (12 in),  $110^{0}$ , rectangular direct vision monitor tube with integral protection for black-and-white T.V. The rimband leaves the edge of the faceplate free. The  $20 \, \mathrm{mm}$  neck diameter results in a low deflection energy.

QUICK REFERE	NCE DATA			
Face diagonal		31	cm (12 in)	
Deflection angle		110°		
Overall length	max.	233	mm	
Neck diameter		20	mm	
Light transmission of face glass		50	%	
Focusing	electrostatic			
Bulb	reinforced			
Heating	11	1 V, 75	mA	
Resolution	min.	850	lines	

# SCREEN 1)

Metal backed phosphor			
Luminescence	white		
Light transmission of face glass		50	%
Useful diagonal	min.	295	mm
Useful width	min.	257	mm
Useful height	min.	195	mm

#### HEATING

Indirect by A.C.	or D.C.;	parallel supply
		Heater voltage
		Heater current

$V_{\mathbf{f}}$	11	V	
[¢	75	mA	-

The maximum total deviation from the nominal heater voltage is 15%.

The deviation may consists of:

max. 7% continuous deviation, e.g. due to component spread,


max.10% temporary variation.


In case of supply direct from a battery, the heater voltage must be within the limits given on page 8.

<sup>1)</sup> Certain applications require a phosphor with a longer persistence. Tubes with such phosphors (LA,GM,GR for instance) are supplied to special order.

### → MECHANICAL DATA

Dimensions in mm

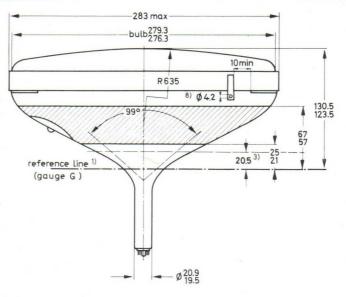


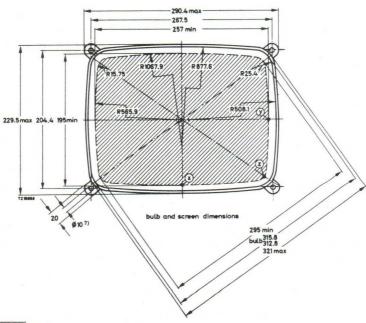



Notes see page 4




Dimensions in mm

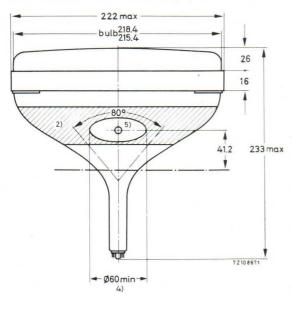

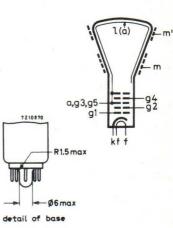

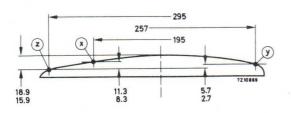

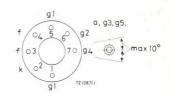

min

29.6 25.6

Mounting position: any

and be allowed to move freely.

Net weight

: approx. 2.8 kg

Base

: 7 pins miniature, with pumping stem The socket for the base should not be rigidly mounted, it should have flexible leads

Notes see page 4

295


moldmatch

R6

### NOTES TO OUTLINE DRAWING

- 1. The reference line is determined by the plane of the upper edge of the flange of the reference line gauge when the gauge is resting on the cone.
- The configuration of the external conductive coating may be different but contains the contact area shown in the drawing.
   The external conductive coating must be earthed.
- End of guaranteed contour. The maximum neck and cone contour is given by the reference line gauge.
- 4. This area must be kept clean.
- 5. Recessed cavity contact I.E.C. 67-III-2.
- The displacement of any lug with respect to the plane through the three other lugs is max. 2 mm.
- 7. The mounting screws in the cabinet must be situated inside a circle of 7 mm diameter drawn around the true geometrical positions, i.e. at the corners of a rectangle of 267.5 mm x 204.4 mm.
- 8. The metal band must be earthed by means of the tag provided. No electrical contact between the metal band and the mounting lug can be guaranteed.


### REFERENCE LINE GAUGE

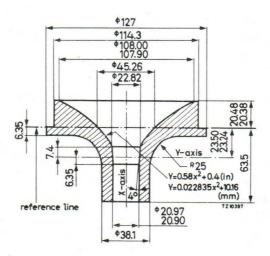



# MAXIMUM CONE CONTOUR DRAWING

Dimensions in mm

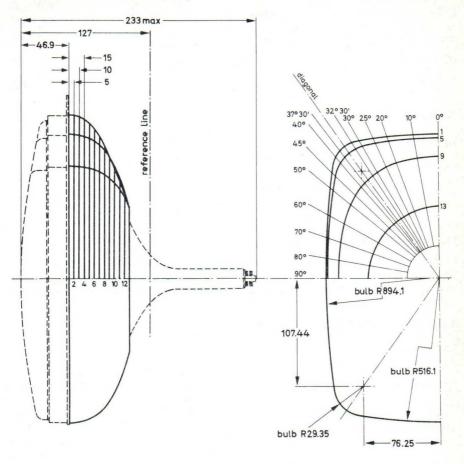

							Dist	ance from	centre (M	ax. value	s)						
Sec-			00 long	10°	20°	25 <sup>0</sup>	30°	320 30	Diagon.	370 30'	40 <sup>0</sup>	45°	50°	60°	70°	80°	90° short
13	59.6	nom.	72.19	72.03	71.66	71.44	71.24	71.14	71.03	70.96	70.88	70.76	70.66	70.6	70.67	70.8	70.87
12	55	**	85.86	85.57	84.86	84.43	83.98	83.75	83.5	83,32	83.11	82.72	82.38	81.88	81.6	81.5	81.5
11	50	**	99.45	99.36	98.89	98.40	97.88	97.53	97.1	96.75	96.32	95.38	94.4	92.42	90.7	89.52	89.08
10	45	9.5	112.3	112.41	112.2	111.73	110.64	110.41	109.7	109.1	108.33	106.6	104.72	100.9	97.65	95.48	94.7
9	40	11	121.29	121.87	122.76	122.85	122.41	121.94	121.18	120.47	119.48	117.07	114.3	108.57	103.8	100.73	99.6
8	35	**	127.9	128.92	131.17	132.12	132.46	132.27	131.65	130.9	129.74	126.54	122.7	114.93	108.76	104.96	103.6
7	30	**	132.64	133.98	137.39	139.31	140.81	141.16	140.85	140.16	138.87	134.6	129.45	119.71	112.47	108,18	106.7
6	25	**	135.97	137.47	141.65	144.41	147.22	148.29	148.45	147.88	146.49	140.89	134.31	122.94	115.02	110.48	109
5	20	**	138,44	139,99	144.54	147.82	151.55	153.17	153.7	153.2	151.66	144.83	137.09	124.69	116.45	111.81	110.3
4	15	11	140.31	141.88	146.63	150.22	154.59	156.61	157.35	156.85	155.08	147.13	138.48	125.41	117.01	112.34	110.8
3	10	**	141.62	143.2	148.04	151.78	156.46	158.67	159.52	159	157.1	148.53	139.42	126.02	117.55	112.87	111.3
2	5	44.	142.36	143.94	148,82	152.63	157.44	159.75	160.66	160.15	158.21	149.41	140.12	126.58	118.07	113.37	111.8
1	0	**	142.8	144.38	149.27	153.07	157.88	160.19	161.1	160.59	158.67	149.9	140.62	127.06	118.53	113.81	112.3

# M31-120W

#### CAPACITANCES

900 pF Final accelerator to external conductive coating  $C_{a,g_3,g_5/m}$ 450 pF Final accelerator to metal band Ca, g3, g5/m' 300 pF Cathode to all Ck pF Grid No. 1 to all Cg1 pF

**FOCUSING** electrostatic

#### DEFLECTION magnetic

Diagonal deflection angle 1100 Horizontal deflection angle 990 Vertical deflection angle 800

### PICTURE CENTRING MAGNET

Field intensity perpendicular to the tube axis adjustable from 0 to 800 A/m (0 to 10 Oerstedt).

Maximum distance between centre of field of this magnet and reference line: 55 mm.

### TYPICAL OPERATING CONDITIONS

### Grid drive service

Final accelerator voltage	$V_{a,g_3,g_5}$	11	kV
Focusing electrode voltage	$V_{g_4}$	0 to 350	V 1)
Grid No. 2 voltage	$v_{g_2}$	250	V
Grid No.1 voltage for visual extinction of focused raster	$v_{g_1}$	-35 to -69	V

### Cathode drive service

Voltages are specified with respect to grid No.1

Final accelerator voltage	$V_{a,g_3,g_5}$	11	kV
Focusing electrode voltage	$V_{g4}$	0 to 350	$V^{1}$ )
Grid No.2 voltage	$V_{g_2}$	250	V
Cathode voltage for visual extinction			

of focused raster

 $V_{\mathbf{k}}$ 32 to 58 V

<sup>1)</sup> Individual tubes will have optimum focus within this range. In general an acceptable picture will be obtained with a fixed focus voltage.

# M31-120W

LIMITING VALUE	JES (Design	centre rating	system.	unless	otherwise stated)

Final accelerator voltage	$v_{a,g_3,g_5}$	max. min.	12 8.5	kV kV 1)	
Grid No.4 voltage					
positive	$v_{g_4}$	max.	500	V	
negative	$-v_{g_4}$	max.	50	V	
Grid No.2 voltage	$v_{g_2}$	max. min.	350 200	V	
Grid No.2 to grid No.1 vol	tage $V_{g_2/g_1}$	max.	450	V	
Cathode to grid No.1 volta					
positive	$v_{k/g_1}$	max.		V	
positive peak	$v_{k/g_{1p}}$	max.	350	$V^2$ )	
negative	$-v_{k/g_1}$	max.	0	V	
negative peak	$-V_k/g_{1p}$	max.	2	V	
Cathode to heater voltage					
positive	$V_{k/f}$	max.	110	V	
positive peak	$V_{k/f_p}$	max.	130	V	
CIRCUIT DESIGN VALUES					
Grid No.4 current					
positive	$I_{g_4}$	max.	25	$\mu A$	
negative	$-I_{g_4}$	max.	25	$\mu A$	
Grid No.2 current					

### MAXIMUM CIRCUIT VALUES

Resistance between cathode and heater Rk/f max. 1  $M\Omega$  $Z_{k/f}$  (50 Hz) Impedance between cathode and heater max. 0.1  $M\Omega$ max. 1.5  $M\Omega$ Grid No.1 circuit resistance Rgi Zg<sub>1</sub> (50 Hz) Grid No.1 circuit impedance max. 0.5  $M\Omega$ Resistance between external conductive  $M\Omega$ coating and rimband R<sub>m/m'</sub> min. 2

Ig<sub>2</sub>

-Ig2

max.

max.

5 μΑ


5 μΑ



positive

negative

Absolute maximum rating system.
 Maximum pulse duration 22% of a cycle but max. 1.5 ms.

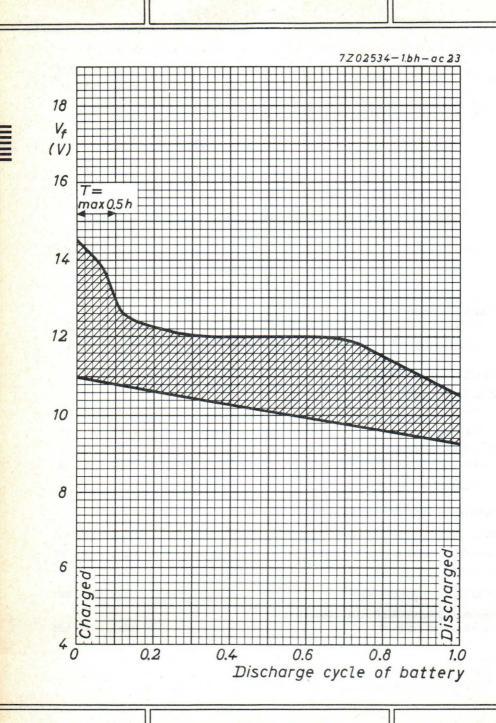

# MONITOR TUBE

36 cm rectangular television tube with metal backed screen primarily intended for use as a precision monitor.

Q	QUICK REFERENCE DATA			
Deflection angle			90	0
Focusing		el	ectro	static
Resolution		min.	650	lines
Overall length		max.	317	mm

### SCREEN

Metal backed phosphor

white Lumenescence

min. 329 mm Useful diagonal min. 304.5 mm Useful width min. 241 mm Useful height

### HEATING

Indirect by A.C. or D.C.; parallel supply

11 V ±10 % Heater voltage 75 mA

Heater current

### CAPACITANCES

Final accelerator to external conductive

coating


 $c_{g_3,g_5(\ell)/m}$ = 800 pF


= 5.0 pFCathode to all other elements

= 9.0 pF Grid No.1 to all other elements Cg<sub>1</sub>

### MECHANICAL DATA

Dimensions in mm

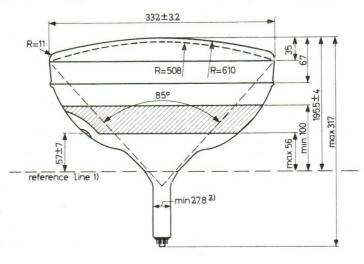

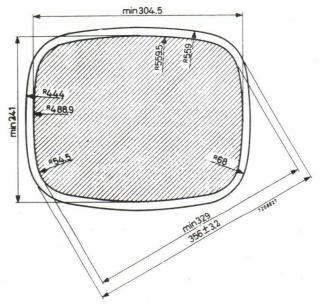


<sup>1)</sup> Reference line is determined by the plane of the upper edge of the flange of the reference line gauge when the gauge is resting on the cone.

<sup>2)</sup> The maximum dimension is determined by the reference line gauge.

## MECHANICAL DATA (continued)

Dimensions in mm

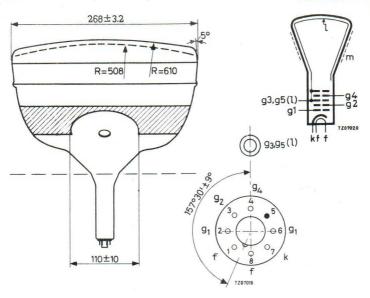

Base:

Neo Eightar (B8H)

Cavity contact

CT8

Accessories:

Socket

2422 501 06001

Final accelerator contact connector

type 55563

**FOCUSING** 

electrostatic

DEFLECTION

magnetic

Diagonal deflection angle

90°

### PICTURE CENTRING MAGNET

Field intensity perpendicular to the tube axis adjustable from 0 to 79.6~A/m (0 to 10 Oerstedt).

Adjustment of the centring magnet should not be such that a general reduction in brightness or shading of the raster occurs.

### TYPICAL OPERATION

Final accelerator voltage	$V_{g_3,g_5(\ell)}$	=	16	kV
Focusing electrode voltage	$v_{g_4}$	=	0 to 500	V 1)
First accelerator voltage	$v_{g_2}$	=	600	V
Grid No.1 voltage for extinction of focused raster (grid drive service)	$-v_{g_1}$	=	43 to 98	V
Cathode voltage for extinction of focused raster (cathode drive service)	$v_k$	=	40 to 90	V

#### RESOLUTION

Resolution at screen centre			min. 650	lines
Measured at:	$V_{g_3,g_5(\ell)}$	=	16	kV
	$V_{g_2}$	=	600	V

This tube will resolve 650 lines measured at a brightness of 340 Nits based on a picture height of 237 mm.

The focus voltage is adjusted to obtain the smallest roundest spot. For optimum overall resolution an external centring magnet may be required.



<sup>1)</sup> With the small change in focus spot size with variation of focus voltage, the limit of 0 to 500 V is such that an acceptable focus quality is obtained within this range. If it is required to pass through the point of focus, a voltage of at least -100 V to +600 V will be required.

### LIMITING VALUES (Absolute max. rating system)

$v_{g_3,g_5(\ell)}$	=	max. 18 min. 12	kV kV
$\begin{array}{c} v_{g_4} \\ -v_{g_4} \end{array}$	=	max. 1 max. 500	kV V
$v_{g_2}$	=	max. 800	V
$v_{g_1}$	=	max. 0	$V^{1}$ )
$v_{g1_p}$	=	max. 2	V
$-V_{g_1}$	=	max. 180	V
V <sub>k/f</sub>	=	max. 80	V
$V_{k/f_{p}}$	=	max. 130	V
1	=	max. <u>+</u> 25	$\mu$ A
$I_{g_2}$	=	max. $\pm$ 5	$\mu A$
	$V_{g_4}$ $V_{g_2}$ $V_{g_1}$ $V_{g_{1p}}$ $V_{g_1}$ $V_{k/f}$ $V_{k/f_p}$ $V_{g_4}$	$\begin{array}{cccccccccccccccccccccccccccccccccccc$	$V_{g_3,g_5(\ell)} = min. 12$ $V_{g_4} = max. 1$ $-V_{g_4} = max. 500$ $V_{g_2} = max. 800$ $V_{g_1} = max. 0$ $V_{g_{1p}} = max. 2$ $-V_{g_1} = max. 180$ $V_{k/f} = max. 80$ $V_{k/f_p} = max. 130$ $I_{g_4} = max. \pm 25$


### EXTERNAL CONDUCTIVE COATING

This tube has an external conductive coating, m, which must be earthed and the capacitance of this to the final electrode is used to provide smoothing for the e.h.t. supply. The tube marking and warning labels are on the side of the cone opposite the final electrode connector and this side should not be used for making contact to the external conductive coating.

### WARNING

 $X\operatorname{-ray}$  shielding is advisable to give protection against danger of personal injury arising from prolonged exposure at close range to this tube.

 $<sup>^{</sup>m l}$ ) The d.c. value of bias must not be such as to allow the grid to become positive with respect to the cathode, except during the period immediately after switching the receiver on or off when it may be allowed to rise to +1 V. The maximum positive excursion of the video signal must not exceed +2 V, and at this voltage the grid current may be expected to be approximately 2 mA.

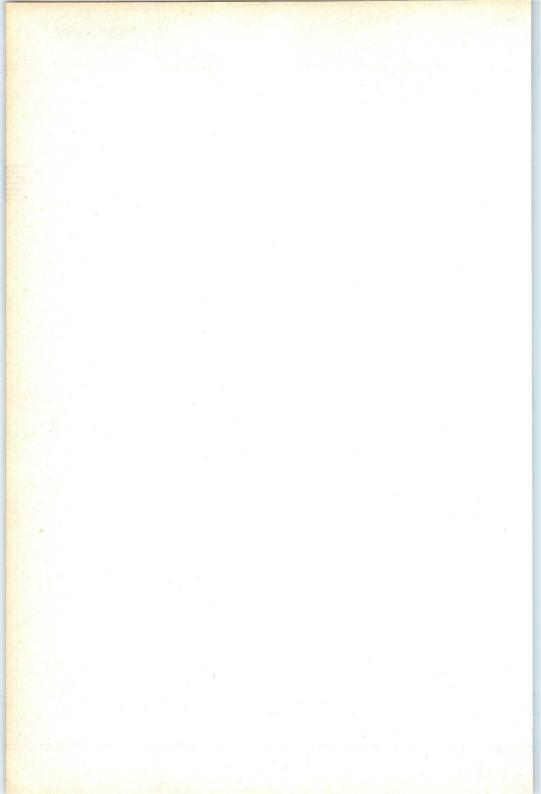

# MONITOR TUBE

The M36-13W is a 36 cm diameter rectangular television tube with metal backed screen primarily intedned for use as a monitor tube.

QUICK REFERENCE DATA			
Deflection angle		110°	
Focusing		electro	static
Resolution	min.	625	lines
Overall length	max.	268.5	mm

### **SCREEN**

Metal backed

Colour	white	
Useful screen diagonal	min. 333.4 n	nm
Useful screen width	min. 314.3 n	nm
Useful screen height	min. 250.8 n	nm


### HEATING


Indirect by A.C. or D.C.; parallel or series supply

Heater voltage	$V_{f}$	6.3	V
Heater current	$I_{\mathbf{f}}$	300	mA

### MECHANICAL DATA


### Dimensions in mm

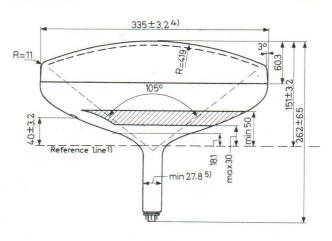

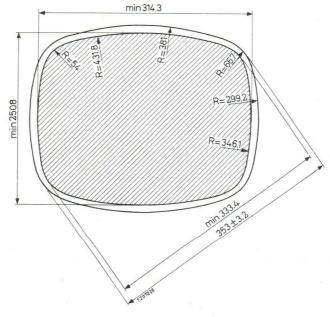

### MECHANICAL DATA (continued)

Dimensions in mm

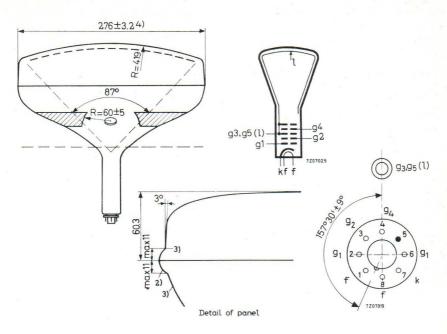

Mounting position: any, except vertical with the screen downward and the axis of the tube making an angle of less than  $20^{0}$  with the vertical.

Base	Neo	eightar (B8H)

Cavity contact CT8

Accessories

DEFLECTION

Final accelerator contact connector type 55563 Socket 2422 501 06001

double magnetic

FOCUSING electrostatic

The range of focus voltage shown under "Typical operating conditions" results in optimum focus at a beam current of  $100~\mu A$ .

in optimum rocus at a beam current of 100  $\mu$ A.

diagonal deflection angle 110°

 $(1)^2(3)^4(5)$  See page 6.

### PICTURE CENTRING MAGNET

Field intensity perpendicular to the tube axis adjustable from 0 to 79.6 A/m (0 to 10 Oerstedt). Adjustment of the centring magnet should not be such that a general reduction in brightness or shading of the raster occurs.

### TYPICAL OPERATING CONDITIONS

Final accelerator voltage	$V_{g_3,g_5}(\ell)$	16	kV
Focusing electrode voltage	$v_{g_4}$	0-400	$V^{1}$ )
First accelerator voltage	$v_{g_2}$	400	V
Grid No.1 voltage for visual extinction of a focused raster	-V <sub>g1</sub>	40 to 85	V
Resolution at screen centre		min. 625	lines
Measured at	$V_{g_3,g_5}(\ell)$	16	kV
	$V_{g_2}$	400	V

This tube will resolve 625 lines measured at a brightness of 340 Nits based on a picture height of 237 mm.

The focus voltage is adjusted to obtain the smallest roundest spot. For optimum overall resolution an external centring magnet may be required.

# LIMITING VALUES (Absolute max. rating system)

Measured with respect to cathode

Resistance between heater and cathode

Resistance between grid No.1 and earth

Impedance between heater and cathode

Impedance between cathode and earth

(f = 50 Hz)

(f = 50 Hz)

Final accelerator voltage	$v_{g_3,g_5(\ell)}$	max.	18 13	kV kV	
Focusing electrode voltage	$v_{g_4}$	max.	1	kV	
	$-V_{g_4}$	max.	500	V	
First accelerator voltage	3.7	max.	550	V	
Tilst accelerator voltage	$v_{g_2}$	min.	350	V	
Control grid voltage,					
negative	$-v_{g_1}$	max.	150	V	
positive	$v_{g_1}$	max.	0	V	
Focusing electrode current	$I_{g_4}$	max.	<u>+</u> 25	$\mu$ A	
Grid No.2 current	$I_{g_2}$	max.	±5	$\mu$ A	
Cathode to heater voltage,					
cathode positive	V+k/f-	max.	250	V	
cathode positive	$V_{+k/f-p}$	max.	300	V	
anthodo nometivo	V-k/f+	max.	135	V	
cathode negative	V-k/f+p	max.	180	V	

Rkf

Rg1

Zkf

 $Z_k$ 



max. 1 M $\Omega$ 

max.

max.

max.

 $1.5 M\Omega$ 

500 kΩ

 $100 \text{ k}\Omega$ 

 $<sup>^{1}</sup>$ ) With the small change in focus spot size with variation of focus voltage the limit of 0-400 V is such that an acceptable focus quality is obtained within this range. If it is required to pass through the point of focus, a voltage of at least -100 V to +500 V will be required.

### WARNING

 $X\,\mbox{-ray}$  shielding is advisable to give protection against possible danger of personal injury arising from prolonged exposure at close range to this tube when operated above 16 kV.

### EXTERNAL CONDUCTIVE COATING

This tube has an external conductive coating (m), which must be earthed and capacitance of this to the final electrode is used to provide smoothing for the EHT supply. The tube marking and warning labels are on the side of the cone opposite the final electrode connector and this side should not be used for making contact to the external conductive coating.

#### NOTES TO OUTLINE DRAWING

- 1) The reference line is determined by the plane of the upper edge of the flange of the reference line gauge, (JEDEC 126) when the gauge is resting on the cone.
- 2) Bulge at splice-line seal may increase the indicated maximum value for envelope width, diagonal and height by not more than 6.4 mm, but at any point around the seal, the bulge will not protrude more than 3.2 mm beyond the envelope surface at the location specified for dimensioning the envelope width, diagonal and height.
- 3) The tube should be supported on both sides of the bulge. The mechanism used should provide clearance for the maximum dimensions of the bulge.
- $^4$ ) Measured 12 + 1 mm from the centre-line of the screen-cone seal.
- 5) The maximum dimension is determined by the reference line gauge.



# MONITOR TUBE

36 cm rectangular television tube with metal backed screen and integral protection primarily intended for use as a precision monitor.

QUICK REFEREN	NCE DATA
Deflection angle	90 0
Focusing	electrostatic
Resolution	min. 650 lines
Overall length	max. 317 mm

white

### SCREEN

Metal backed phosphor

Lumenescene

Useful diagonal min. 329 mm
Useful width min. 304.5 mm
Useful height min. 241 mm

#### HEATING

Indirect by A.C. or D.C.; parallel supply


Heater voltage


Heater current

 $\frac{V_{\rm f}}{I_{\rm f}}$  11  $\frac{V\pm 10\%}{M}$ 

# MECHANICAL DATA

Dimensions in mm

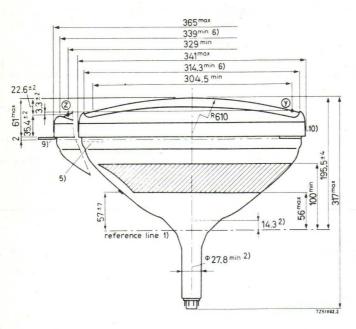


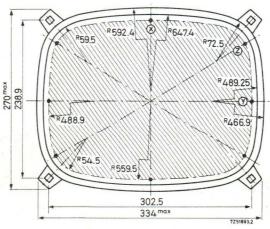

Notes see page 4

### MECHANICAL DATA (continued)

Dimensions in mm

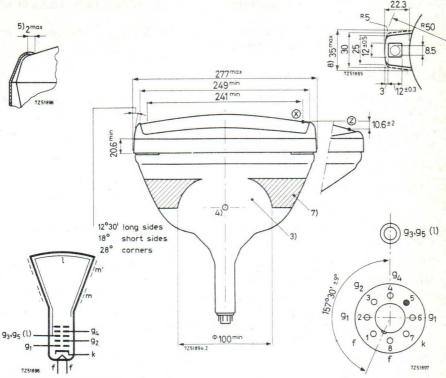

Mounting position: any

Except vertical with the screen downward and the axis of the tube making an angle of less than 20° with the vertical.

Base: Neo Eightar (B8H)

Cavity contact CT8

Accessories:

Socket 2422 501 06001

Final-accelerator contact connector 55563

FOCUSING Electrostatic

The range of focus voltage shown under typical operating conditions results in optimum focus at a beam current of  $100~\mu\mathrm{A}$ .

**DEFLECTION** Magnetic

Diagonal deflection angle 90°

### PICTURE CENTRING MAGNET

Field intensity perpendicular to the tube axis adjustable from 0 to  $79.6\,\mathrm{A/m}$  (0 to 10 Oerstedt).

Adjustment of the centring magnet should not be such that a general reduction in brightness or shading of the raster occurs.

#### NOTES TO OUTLINE DRAWING

- 1. The reference line is determined by the plane of the upper edge of the flange of the reference line gauge when the gauge is resting on the cone.
- 2. End of guaranteed contour. The maximum neck and cone contour is given by the reference line gauge.
- 3. This area must be kept clean.
- 4. Recessed cavity contact.
- 5. Meniscus of resin filler on screen.
- Opening of the metal ring band. Eccentricity with respect to centre of screen max. 1.5 mm.
- The configuration of the external conductive coating is optional but contains the contact area shown in the drawing.
- 8. Minimum space to be reserved for mounting lugs.

  The mounting screws in the cabinet must be situated inside a circle of 8.5 mm diameter drawn around the true geometrical position i.e. corners of a rectangle of 302.5 mm x 238.9 mm.
- 9. The deviation of any lug with respect to the plane through the other three lugs is  $\max$ . 2 mm.
- 10. The metal rimband must be earthed. No electrical contact between the band and the mounting lugs can be guaranteed.

### TYPICAL OPERATION

Final accelerator voltage	$V_{g_3,g_5}(l)$	16 kV
Focusing electrode voltage	$v_{g_4}$	0 to 500 V <sup>1</sup> )
First accelerator voltage	$v_{g_2}$	600 V
Grid No.1 voltage for extinction of focused raster (grid drive service)	-V <sub>g1</sub>	43 to 98 V
Cathode voltage for extinction of focused raster (cathode drive service)	$V_{\mathbf{k}}$	40 to 90 V

### RESOLUTION

Resolution at screen centre		min.	650	lines
Measured at:	$V_{g_3,g_5(\ell)}$		16	kV
	$v_{g_2}$		600	V

This tube will resolve 650 lines measured at a brightness of 340 Nits based on a picture height of 237 mm.

The focus voltage is adjusted to obtain the smallest roundest spot. For optimum overall resolution an external centring magnet may be required.

# LIMITING VALUES (Absolute max. rating system)

Final accelerator	$v_{g_3,g_5(\ell)}$	max. 18 kV min. 12 kV
Focusing electrode voltage	$^{\mathrm{V}\mathrm{g}_{4}}_{-\mathrm{V}\mathrm{g}_{4}}$	max. 1 kV max. 500 V
First accelerator voltage	$v_{g_2}$	max. 800 V
Grid No.1 voltage	_	
positive	$v_{g_1}$	max. 0 V $^{2}$ )
positive peak	$v_{gl_p}$	max. 2 V
negative	$-v_{g_1}$	max. 180 V
Cathode to heater voltage	$v_{kf}$	max. 80 V
peak	$v_{kf_p}$	max. 130 V
Focusing electrode current	$I_{\mathbf{g_4}}$	max. <u>+</u> 25 μA
First accelerator current	$I_{g_2}$	max. $\pm$ 5 $\mu$ A

#### MAXIMUM CIRCUIT VALUES

Resistance between cathode and heater	R <sub>k</sub> /f	max. 1 1	$\Omega$
Impedance between cathode and heater	$Z_{k/f}$ (50 Hz)	max. 500 l	kΩ
Impedance between cathode and earth	$Z_{k/f}$ (50 Hz)	max. 100 l	kΩ
Grid No.1 circuit resistance	$R_{g_1}$	max. 1.5	$\Omega$ N
Grid No.1 circuit impedance	$Z_{g_1}$ (50 Hz)	max. 500 l	kΩ
First accelerator circuit resistance	$R_{g_2}$	max. 1 1	$\Omega$ M
Focusing electrode circuit resistance	$R_{g_4}$	max. 3 M	$\Omega$ M

### EXTERNAL CONDUCTIVE COATING

This tube has an external conductive coating, m, which must be earthed and the capacitance of this to the final electrode is used to provide smoothing for the e.h.t. supply. The tube marking and warning labels are on the side of the cone opposite the final electrode connector and this side should not be used for making contact to the external conductive coating.

#### WARNING

X-ray shielding is advisable to give protection against danger of personal injury arising from prolonged exposure at close range to this tube.

<sup>1)</sup> With the small change in focus spot size with variation of focus voltage, the limit of 0 to 500 V is such that an acceptable focus quality is obtained within this range. If it is required to pass through the point of focus, a voltage of at least -100 V to +600 V will be required.

<sup>2)</sup> The d.c. value of bias must not be such as to allow the grid to become positive with respect to the cathode, except during the period immediately after switching the receiver on or off when it may be allowed to rise to +1 V. The maximum positive excursion of the video signal must not exceed +2 V, and at this voltage the grid current may be expected to be approximately 2 mA.

# MONITOR TUBE

The M38-120W is a 38 cm diameter rectangular television tube with metal backed screen primarily intended for use as a monitor tube.

	QUICK REFERENCE DATA			
Deflection angle			110°	
Focusing		electro	static	
Resolution		min.	650	lines
Overall length		max. 2	279.5	mm

### **SCREEN**

Metal backed	pnospnor
--------------	----------

Luminescence	wnite		
Light transmission of face glass		50	%
Useful diagonal	min.	350	mm
Useful width	min.	290.9	mm

# HEATING

Useful height

Indirect by A.C. or D.C.; parallel or series supply


	Heater voltage	$V_{\mathbf{f}}$	6.3	V
	Heater current	$I_{\mathbf{f}}$	300	mA
CAPACITANCES				
Control grid to all ot	her elements	Co.	6.0	pF

Control grid to all other elements	$C_{g_1}$	6.0	pF
Cathode to all other elements	Ck	4.5	pF
Final accelerator to external conductive coating	$C_{g_3,g_5(\ell)/m}$	600	pF


min.


226 mm

## MECHANICAL DATA

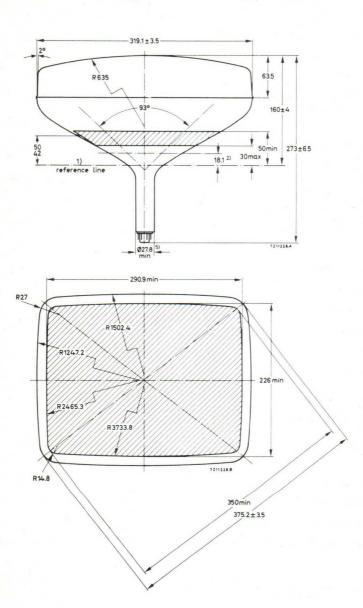

### MECHANICAL DATA (continued)

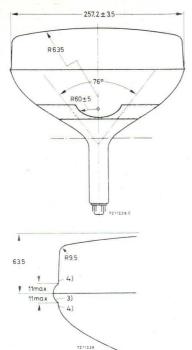

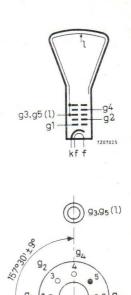



Mounting position: any, except vertical with the screen downward and the axis of the tube making an angle of less than 200 with the vertical.

Base

Neo eightar (B8H)

Cavity contact

CT8

Accessories

Final accelerator contact connector Socket

type 55563 2422 501 06001

**FOCUSING** 

electrostatic

The range of focus voltage shown under "Typical operating conditions" results in optimum focus at a beam current of 100  $\mu$ A.

DEFLECTION

double magnetic

diagonal deflection angle 1100

 $<sup>(1)^2)^3)^4)^5</sup>$ ) See page 6.


### PICTURE CENTRING MAGNET

Field intensity perpendicular to the tube axis adjustable from 0 to 79.6 A/m (0 to 10 Oerstedt). Adjustment of the centring magnet should not be such that a general reduction in brightness or shading of the raster occurs.

### REFERENCE LINE GAUGE.

Dimensions in mm

JEDEC 126

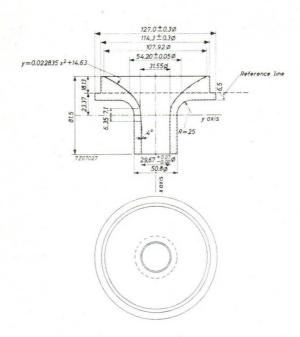

### TYPICAL OPERATING CONDITIONS

Final accelerator voltage Focusing electrode voltage First accelerator voltage Grid No. 1 voltage for visual	$V_{g_3},g_5(\ell)$ $V_{g_4}$ $V_{g_2}$	16 0-400 400	kV V 1) V
extinction of a focused raster	-Vg1	40 to 85	V
Resolution at screen centre	, , ,	min. 625	lines
Measured at	$V_{g_3,g_5(\ell)}$	16	kV
	$V_{g_3,g_5}(\ell)$ $V_{g_2}$	400	V

This tube will resolve 650 lines measured at a screen current of  $100~\mu A$ . The focus voltage is adjusted to obtain the smallest roundest spot. For optimum overall resolution an external centring magnet may be required.

## **LIMITING VALUES** (Absolute max, rating system)

Measured with respect to cathode				
Final accelerator voltage	$v_{g_3,g_5(\ell)}$	max.	18 13	kV kV
Focusing electrode voltage	$^{\mathrm{V}_{\mathrm{g}_{4}}}_{-\mathrm{V}_{\mathrm{g}_{4}}}$	max.	1 500	kV V
First accelerator voltage	$v_{g_2}$	max. min.	550 350	V V
Control grid voltage,				
negative	$-v_{g_1}$	max.	150	V
positive	$v_{g_1}$	max.	0	V
Focusing electrode current	$I_{g_4}$	max.	±25	μΑ
Grid No. 2 current	$I_{g_2}$	max.	<u>+</u> 5	μΑ
Cathode to heater voltage.				
cathode positive	$V_{+k/f} - V_{+k/f-p}$	max.	250 300	V V
cathode negative	V - k/f + V - k/f + p	max.	135 180	V V
Resistance between heater and cathode	Rkf	max.	1	МΩ
Resistance between grid No.1 and earth	$Rg_1$	max.	1.5	МΩ
Impedance between heater and cathode (f = 50 Hz)	${ m Z}_{ m kf}$	max.	500	kΩ
Impedance between cathode and earth (f = 50 Hz)	$Z_k$	max.	100	kΩ

<sup>1)</sup> With the small change in focus spot size with variation of focus voltage the limit of 0-400 V is such that an acceptable focus quality is obtained within this range. If it is required to pass through the point of focus, a voltage of at least  $-100\ V$  to +500 V will be required.

# M38-120W

### WARNING

X-ray shielding is advisable to give protection against possible danger of personal injury arising from prolonged exposure at close range to this tube when operated above 16 kV.

#### EXTERNAL CONDUCTIVE COATING

This tube has an external conductive coating (m), which must be earthed and capacitance of this to the final electrode is used to provide smoothing for the EHT supply. The tube marking and warning labels are on the side of the cone opposite the final electrode connector and this side should not be used for making contact to the external conductive coating.

### NOTES TO OUTLINE DRAWING

- 1) The reference line is determined by the plane of the upper edge of the flange of reference line gauge, (JEDEC 126) when the gauge is resting on the cone.
- 2) End of guaranteed contour. The maximum neck and cone contour is given by the Reference line gauge (see page 4).
- 3) Bulge at splice-line seal may increase the indicated maximum value for envelope width, diagonal and height by not more than 6.4 mm, but at any point around the seal, the bulge will not protrude more than 3.2 mm beyond the envelope surface at the location specified for dimensioning the envelope width, diagonal and height.
- 4) The tube should be supported on both sides of the bulge. The mechanism used should provide clearance for the maximum dimensions of the bulge.
- 5) The maximum dimension is determined by the reference line gauge.



# PROJECTION TUBE

The M.13-38 are 13 cm diameter projection tubes.

The tubes are designed for large screen projection of colour TV displays.

QUICK REFERENCE DATA	
Final accelerator voltage	50 kV
Deflection angle	47 <sup>0</sup>
Focusing	magnetic

### **SCREEN**

Type MG13-38 MU13-38 MY13-38

Colour green blue red

Colour point x=0.19 y=0.72 x=0.17 y=0.13 x=0.661 y=0.331

Useful area min. 92x69 mm<sup>2</sup>

# Brightness

MG13-38 2000  $mcd/cm^2$ 

MU13-38 290 mcd/cm<sup>2</sup>

MY13-38 600  $mcd/cm^2$ 

measured at  $V_{g_2} = 50 \text{ kV}$ 

 $I_0 = 500 \,\mu\text{A}$ 


raster size 92x69 mm<sup>2</sup>


### HEATING


Indirect by A.C. or D.C.; parallel or series supply

Heater voltage V<sub>f</sub> 6.3 V



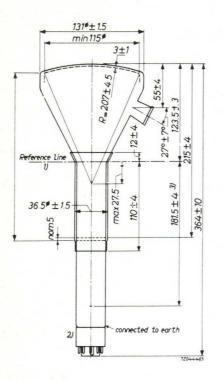

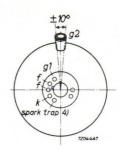

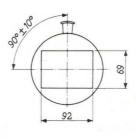

<sup>1)</sup> Reference line is determined by position where a gauge 38.1 + 0.05 -0.00 mm diameter and 50 mm long will rest on bulb cone.

<sup>2)</sup> Socket for this base should not be rigidly mounted; it should have flexible leads and be allowed to move freely. Bottom circumference of base shell will fall within circle concentric with cone axis and having a diameter of 50 mm.

<sup>3)</sup> Distance reference line - top centre of grid.

<sup>4)</sup> This pin must be connected to earth.

### MECHANICAL DATA (continued)

Mounting position: any, except with screen downwards with the axis at an angle of less than 500 to the vertical.

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

Base

Duodecal 7 p

Dimensions and connections

Overall length

max. 374 mm

Face diameter

max. 132.5 mm

Net weight

approx. 950 g

Accessories

Socket

5912/20 type

Final accelerator contact connector

supplied with tube

### **CAPACITANCES**

Control grid to all other elements

max. 10 pF  $C_{g_1}$ 

Cathode to all other elements

 $C_k$ max. 9 pF

FOCUSING

magnetic

Distance from the centre of the air gap of the focusing coil to the front of the screen 240 mm

DEFLECTION

double magnetic

deflection angle 470

### TYPICAL OPERATING CONDITIONS

Accelerator voltage

Vg2(1)

50 kV

Negative grid No.1 voltage for visual extinction of focused raster

100 to 170

Peak accelerator current

Ig2n

min. 2500 µA

# MG/U/Y13-38

LIMITING VALUES (Absolute max. rating system)

Measured with respect to cathode Accelerator voltage

max. 55 kV  $Vg_2(l)$ 40 kV min.

Control grid voltage,

 $-v_{g_1}$ max. 200 negative Vg1 positive max.  $v_{g_{1p}}$ positive peak max. V max. 500  $\mu A^{1}$ ) Grid No. 2 current  $I_{g_2}$ 

Cathode to heater voltage,

V+k/fmax. 100 cathode positive 50 V 2) cathode negative V - k/f +max. Resistance between heater and cathode  $20 k\Omega$ Rkf max. Resistance between grid and earth Rg1 max. 1.5  $M\Omega$ 

Impedance between grid and earth

 $Z_{g_1}$ max.  $0.5 M\Omega$ (f = 50 Hz)

<sup>1)</sup> In order to prevent the possible occurrence of cracked faces, for images with concentrated bright areas (high screen loads) the go current should be kept lower than the indicated value. This is especially the case as for as stationary pictures are concerned.

<sup>2)</sup> In order to avoid excessive hum, the A.C. component of the heater to cathode voltage should be as low as possible and must not exceed 20 VRMS.

### GENERAL OBSERVATIONS

It is essential that means be provided for the instantaneous removal of the beam current in the event of a failure of either one or both of the time bases. Unless such a safety device is incorporated a failure of this type will result in the immediate destruction of the screen of the tube.

Shielding equivalent to a lead thickness of  $1\ \mathrm{mm}$  is required to protect the observer against X radiation.

The raster dimensions should not come below the minimum of  $69x72 \text{ mm}^2$ . The screen shall be given adequate cooling by applying a continuous airblast onto the screen of approx.  $0.06 \text{ m}^3/\text{sec}$ .

In order to prevent damage of the tube caused by a momentary internal arc a resistor of  $50\,k\Omega$  has to be connected between anode contact and the power supply.


Before removing the tube, the screen and the cone should be discharged.

The spark trap and the outer coating of the tube must be connected to earth.

It is necessary to centre the focusing coil to get optimum sharpness.

It is recommended to use the  ${\ensuremath{\text{E.H.T.}}}$  connector, which is delivered with each tube.



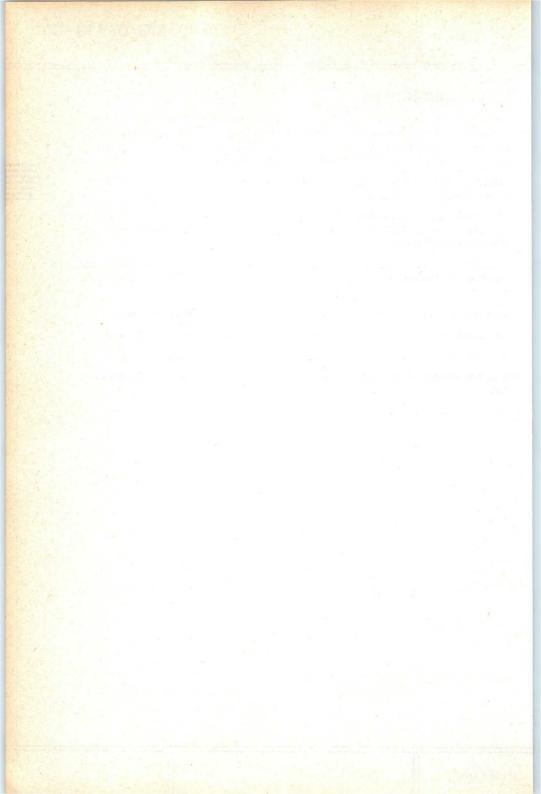

# PROJECTION TUBE

The MW13-38 is a 13 cm diameter projection tube.

The brightness of the tube is such that it can be used for large screen projection of  $TV\ displays$ .

QUICK REFERENCE DATA	
Final accelerator voltage	50 kV
Deflection angle	47 <sup>0</sup>
Focusing	magnetic

### SCREEN

Metal backed

Colour

white

Useful screen area

92 x 69 mm<sup>2</sup>

Brightness

min. 870 mcd/cm<sup>2</sup>

measured at  $V_{g_2} = 50 \text{ kV}$ 

 $I_1 = 500 \, \mu A$ 

raster size  $92 \times 69 \text{ mm}^2$ 

### HEATING

Indirect by A.C. or D.C.; parallel or series supply

Heater voltage

 $V_f$  6.3 V

Heater current

If 300 mA

### **CAPACITANCES**

Control grid to all other elements


Cg<sub>1</sub> max. 10 pF


Cathode to all other elements


Ck max. 9 pF

### MECHANICAL DATA

Dimensions in mm

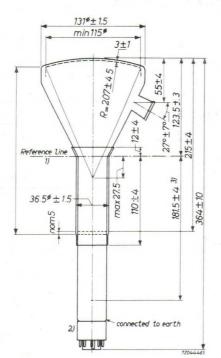

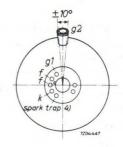

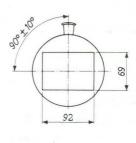

<sup>1)</sup> Reference line is determined by position where a gauge 38.1  $^{+0.05}_{-0.00}$  mm diameter and 50 mm long will rest on bulb cone.

<sup>2)</sup> Socket for this base should not be rigidly mounted; it should have flexible leads and be allowed to move freely. Bottom circumference of base shell will fall within circle concentric with cone axis and having a diameter of 50 mm.

<sup>&</sup>lt;sup>3</sup>) Distance reference line - top centre of grid.

<sup>4)</sup> This pin must be connected to earth.

### MECHANICAL DATA (continued)

Mounting position: any, except screen downwards with the axis at an angle of less than  $50^{\circ}$  to the vertical.

The tube should not be supported by the base alone and under no circumstances should the socket be allowed to support the tube.

Base

Duodecal 7 p

Dimensions and connections

Overall length max. 374 mm
Face diameter max. 132.5 mm

Net weight

approx. 950 g

Accessories

Socket type 5912/20

Final accelerator contact connector supplied with tube

FOCUSING magnetic

Distance from the centre of the air gap of the focusing  $\,$  coil to the front of the screen  $240\,\,\mathrm{mm}$ 

**DEFLECTION** double magnetic

deflection angle 470

### TYPICAL OPERATING CONDITIONS

Accelerator voltage  $V_{g_2}(\ell)$  50 kV

Negative grid No.1 voltage for visual extinction of a focused raster  $-V_{g_1}$  100 to 170 V

Peak accelerator current  $I_{g_{2p}}$  min. 2500  $\mu A$ 



# MW13-38

LIMITING VALUES (Absolute max. rating system)

Measured with respect to cathode				
Accelerator voltage	$V_{g_2}(\ell)$	max.		kV
	82	min.	40	kV
Control grid voltage,				
negative	$-v_{g_1}$	max.	200	V
positive	$v_{g_1}$	max.	0	V
positive peak	$v_{g_{1p}}$	max.	0	V
Grid No. 2 current	$I_{g_2}$	max.	500	$\mu A^{-1}$ )
Cathode to heater voltage,				
cathode positive	V+k/f-	max.	100	$V^{2}$
cathode negative	V-k/f+	max.	50	V
Magnification maximum			40	X
Resistance between heater and cathode	Rkf	max.	20	$k\Omega$
Resistance between grid and earth	$R_{g_1}$	max.	1.5	$M\Omega$
Impedance between grid and earth			K-37())	
(f = 50  Hz)	$z_{g_1}$	max.	0.5	$M\Omega$



<sup>1)</sup> In order to prevent the possible occurrence of cracked faces, for images with concentrated bright areas (high screen loads) the g<sub>2</sub> current should be kept lower than the indicated value. This is especially the case as for as stationary pictures are concerned.

<sup>2)</sup> In order to avoid excessive hum, the A.C. component of the heater to cathode voltage should be as low as possible and must not exceed 20 VRMS.

### GENERAL OBSERVATIONS

It is essential that means be provided for the instantaneous removel of the beam current in the event of a failure of either one or both of the time bases. Unless such a safety device is incorporated a failure of this type will result in the immediate destruction of the screen of the tube.

Shielding equivalent to a lead thickness of 1 mm is required to protect the observer against  $\boldsymbol{X}$  radiation.

The raster dimensions should not come below the minimum of  $69x72 \text{ mm}^2$ . The screen shall be given adequate cooling by applying a continuous airblast onto the screen of approx.  $0.06 \text{ m}^3/\text{sec}$ .

In order to prevent damage of the tube caused by a momentary internal arca resistor of  $50\,\mathrm{k}\Omega$  has to be connected between anode contact and the power supply.


Before removing the tube, the screen and the cone should be discharged.

The spark trap and the outer coating of the tube must be connected to earth.

It is recommended to use the E.H.T. connector, which is delivered with each tube.

It is necessary to centre the focusing coil to get optimum sharpness.



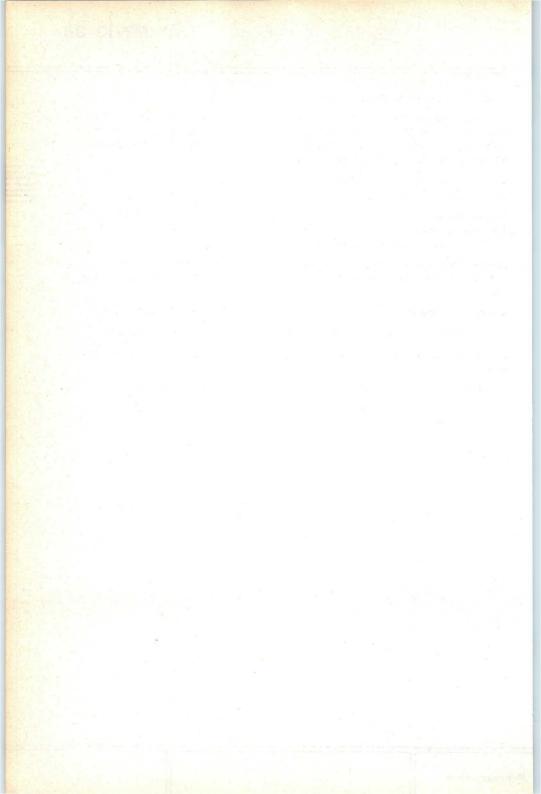


# **OBSOLESCENT TYPE**

M. 13-16

Replacement type, see Q13-110...

Apart from the phosphor, the Q13-110.. is equivalent to the M.13-16. The Q13-110GU has an improved phosphor with respect to the MK13-16. The Q13-110BA has the same phosphor as the MC13-16.



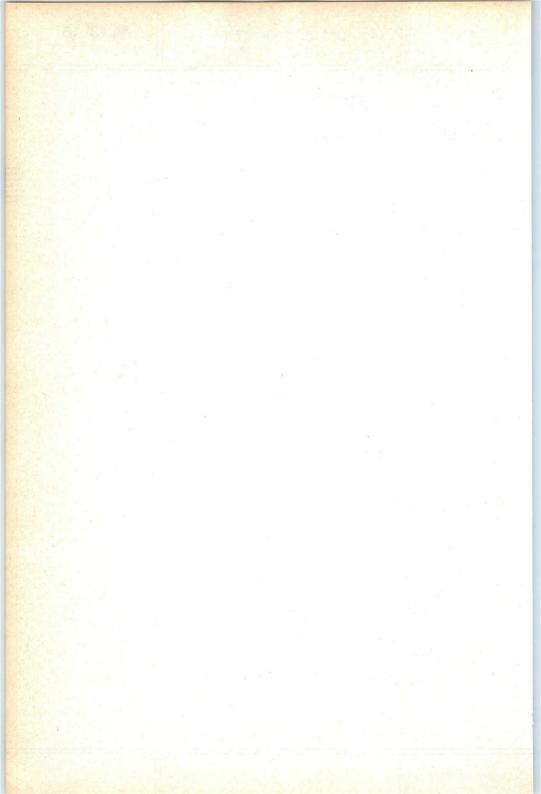

# FLYING SPOT SCANNER TUBE

The Q13-110..is a 13 cm diameter cathode-ray tube intended for flying spot applications.

Q	UICK REFERENCE DATA		
Accelerator voltage		25	kV
Deflection angle		400	
Resolution		1000	lines

### SCREEN

Metal backed

	Colour	Persistence
Q13-110BA	Purplish blue	Very short
Q13-110GU	White	Very short

Useful screen diameter

min. 108 mm

### HEATING

Indirect by A.C. or D.C.; series or parallel supply

Heater voltage	$V_{f}$	6.3	V
Heater current	$I_{f}$	300	mA


### CAPACITANCES

Grid No.1 to all other electrodes	$c_{g_1}$	6.5	pF
Cathode to all other electrodes	$C_k$	6.5	pF
Accelerator to outer conductive coating	$C_{g_2(\ell)/m}$	250 to 450	pF



### MECHANICAL DATA

Dimensions in mm

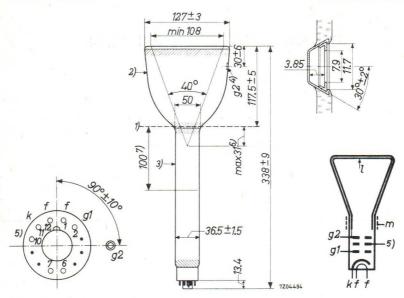

 $\frac{\text{Mounting position:}}{\text{making an angle of less than 500}}$  with the vertical.

Base

Duodecal 7p.

<sup>1)</sup> Reference line, determined by the plane of the upper edge of the reference line gauge when the gauge is resting on the cone.

<sup>2)</sup> Insulating outer coating; should not be in close proximity to any metal part.

<sup>3)</sup> Conductive outer coating; to be grounded.

<sup>4)</sup> Recessed cavity contact.

<sup>5)</sup> Spark trap; to be grounded.

<sup>6)</sup> The distance between the deflection centre and the reference line should not exceed 31 mm.

<sup>7)</sup> Distance between the centre of the magnetic length of the focusing unit and the reference line.

**FOCUSING** 

magnetic

Focusing coil


type AT1997

DEFLECTION

magnetic

### REFERENCE LINE GAUGE

Dimensions in mm

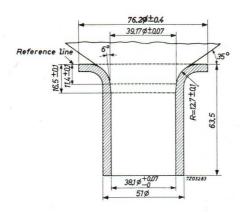

### **OPERATING CHARACTERISTICS**

Accelerator voltage  $\begin{array}{cccc} V_{g_2(\ell)} & 25 & kV \\ \\ \text{Beam current} & I_{\ell} & 50 \text{ to } 150 & \mu\text{A} \\ \\ \text{Negative grid No.1 cut-off voltage} & -V_{g_1}(I_{\ell}\text{=0}) & 50 \text{ to } 100 & V \\ \end{array}$ 

Resolution at centre of screen better than 1000 lines 1)

<sup>1)</sup> With focusing coil AT1997

# LIMITING VALUES (Absolute max. rating system)

Accelerator voltage	$V_{g_2(\ell)}$	max. min.	27 20	kV kV
Grid No.1 voltage,				
negative value	$-v_{g_1}$	max.	200	V
positive value	$+V_{g_1}$	max.	0	V
peak positive value	$+v_{g_{1p}}$	max.	2	V
Cathode current	Ik	max.	150	$\mu A$
Voltage between heater and cathode $1$ )				
cathode negative	Vkf (k neg.)	max.	125	V
cathode positive	Vkf (k pos.)	max.	200	V
peak value, cathode positive	Vkfp(k pos.)	max.	410	$V^2$ )
External resistance between heater and cathode	R <sub>kf</sub>	max.	1	МΩ
External grid No.1 resistance	$R_{g_1}$	max.	1.5	$\mathrm{M}\Omega$
External grid No.1 impedance at a frequency of 50 Hz	$Z_{g_1}$ (f = 50 Hz)	max.	0.5	МΩ

### REMARKS


Measures should be taken for the beam current to be switched off immediately when one of the time-base circuits becomes defective.


An X-ray radiation shielding with an equivalent lead thickness of  $0.5\ \mathrm{mm}$  is required to protect the observer.

<sup>1)</sup> In order to avoid excessive hum, the A.C. component of the heater to cathode voltage should be as low as possible and should not exceed 20 V<sub>RMS</sub>.

 $<sup>^{2}\</sup>mbox{)}$  During a heating-up period not exceeding 45 sec.




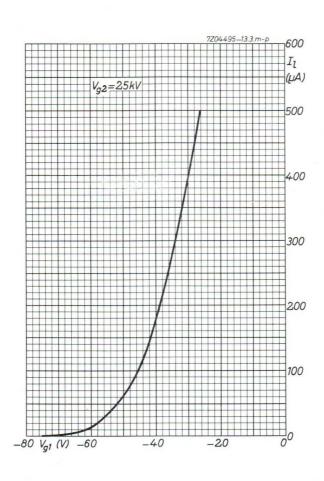

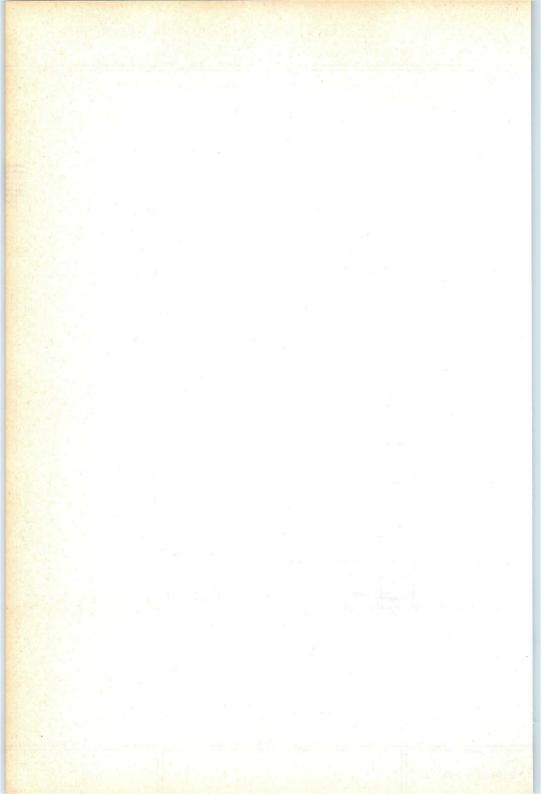


# Associated accessories



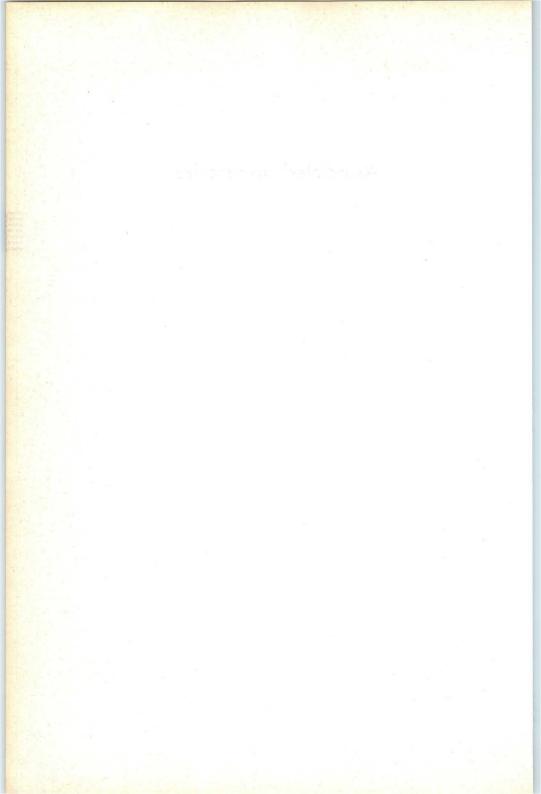

#### FOCUSING COIL

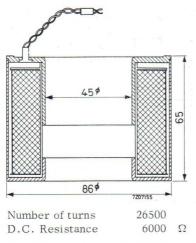


When the MC13-16 is operated at  $Vg_2(\ell)$  = 25 kV, the current through the focusing coil should be adjusted at approx. 33 mA.


The distance between air-gap centre and the screen surface of the MC13-16 should be 217  $\mbox{mm}\,.$ 



#### **DEFLECTION COIL UNIT**

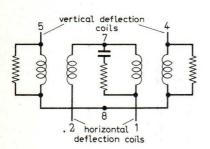


When the MC13-16 is operated at  $V_{g_2(\ell)} = 25 \text{ kV}$  and raster dimensions  $60 \times 80 \text{ mm}^2$ , the horizontal and vertical deflection coils should be connected in series.

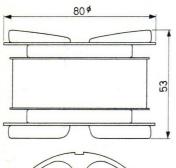

#### Horizontal deflection coils

Inductance	6	mH
Resistance	5.6	$\Omega$
Current, peak to peak	700	mA
Connections (red. grev)	1 and	d 2

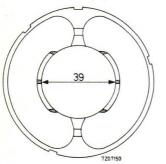

#### Vertical deflection coils


Inductance	8	mH
Resistance	9.6	Ω
Current, peak to peak	540	mA
Connections (yellow, black)	4 and 5	


Operating temperature

max. 85 °C


#### TUBE SOCKET

FOR 14-PIN ALL GLASS BASES

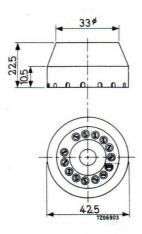


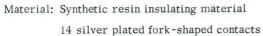




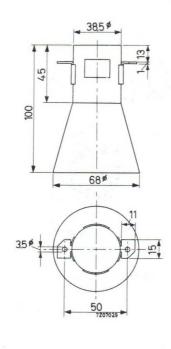




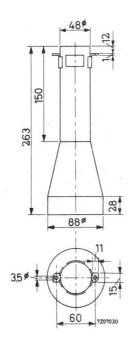




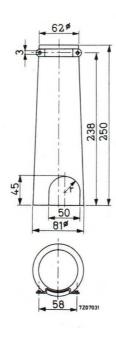


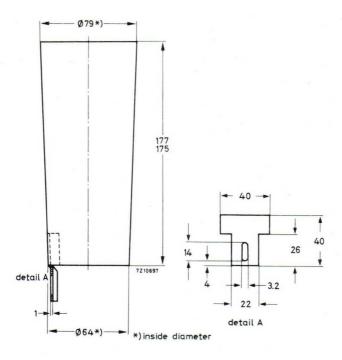

Material: Mu-metal, 0.35 mm thick




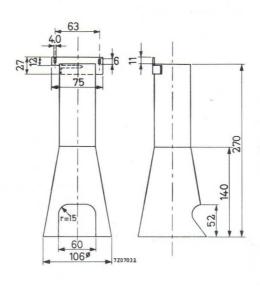

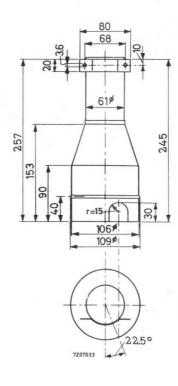




1

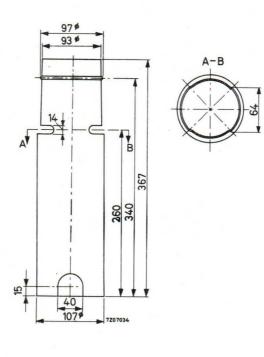


# =

## MU-METAL SCREEN

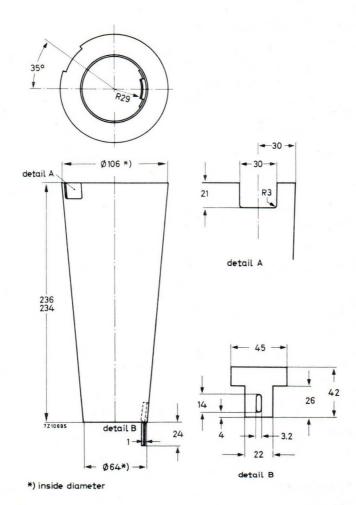


Material: Mu-metal, 0.35 mm thick

Type 55548A without mounting bracket Type 55548 with mounting bracket

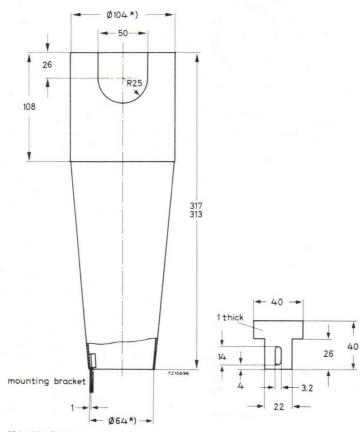


\*) inside diameter


Material: Mu-metal, 0.5 mm thick

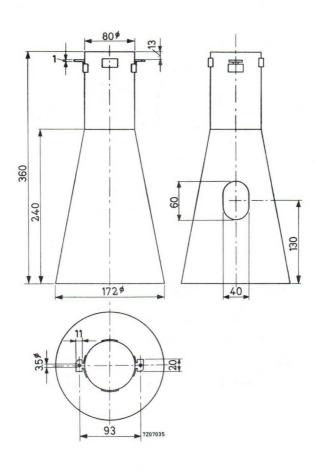




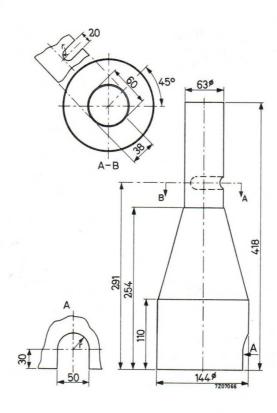





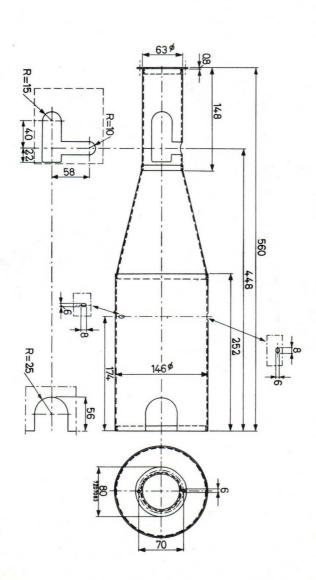



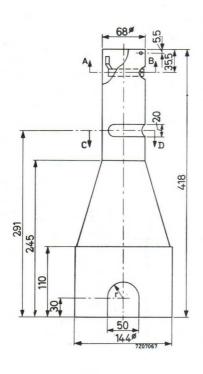

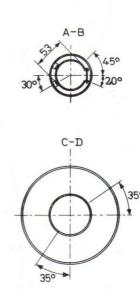


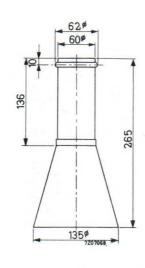




#### FINAL ACCELERATOR CONTACT CONNECTOR



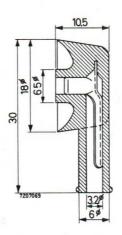

Material: cadmium plated spring contact rubber insulating material


## SIDE CONTACT CONNECTOR

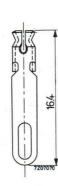




#### FINAL ACCELERATOR CONTACT CONNECTOR



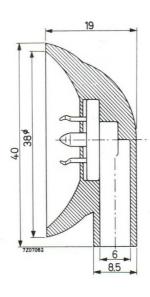


#### **TUBE SOCKET FOR 14-PIN BASES**

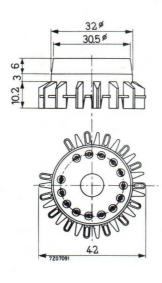

 $\label{eq:material} \text{Material: synthetic resin insulating material} \\ 14 \ \text{gold plated fork shaped contacts}$ 




Type 55580A with 4 mounting lugs L Type 55580 without mounting lugs L

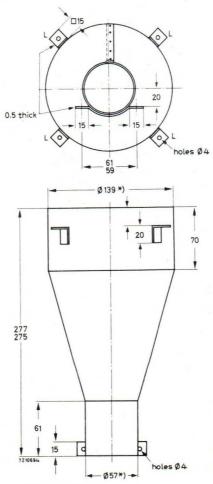

\*) inside diameter


Material: Mu-metal, 0.35 mm thick


Type 55581A with hole H
Type 55581 without hole H

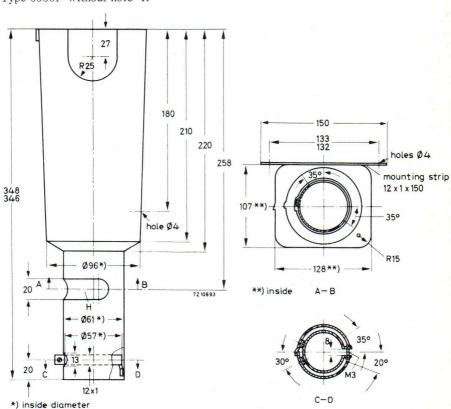


Material: Mu-metal, 0.5 mm thick



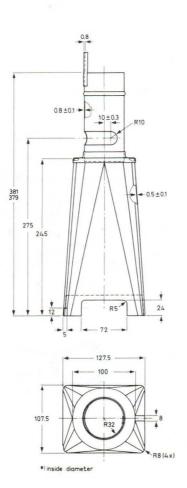

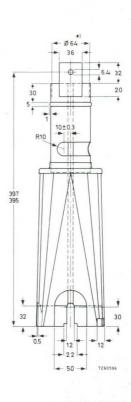


#### **TUBE SOCKET FOR 7-PIN BASES**

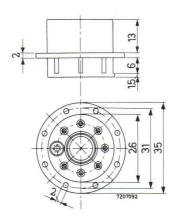


Material: synthetic resin insulating material 7 contacts, guiding hole and central hole



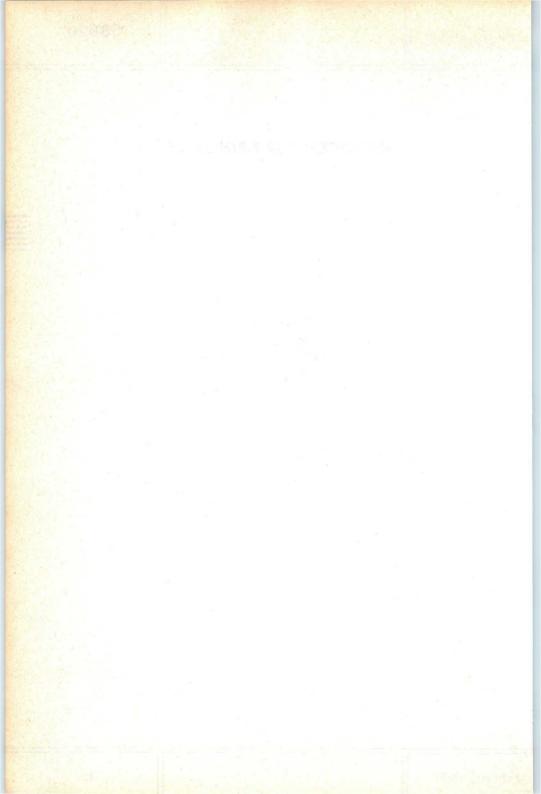

# Camera tubes



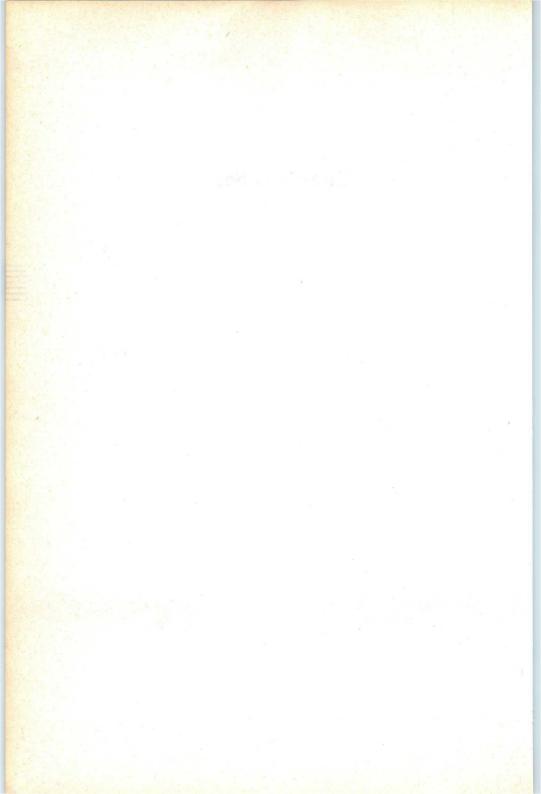

# GENERAL OPERATIONAL NOTES CAMERA TUBES VIDICONS

# A. PRINCIPLES OF OPERATION OF VIDICONS WITH MAGNETIC FOCUSING; MAGNETIC DEFLECTION

#### 1. With integral mesh

Mechanical design

The schematic arrangement of the vidicon with its accessories is shown in Fig.1.

The vidicon may be assumed to consist of three sections, namely the electron gun, the scanning section, and the target section.

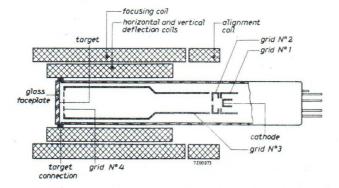


Fig.1. Schematic electrode and coil arrangement

The electron gun contains a thermionic cathode, a grid  $g_1$  controlling the beam current, and a limiter electrode  $g_2$  which accelerates the electrons and releases them in a fine beam through its diaphragm.

The scanning section. The electron beam released by  $g_2$  enters the space enclosed by the cylindrical electrode  $g_3$ . By means of the combined action of the adjustable electrical field of  $g_3$  (beam focus control) and a fixed axial magnetic field produced by the focusing coil, the electrons are focused in one loop on to the target.

The far end of the  $g_3$  cylinder is closed with a fine metal mesh,  $g_4$ , electrically connected to  $g_3$ , which produces a uniform, decelerating field in front of the target. The focused beam is magnetically deflected by two pairs of deflection coils so that it scans the target. Proper alignment of the beam with the axial magnetic field is achieved by either an adjustable magnet, or, as shown in Fig.1, by two sets of alignment coils producing an adjustable transverse magnetic field.

The target section is illustrated in Fig.2. It consists of:

- an optically flat glass faceplate,
- a transparent conductive film on the inner surface of the faceplate, connected electrically to the external signal-electrode ring,
- a thin layer of photoconductive material deposited on the conductive film; in the dark this material has a high specific resistance, which decreases with increasing illumination.

The optical image to be televised is focused on the conductive film by means of a lens system.

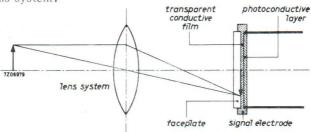


Fig.2. Target section

#### Operation

The external signal-electrode ring is connected via a load resistor to a positive voltage in the order of 30 V (see Fig. 3).

The target may be assumed to consist of a large number of target elements corresponding to the number of picture elements. Each target element consists of a small capacitor  $(C_e)$ , connected on one side to the signal electrode via the transparent conductive film and shunted by a light-dependent resistor  $(R_{1d})$ , see Fig. 3).

When the target is scanned by the beam its surface will be "stabilized" at approximately the cathode potential (low-velocity stabilization) and a potential difference will be established across the photoconductive layer, into ther words, each elementary capacitor will be charged to nearly the same potential as applied to the electrode ring.

In the dark, the photoconductive material is a fairly good insulator, so that only a minute fraction of the charge of the elementary caRid

Ce

Beam

Ce

Itarget element

to preamplifier

Transp.

Fig. 3

pacitors will leak away between successive scans. This charge will be restored by the beam; the resulting current to the signal electrode is termed "dark current".

When an optical image is focused on to the target, those target elements which are illuminated will become more conductive and will be partly discharged. As a consequence a pattern of positive charges corresponding to the optical image will be produced on the side of target facing the gun section.

While scanning this charge pattern the electron beam will deposit electrons on the positive elements until the latter are restored to their original cathode potential, causing a capacitive current to the signal electrode and hence a voltage across the load resistor RL. This voltage, negative going for the highlights, is the video signal and is fed to the pre-amplifier.

A vidicon is called "stabilized" when the magnitude of the beam current applied is just sufficient to restore the scanned surface to cathode potential, so that all elementary capacitors, inclusing those at the highlights in the image, are recharged successively.

During the retrace periods the beam electrons should be prevented from landing on the target since otherwise the scan retraces will appear as dark lines in the picture obtained on the monitor. This may be achieved either by cutting off the beam with suitable negative blanking pulses on the control grid or by cutting off the target with adequate positive blanking pulses applied to the cathode.

#### 2. With a separate mesh construction

The focus coils commonly used in vidicon cameras do not produce an ideal focus field distribution in the vicinity of the vidicon's photoconductive target.

The resulting "landing errors" of the scanning beam reduce the sensitivity and resolution at the periphery of the picture. The beam landing errors can be corrected by electron-optical means. A lens for this purpose may be formed by the cylindrical electrode (g<sub>3</sub>) and the mesh electrode (g<sub>4</sub>). In the vidicons with a separate mesh electrode g<sub>4</sub> is electrically insulated from g<sub>3</sub> and connected to a separate base pin.

The mesh electrode  $(g_4)$  should be made positive with respect to the cylindrical electrode  $(g_3)$ ; the optimum potential difference depends on:

a. the operating mode of the vidicon (choice of the focusing field and  ${\rm Vg}_3$ ); b. the particular type of deflection coil unit used.

As a rule, to obtain the best resolution and most uniform whites the  $V_{g_4}$  should be from 1.1 to 1.5 times higher than  $V_{g_3}$ . Fig.4 shows a typical curve revealing the effect of the ratio  $V_{g_4}/V_{g_3}$  on the resolution measured on a vidicon type XQ1040 in a coil unit type AT1101. The fall-off in resolution at  $V_{g_4}/V_{g_3}$  = 1, corresponding to the situation with conventional vidicons, is caused by the defocusing effect of a space charge at the cathode side of the mesh electrode, produced by secondary electrons released from the mesh.

This space charge can be prevented from building up by making  $g_4$  at least 15 Volts positive relative to  $g_3$ .



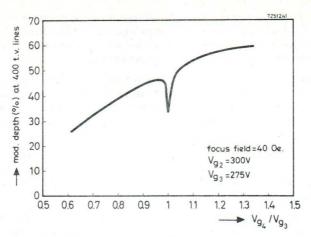


Fig.4. Effect of the  $V_{\rm g4}/V_{\rm g3}$  ratio on the resolution of a vidicon type XQ1040.

Operation of  $g_4$  at a negative potential with respect to  $g_3$  must be avoided in any case, since this would inflict permanent damage on the target, due to ion bombardment. A higher potential applied to  $g_4$  will slightly raise the required deflection currents but these will usually remain well within the ratings of the camera deflection circuits.

<u>Caution</u>. If the camera wiring has been adapted ) for the use of vidicons with separate mesh, insertion of an integral-mesh vidicon will result in normal performance of the tube and do no harm to the tube or the wiring of the camera. However, it should be borne in mind that the insertion of a separatemesh vidicon in an unmodified camera may be detrimental to the vidicon, its target being damaged by ion bombardment; moreover, performance will be unsatisfactory.

) A leaflet is available on request giving suggestions for making cameras suitable for incorporating integral-mesh tubes.

#### B. EQUIPMENT DESIGN AND OPERATING CONSIDERATIONS

The signal electrode connection should be made by a spring contact which bears against the metal ring at the face end of the tube. The spring contact may be provided as part of the focusing coil design.

The signal-electrode voltage should be limited to such a value that the peak dark current does not exceed  $0.25~\mu A$ .

This is of particular importance for the design and adjustment of vidicon cameras with automatically controlled sensitivity (automatic control of the signal-electrode voltage).

Operation of vidicons at excess dark current will result in damage to the photoconductive target and hence shorten the tube life.

The deflection yoke and the focus coil used must be so designed that the beam lands perpendicularly to the target at all points of the scanned area, to ensure high uniformity of sensitivity and focus.

The deflection circuits must provide constant scanning speeds in order to obtain good black-level reproduction. The dark-current signal being proportional to the velocity of scanning, any change in this velocity will produce a black-level error.

The polarity of the focusing coil should be such that a north-seeking pole is attracted to the image end of the focusing coil, with the indicator located outside of and at the image end of the focusing coil.

The alignment coil assembly should be located on the tube so that its centre is at a distance of approx. 94 mm (3 11/16 in) from the face of the tube, and be positioned so that its axis coincides with the axis of the tube, the deflecting yoke and the focusing coil.

The temperature of the faceplate should never exceed  $80\,^{\rm o}{\rm C}$ , either during operation or storage. Operation at a faceplate temperature of 25 to 35  $^{\rm o}{\rm C}$  is recommended.

The temperature of the faceplate is determined by the heating effects of the incident illumination, the associated components and the environment and, to a minor extent, by the tube itself.

To reduce these heating effects and to permit operation in the preferred temperature range under conditions of high light levels, respectively high ambient temperatures, the use of an infra-red filter between object and camera lens, or a flow of cooling air directed across the faceplate, is recommended.

#### Scanning amplitude

Full-size scanning of the  $9.6~\mathrm{mm}\ x\ 12.8~\mathrm{mm}$  area of the photoconductive layer should always be applied.

Underscanning of the photoconductive layer, i.e. scanning of an area of less than  $9.6~\mathrm{mm} \times 12.8~\mathrm{mm}$  or failure of scanning for even a short duration should always be avoided, since this may cause permanent damage to the specified full-size area.

The resolution of a vidicon generally decreases with decreasing  $V_{g_3}$  and  $V_{g_4}$ . The voltage range will depend on the design of the focusing coil, which should be such as to provide a field strength within 2.9 A/mm and 3.5 A/mm (36 Oe to 44 Oe).

Definition, focus uniformity and picture quality also decrease with decreasing  $V_{g_3}$  and  $V_{g_4}$ . In general  $g_3$  and  $g_4$  should be operated above 250 V.

A substantial increase in both limiting resolution and amplitude response may be obtained by increasing the operating voltage of g<sub>3</sub> and g<sub>4</sub> to 750 V. With this mode of operation, the focusing field strength must be increased to approx. 5.6 A/mm (70 Oe).

April 1969

Since beam-landing errors increase with increasing  $V_{g_3}$  and  $V_{g_4}$ , such operation will show a reduced signal output in the corners of the scanned area. When a vidicon with integral mesh is operated in this manner, the deflecting and focusing coils employed must be designed in such a way that beam-landing errors are minimized.

Compensation of residual beam-landing errors can be obtained by supplying modulating voltages of parabolic shape and of both horizontal and vertical scanning frequencies to the cathode and additionally, in order to prevent beam-modulation, to g1, g2, g3 and g4.

A suitable amplitude for this mixed parabolic waveform is approximately  $4\ V$  peak-to-peak. The polarity should be chosen such that the potential of the cathode is lowered as the beam approaches the edges of the scanned area. The use of this modulating waveform also improves the centre-to-edge focus of the vidicon.

Operation with  $\rm V_{g_3}$  and  $\rm V_{g_4}$  at 750 V and a field strength of 5.6 A/mm (70 Oe) requires increased power for the deflecting and focusing coils, which will result in a higher tube temperature unless adequate provisions for cooling are made. Compensation of beam-landing errors by means of mixed modulating voltages of parabolic shape is in general not needed for vidicons with separate mesh since the beam-landing errors may be sufficiently reduced by a proper choice of  $\rm V_{g_4}$ .

## C. INSTRUCTIONS FOR USE FOR VIDICONS WITH MAGNETIC FOCUSING AND MAGNETIC DEFLECTION

- In the case of a separate-mesh vidicon make certain that the camera is adapted for separate-mesh vidicons.
- 2. Clean the faceplate of the tube.
- 3. Insert the tube in the deflection unit so that the straight sides of the masked portions of the faceplate are essentially parallel to the line scan.
- 4. Press the socket firmly onto the base pins.
- 5. Cap lens and close iris.
- 6. Set: (a) grid No.1 bias control at maximum negative bias (beam cut-off)
  - (b) signal-electrode voltage to approximately 25 V
  - (c) scanning amplitude to maximum scan.
- 7. Switch on camera equipment and monitor; allow a few minutes for heating up.
- 8. Adjust monitor to produce a faint, non overscanned, raster.
- 9. Direct camera to the scane to be televised and uncap lens.
- 10. Turn grid No.1 bias-control slowly till a picture is produced on the monitor. If this picture appears washed out, increase beam current. If the picture is too faint, increase lens aperture.
- 11. Adjust beam focus ( $V_{g_3}$  and  $V_{g_4}$  for integral-mesh tubes,  $V_{g_3}$  for separatemesh tubes) and optical focus alternately for best possible focus.
- 12. Adjust scanning amplitudes:
  - (a) by means of a mask of 9.6 mm x 12.8 mm, which is in contact with and centred at the faceplate. Decrease horizontal and vertical deflecting currents till the periphery of this mask is just outside the raster on the



(b) if no mask is available, direct the camera to a test chart having correct aspect ratio (3:4) and adjust the centring controls in such a way that the target ring is just visible in the corners of the picture. Adjust distance from camera to test chart and optical focus alternately till the picture of the test chart completely fills the scanned raster on the monitor.

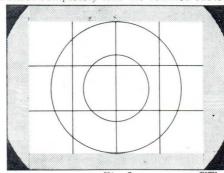


Fig.5

- 13. Adjust alignment controls so that the centre of the picture does not move when beam focus ( $V_{g_3}$  and  $V_{g_4}$  for integral-mesh tubes,  $V_{g_3}$  for separatemesh tubes) is varied.
- 14. Cap lens and adjust signal-electrode voltage to such a value that further increase would cause the background signal to become objectionally high or non-uniform.
- Uncap lens. Adjust beam focus control for optimal picture uniformity in respect of picture whites and resolution.
- 16. Adjust iris for a picture of sufficient contrast and adjust beam current to the minimum value which will give details in the picture highlights.
- 17. Check alignment, beam focus and optical focus.

#### Always:

- make sure the camera wiring is adapted for a separate-mesh tube before installation;
- make sure that the deflection circuits are operative before adjusting beam current:
- maintain the same scanned target area, hence avoid rotating the tube;
- use full size (9.6 mm x 12.8 mm) scanning of the target, hence avoid underscanning;
- use sufficient beam current to stabilize the picture highlights;
- adjust  $\mathrm{Vg}_4$  of separate-mesh tubes to a value positive with respect to  $\mathrm{Vg}_3$  ;
- avoid peak-dark currents in excess of  $0.25 \,\mu\text{A}$ ;
- avoid directing the camera at the sun;
- keep lens capped when transporting the camera.

#### D. VIDICON TUBES WITH OTHER ELECTRODE-GUN SYSTEMS

To facilitate the construction of compact, low power or light weight cameras vidicons with the following electron gun systems have been developed.

Type of electron gun	Focus	Deflection	Main features	Available type
hybrid gun	Е	М	uniform high resolution no focus power required	-
reverse hybrid gun	М	Е	uniform very high resolution no deflection power short tube	-
fully electrostatic gun	Е	E	no deflection power no focus power	XQ1010

E = electrostatic, M = magnetic

# E. PROPERTIES OF THE PHOTOCONDUCTIVE TARGETS AS USED IN THE VIDICONS OF THE XQ1010, XQ1030, XQ1040, XQ1050 SERIES

#### Spectral response

The spectral response of the targets used in the above tubes is shown in Fig. 6.

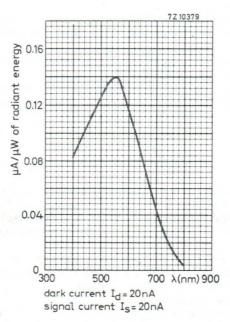


Fig.6

# Dark current

The range of dark currents determined at a faceplate temperature of 30  $\pm$  2  $^{o}$ C is shown in Fig. 7.

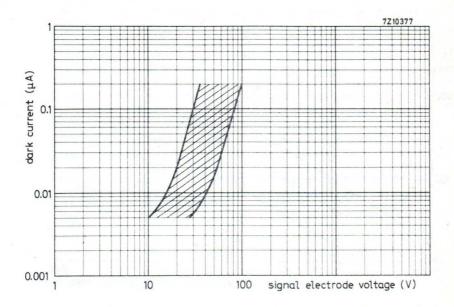


Fig.7

# Transfer characteristics

The light transfer characteristics of a typical vidicon with three dark current settings as parameters are given in Fig. 8.

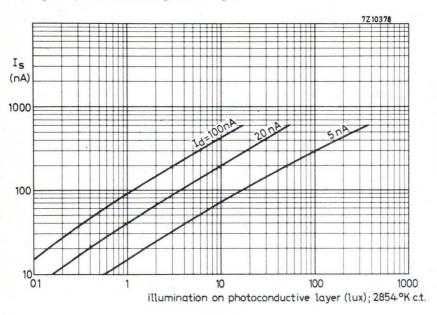


Fig.8


# Spurious signal specification for Vidicon tubes

<u>Section A</u> Vidicons for telecine, other broadcast applications and critical industrial applications.

### Test conditions

1. A back illuminated test transparency, with a aspect ratio of 3:4, with three quality zones (see Fig.1) is projected onto the specified target area  $(9.6 \times 12.8 \, \text{mm}^2)$ , producing even illumination.

Fig.1

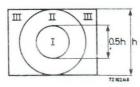

- 2. Light level adjusted to produce a total target current of 0.3  $\mu$ A, target voltage adjusted for a dark current of approx. 20 nA, temperature 30°  $\pm$  2 °C, colour temperature of light source 2854 °K.
- 3. Tube aligned and focused in accordance with the published instructions for use.
- 4. Video-amplifier system having a bandwidth of 5.5 MHz.
- 5. Monitor adjusted for a non-blooming white.
- 6. In the evaluation of blemishes the following definitions apply:
  - a) a spot (black or white) is a blemish with a maximum linear dimension measured in any direction of 0.75% of the picture height (0.8% for industrial grade tubes, 1% for low cost tubes)
  - b) a smudge (blackor white) is a blemish with a maximum linear dimension measured in any direction exceeding 0.75% of picture height (0.8% for industrial grade tubes, 1% for low cost tubes)

# Permitted number, size and location of blemishes 1)


Dimensions of blemishes	Permitted number of blemishes				
in % of picture height	Zone I	Zone II	Zone III		
> 0.75%	0	0	0		
$\leq 0.75\%$ but $> 0.45\%$	0	0	1		
$\leq 0.45\%$ but $> 0.2\%$	0	2 2)	2		
≤ 0.2%	3)	3)	3)		

- 1) Spots (black and white) and smudges (black and white) are not counted when their contrast expressed in % of picture white as measured on a waveform oscilloscope is less than 25% respectively 10%.
- 2) Sum of diameters of these spots shall not exceed 0.75%.
- 3) Spots of this size are allowed unless concentration causes a smudge appearance. As contrast of the smudge the average contrast of the concentration is taken.

## Test conditions

 A back illuminated test transparency with three quality zones (see Fig. 2) is projected onto the specified target area (15 mm dia circular) producing an even illumination.

Fig.2

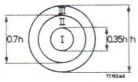

- 2. Light level adjusted to produce a total target current of 0.2  $\mu$ A, target voltage adjusted for a dark current of approx. 20 nA, temperature 300  $\pm$  2 °C.
- 3. Tube aligned and focused in accordance with the published instructions for use.
- 4. Video-amplifier system having a bandwidth of 5.5 MHz.
- 5. Monitor adjusted for a non-blooming white.
- 6. As Section A.6

Permitted number, size and location of blemishes <sup>2</sup>)

Dimensions of blemishes	Permitted number of blemishes				
in % of picture height	Zone I	Zone II	Zone III		
> 0.75%	0	0	, 0		
$\leq 0.75\%$ but $> 0.45\%$	0	1	3		
$\leq 0.45\%$ but $> 0.2\%$	2	3	6		
≤ 0.2%	3)	3)	3)		

<sup>1)</sup> Sum of numbers of spots in zones II and III shall not exceed 6.



<sup>2)</sup> Spots (black or white) and smudges (black or white) are not counted when their contrast expressed in % of picture white as measured on a waveform oscilloscope is less than 25% respectively 5%.

<sup>3)</sup> Spots of this size are allowed unless concentration causes a smudge appearance. As contrast of the smudge the average contrast of the concentration is taken.

# Section C Vidicons for industrial applications

### Test conditions

As Section A

Permitted number, size and location of blemishes

Dimensions of blemishes	Permitted number of blemishes		
in % of picture height	Zone I + Zone II	Zone III	
> 0.8%	0	0	
$\leq 0.8\%$ but $> 0.6\%$	0	1	
$\leq 0.6\%$ but $> 0.2\%$	2	3	
< 0.2%	2)	2)	

<sup>1)</sup> Spots (black and white) and smudges (black and white) are not counted when their contrast expressed in % of picture white as measured on a waveform oscilloscope is less than 50%.

## Section C Vidicons for low cost CCTV cameras

# Test conditions

As Section A


Permitted number, size and location of blemishes 1)

Dimensions of blemishes	Permitted number o	f blemishes
in % of picture height	Zone I + Zone II	Zone III
> 1%	0	0
$\leq 1\%$ but $> 0.6\%$	1	3
$\leq 0.6\%$ but $> 0.2\%$	4	6
$\leq 0.2\%$	2)	2)

<sup>1)</sup> Spots (black and white) and smudges (black and white) are not counted when their contrast expressed in % of picture white as measured on a waveform oscilloscope is less than 50%.

<sup>2)</sup> Spots of this size are allowed unless concentration causes a smudge appearance. As contrast of the smudge the average contrast of the concentration is taken.

<sup>2)</sup> Spots of this size are allowed unless concentration causes a smudge appearance. As contrast of the smudge the average contrast of the concentration is taken.

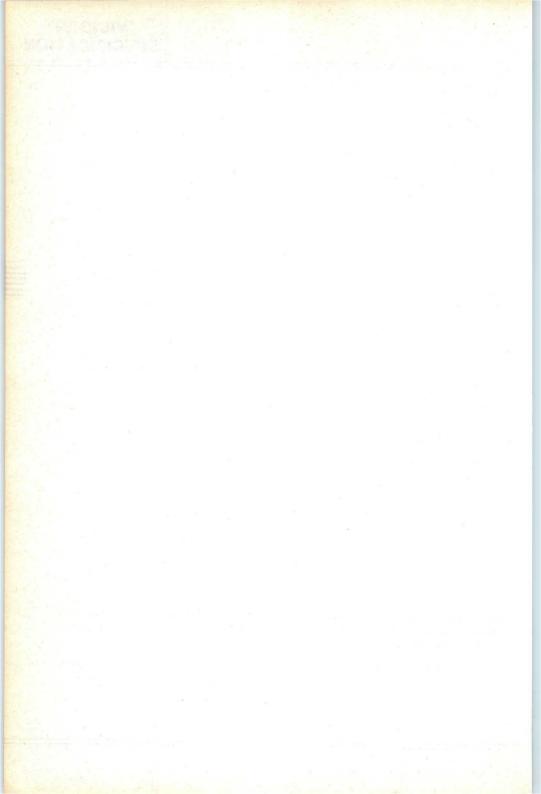

# Spurious signal specification for Plumbicon\* tubes

## Section A

### Test conditions


The spurious signal tests on the Plumbicon tubes are carried out in the manufacturer's test channel under the following conditions:

- 1. <u>Light source:</u> 2854 °K colour temperature (broadcast and industrial tubes)
  P20 light distribution (tubes for medical X-ray equipment)
- 2.  $\underline{\text{Filter}}$  inserted in the light path for chrominance tubes

(see published data for required filter characteristics)


3. Test transparency, back-illuminated, projected on to the target by means of a high quality lens, producing an even illumination on the specified scanned area. The test transparency has an aspect ratio of 3:4 for the evaluation of broadcast and industrial quality tubes. The area of the chart is divided into three quality zones by two concentric circles as shown in Fig.1.

Fig.1

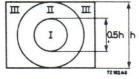

.The test transparency is of a circular shape for the evaluation of tubes for medical X-ray equipment. The area of the chart is divided into three quality zones by two concentric circles as shown in Fig. 2.

Fig.2

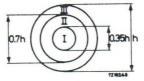

- 4. The video amplifier frequency response is essentially flat to 5 MHz, with a sharp fall-off to 6 MHz.
- 5. No gamma correction or aperture correction is applied in the video amplifier.
- 6. <u>Light level</u>. The light level on the Plumbicon target is adjusted to produce a peak signal current  $I_{\rm S}$  in accordance with Table I.
- 8.  $\underline{\text{Monitor.}}$  The obtained picture is observed on a monitor producing a non-blooming white.

<sup>\*</sup>Registered Trade Mark for T.V. camera tube.

# PLUMBICON SPECIFICATION

### Table I I<sub>s</sub> and I<sub>b</sub> settings

				Tube di 30 r			iameter mm
					ed area 7.1 mm <sup>2</sup>		ed area 2.8 mm <sup>2</sup>
				Ι <sub>S</sub> μΑ	I <sub>b</sub> μA	Ι <sub>S</sub> μΑ	I <sub>b</sub> μA
A grant and the	Black and whit	:e		0.3	0.6	0.2	0.4
Broadcast quality	Luminance		L	0.3	0.6	0.2	0.4
tubes	Chrominance tubes	Red	R	0.15	0.3	0.1	0.2
		Green	G	0.3	0.6	0.2	0.4
	tubes	Blue	В	0.15	0.3	0.1	0.2
The same of the sa	Black and white		0.3	0.6	0.2	0.4	
Industrial quality	Chrominance tubes	Red	R	0.15	0.3	0.1	0.2
tubes		Green	G	0.3	0.6	0.2	0.4
	tubes	Blue	В	0.15	0.3	0.1	0.2
	P20 light source combination with		Scanne 18 mm	ed area		ed area circular	
X-ray medical tubes (for use in an X-ray intensif			0.15	0.3	0.1	0.2	

### Section B

#### Definitions

Blemishes, can be regarded as either spots or smudges.

Spots and smudges are small areas of uneven modulation of any signal current between black level (dark current) and white level (peak signal current). For broadcast quality tubes and tubes for medical X-ray equipment a spot is defined as a blemish with a maximum linear dimension in any direction of 0.7% of the picture height, a smudge as a blemish with a maximum linear dimension in any direction exceeding 0.7% of the picture height.

For industrial quality tubes a spot is defined as a blemish with a maximum linear dimension in any direction of 1% of the picture height and a contrast in excess of 10% of 100% white level (I $_{\rm S}$  as described in Section A, Table I), as measured on a waveform oscilloscope (bandwidth 5.5 MHz), black level being defined as 0%.



Number, size, location and contrast of blemishes

## 1. Broadcast quality tubes

Dimensions of blemishes in $\%$ of picture height	Permitted number of blemishes 1)						
	Black and white Luminance (L) tubes Red, Green (R, G)			Blue tubes (B)			
	Zone I	Zone II	Zone III	Zone I	Zone II	Zone III	
> 0.7% \leq 0.7% but > 0.45% \leq 0.45% but > 0.2% \leq 0.2%	0 0 0 4)	0 0 2 3) 4)	0 1 2 4)	0 0 1 4)	0 1 <sup>2</sup> ) 2 <sup>2</sup> ) 4)	0 3. <sup>2</sup> ) 4. <sup>2</sup> ) 4)	

1) The distance between any two spots shall be greater than 5% of the picture height.

2) The sum of the number of spots in zones II and III shall not exceed 5.

3) The sum of the diameters of these spots shall not exceed 0.7% of the picture height.

4) Spots of this size are not counted unless the concentration causes a smudge appearance. Such concentrations are evaluated as smudges and as contrast, the average contrast of the concentration is taken.

The maximum contrasts allowed for blemishes are shown in Figs. 3 and 4.

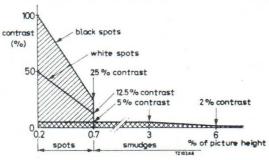


Fig. 3.  $(1)^2$ )

Maximum contrasts allowed for spots and smudges for tubes for monochrome, luminance and green channels

2) Smudges with sizes over 3% of the picture height are allowed provided their contrasts remain within the cross-hatched areas.

<sup>1)</sup> Spots and smudges with a maximum size of 3% of the picture height with contrasts less than 5% for the black and white and luminance tubes or less than 8% for red and blue tubes are not counted.

# PLUMBICON SPECIFICATION

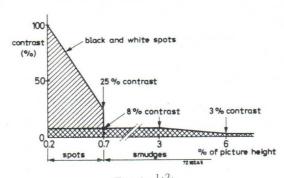


Fig. 4. <sup>1</sup>)<sup>2</sup>)
Maximum contrasts allowed for spots and smudges for tubes for red and blue channels

## II. Industrial quality tubes

Dimensions of blemishes	Permitted number of blemishes 1)					
in % of picture height	Zone I	Zone II	Zone III	Total		
> 1%	0	0 .	0	0		
$\leq 1\%$ but $> 0.7\%$	0	1	2	2		
$\leq 0.7\%$ but $> 0.45\%$	1	2	4	4		
$\leq 0.45\%$ but $> 0.2\%$	2	4	6	6		
$\leq 0.2\%$	2)	2)	2)	2)		
Total permitted number of blemishes	2	4	6	64)		

<sup>1)</sup> The distance between any two spots shall be greater than 5% of the picture height in any direction.



 $<sup>^1</sup>$ ) Spots and smudges with a maximum size of 3% of the picture height with contrasts less than 5% for the black and white and luminance tubes or less than 8% for red and blue tubes are not counted.

<sup>2)</sup> Smudges with sizes over 3% of the picture height are allowed provided their contrasts remain within the cross-hatched areas.

<sup>2)</sup> Spots of this size are not counted unless concentration causes a smudge appearance. Such concentrations are evaluated as smudges, and as contrast, the average contrast of the concentration is taken.

 $<sup>^3</sup>$ ) Blemishes with contrasts  $\leq$  10% are not counted.

<sup>4)</sup> For 30 mm diameter tubes only.

# III. Tubes for medical X-ray equipment

Dimensions of blemishes	Permitted number of blemishes					
in % of picture height	Zone I	Zone II	Zone III			
		2)	2)			
$\leq 1\%$ but $> 0.7\%$	0	0	0			
$\leq 0.7\%$ but $> 0.45\%$	0	1	3			
$\leq 0.45\%$ but $> 0.2\%$	2	3	6			
$\leq 0.2\%$	1)	1)	1)			

<sup>1)</sup> Spots of this size are not counted unless concentration causes a smudge appearance. Such concentrations are evaluated as smudges, and, as contrast, the average contrast of the concentration is taken.

The maximum contrasts allowed for blemishes are shown in the Fig.5.

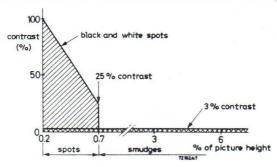


Fig.5. Blemishes with contrasts  $\leq 3\%$  are not counted.

 $<sup>^{2}</sup>$ ) The sum of the number of spots in zones II and III shall not exceed 6.

# RATING SYSTEM

#### ABSOLUTE MAXIMUM RATING SYSTEM

Absolute maximum ratings are limiting values of operating and environmental conditions applicable to any electronic device of a specified type as defined by its published data, which should not be exceeded under the worst probable conditions.

These values are chosen by the device manufacturer to provide acceptable serviceability of the device, taking no responsibility for equipment variations, environmental variations, and the effects of changes in operating conditions due to variations in the characteristics of the device under consideration and of all other electronic devices in the equipment.

The equipment manufacturer should design so that, initially and throughout life, no absolute maximum value for the intended service is exceeded with any device under the worst probable operating conditions with respect to supply voltage variation, equipment component variation, equipment control adjustment, load variations, signal variation, environmental conditions, and variations in characteristics of the device under consideration and of all other electronic devices in the equipment.





# CAMERA TUBE

 $Plumbicon^*$ , sensitive high-definition pick-up tube with photoconductive target and low velocity stabilization.

The XQ1020 is intended for use in black and white, the L, R, G, and B versions for use in four and three tube colour studio cameras.

QUICK REFERENCE DATA						
Focusing			magneti	С		
Deflection			magneti	С		
Diameter			approx.	30	mm	
Heater			6.3 V,	300	mA	

#### OPTICAL

photoconductive layer (aspect ratio 3:4)	12.8 mm x 17.1	mm 1)
Orientation of image on photoconductive	D	. 2

ans of index pin

type:	XQ1020, XQ1020L	min.	275	$\mu$ A/lumen
	XQ1020R	min.	60	$\mu$ A/lumen <sup>3</sup> )
	XQ1020G	min.	125	$\mu$ A/lumen <sup>3</sup> )
	XQ1020B	min.	32	$\mu$ A/lumen 3)
Gamma	a of transfer characteristic	0.95	0.05	4)

#### HEATING

Indirect by A.C. or D.C.; parallel supply

Spectral response; max. response at

Heater voltage	$v_{f}$	6.3	$V \pm 5\%$
Heater current	$\overline{\mathrm{I_f}}$	300	mA

approx.

500 nm

<sup>\*</sup> Registered Trade Mark for T.V. camera tube 1)2)3)4) See page 5.




#### MECHANICAL DATA

Dimensions in mm

Distance between axis of anti-reflection glass disc and geometrical centre of signal electrode ring, measured in plane of faceplate: max. 0.2 mm.

total glass thickness:  $7.2 \pm 0.2$ 

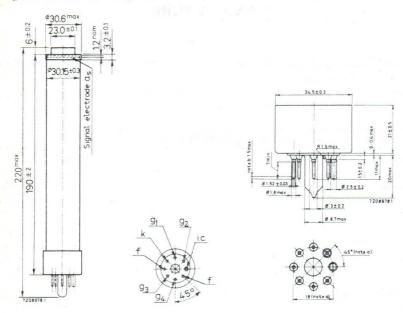

- a) The base passes a flat gauge with a centre hole  $9.00\pm0.01$  Ø and holes for passing the pins with the following diameters: 7 holes of 1.75 + 0.005 Ø and one hole of  $3.00 \pm 0.005 \, \emptyset$ . The holes may deviate max. 0.01 from their true geometrical position. Thickness of gauge 7 mm.
- b) The ends of the pins are tapered and/or rounded but not brought to a sharp point.

Mounting position: any

Net weight: approx. 100 g

#### ACCESSORIES

Socket

Focusing and deflection coil assembly for XQ1020

for XQ1020L, R, G, B

type 56021

type AT1132 or 3122 108 68300 type AT1112 or

type AT1113 or type AT1113/01

For optimal screening of the target from the live end of the line deflection coils the use of 3122 108 68300 or AT1113/01 is recommended.



# XQ1020 XQ1020 L XQ1020 R,G,B

#### CAPACITANCE

Signal electrode to all  $C_{as}$  3 to 6 pF  $^{5}$ )

FOCUSING magnetic <sup>6</sup>)

**DEFLECTION** magnetic <sup>6</sup>)

Dark current at Vas = 45 V

### **CHARACTERISTICS**

Grid No.1 voltage for cut-off at  $V_{g_2} = 300 \text{ V}$   $V_{g_1} = -30 \text{ to } -100 \text{ V}^{7})^{8}$ 

Blanking voltage, peak to reak on grid No.1  $V_{gln-p}$  max.

on cathode  $V_{k_{p-p}}$  min. 25 V

Grid No.2 current at normally

required beam currents  $I_{g_2}$  max. 2 mA

 $I_{a_s}$ 

max. 0.003

MA

# LIMITING VALUES (Absolute max. rating system)

Signal electrode voltage  $V_{a_S}$  max. 50 V  $^8$ )
Grid No.4 voltage  $V_{g_4}$  max. 1100 V  $^8$ )

Grid No.3 voltage  $V_{g_3}$  max. 800 V 8)

Voltage between grid No.4 and grid No.3  $V_{g_4/g_3}$  max. 350 V 8)

Grid No.2 voltage  $$V_{g_2}$$  max. 350 V  $^8$ ) Grid No.2 dissipation  $$W_{g_2}$$  max. 1 W

Grid No.1 voltage, positive  $V_{g_1}$  max. 0 V

Cathode heating time before drawing cathode current Th min. I min

Cathode to heater voltage,

positive peak V<sub>kf<sub>D</sub></sub> max. 50 V

negative peak  $-V_{
m kfp}$  max. 50 V

Ambient temperature, storage and operation  $t_{amb}$  max. 50 °C min. -30 °C

Faceplate illumination max. 500 lx 9)

Faceplate illumination max. 500 lx 9)

5) 6) 7) 8) 9) See page 5.

# XQ1020 XQ1020 L XQ1020 R,G,B

## OPERATING CONDITIONS AND PERFORMANCE

Cathode voltage	$v_k$	0	V
Grid No.2 voltage	$v_{g_2}$	300	V
Signal electrode voltage	$v_{a_s}$	45	$V^{10}$ )
Beam current	Ibeam	See note 11	
Focusing coil current at given values of grid No.4 and grid No.3 voltage		See note 12	
Line coil current and frame coil current		See note 12	
Faceplate illumination	See not	es 13 and 14	
Faceplate temperature	t	20 to 45	oC

#### Resolution

Modulation depth i.e. uncompensated horizontal amplitude response at  $400\,\mathrm{TV}$  lines, at centre of picture.

The figures shown represent the typical horizontal amplitude response of the tube after correction for faults introduced by the optical system. 15)

	XQ1020 XQ1020L	XQ1020R	XQ1020G	XQ1020	В
Highlight signal current $I_s$ $V_{g_4}$ = 550 to 650 V	0.3	0.15	0.3	0.15	μΑ
$V_{\rm g_4}/_{\rm g_3}$ = 50 to 100 V (adjusted for optimum focus)	40	35	40	50	%

See also note 12

Limiting resolution

≥ 600 TV lines

Signal to noise ratio at  $I_{\rm S}$  = 0.15  $\mu A$ 

approx. 200:1 16)

Decay (or lag)

Measured with 100% signal current = 0.1  $\mu \rm A$  and a light source with a colour temperature of 2850 °K.

Appropriate filter inserted in light-path for tubes XQ1020R, G, B.

	XQ1020L, R, G, B	XQ1020B
Residual signal after dark pulse of 60 ms	max. 5	max. 6 %
Residual signal after dark pulse of 200 ms	max. 2	max. 3 %

<sup>10) 11) 12) 13) 14) 15) 16)</sup> See page 5 and 6

#### NOTES

- Underscanning of the specified useful target area of 12.8 mm x 17.1 mm. or failure of scanning, should be avoided since this may cause damage to the photoconductive layer.
- 2) For correct orientation of the image on the photoconductive layer the horizontal scan should be essentially parallel to the plane passing through the tube axis and the index pin.
- 3) Measuring conditions:

Illumination 4.54 lx at black body colour temperature of 2850  $^{0}$ K; the appropriate filter inserted in the light path. The signal current obtained in nA is a measure of the colour sensitivity expressed in  $\mu$ A per lumen of white light before the filter.

Filters used:

55875R	Schott	OG2	thickness	3 mm
55875G	Schott	VG9	thickness	1 mm
55875B	Schott	BG12	thickness	3 mm
See page	8 for tran	smission	n curves.	

- 4) a) Gamma is, to a certain extent, dependent on the wavelength of the illumination applied.
  - b) The use of gamma-stretching circuitry is recommended.
- $^{5}$ ) The capacitance  $C_{a_S}$  to all, which effectively is the output impedance, increases when the tube is inserted into the deflecting/focusing coil assembly.
- 6) For focusing/deflection coil assembly, see under "Accessories".
- 7) Without blanking voltage on grid No.1.
- 8) At  $V_k = 0 V$ .
- <sup>9</sup>) For short intervals. During storage the tube face shall be covered with the plastic hood provided; when the camera is idle the lens shall be capped.
- 10) The signal electrode voltage shall be adjusted to 45 V. To enable the tube to handle excessive highlights in the scene to be televised the signal electrode voltage may be reduced to a minimum of 25 V, this will, however, result in some reduction in performance, especially in respect of sensitivity.
- 11) The beam current shall be adjusted for correct stabilization of the highlight signal currents stated in the table.

12)	Focus	Line	Frame
	current	current	current
	mA	mApp	mApp
Black/white coil assembly AT 1132 and 3122 108 68300			
$V_{g_2} = 550$ to 600 V, $V_{g_4} = 675$ V	25	235	35
$V_{g_3}$ = 550 to 600 V, $V_{g_4}$ = 675 V Colour coil assemblies AT 1112, AT 1113, AT 1113/01			
$V_{g_3} = 550$ to 600 V, $V_{g_4} = 675$ V	100	235	35
	(app	rox. valu	ies)



The optimum voltage ratio  $V_{g_4}/V_{g_3}$  depends on the type of focusing/deflection coil used: for types AT1112, AT1113, AT1113/01, AT1132, 3122 108 68300 a ratio of 1.1:1 to 1.15:1 is recommended.

- 13) Typical faceplate illumination level for the XQ1020 and XQ1020L to produce 0.3  $\mu$ A signal current will be approx. 4 lx. The signal currents stated for the colour tubes XQ1020R, G, B respectively will be obtained with an incident white light level (2850 °K) on the filter of approx. 10 lx. These figures are based on the filters described in note 3, for filter BG12 however a thickness of 1 mm is chosen.
- 14) In the case of a black/white camera the illumination on the photoconductive layer,  $B_{\rm ph}$ , is related to scene illumination,  $B_{\rm sc}$ , by the formula:

$$B_{ph} = B_{sc} \frac{R.T}{4F^2 (m+1)^2}$$

in which R represents the average scene reflectivity or the object reflectivity, whichever is relevant, T the lens transmission factor. F the lens aperture, and m the linear magnification from scene to target.

A similar formula may be derived for the illumination level on the photoconductive layers of the R, G, and B tubes in which the effects of the various components of the complete optical system have been taken into account.

- 15) The horizontal amplitude response can be raised by the application of suitable correction circuits, which affects neither the vertical resolution, nor the limiting resolution.
- 16) The stated ratio represents the "visual equivalent signal-to-noise ratio", which is taken as the ratio of highlight video-signal current to RMS noise current, multiplied by a factor of 3, assuming an RMS noise current of the video pre-amplifier of 2 nA, bandwidth 5 MHz.

#### GENERAL RECOMMENDATIONS

- During transport, handling and storage the axis of the Plumbicon must be either vertical, with faceplate up, or horizontal; the faceplate should be covered with the hood provided.
- To avoid damage to the tungsten basepins, the Plumbicon should be inserted into its socket with care. Shocks, undue force, and bending loads on the pins are to be avoided.
- 3. During long term storage the ambient temperature should not exceed 30 °C.
- 4. The properties of the photoconductive material used in the Plumbicon may deteriorate during long idle periods. To restore them, the tube should be operated for a few hours, in overscanned condition, with an evenly illuminated target and a signal current of  $0.15\,\mu\text{A}$ , at the voltage settings indicated in its test data.
- 5. The signal electrode connection is made by a springcontact, which is part of the focusing coil assembly, and is kept pressed against the signal electrode ring.



- 6. Electrostatic shielding of the signal electrode is required to avoid interference effects in the picture. Effective shielding is provided by a grounded shield inside the focusing coil at the faceplate end, and one inside the deflecting yoke.
- 7. The light transfer characteristic of the Plumbicon tube being characterized by a gamma near unity, it may be desirable for broadcast applications to incorporate a gamma correcting circuitry in the video-amplifier system with an adjustable gamma of 0.5 to 1.

It is suggested to design this gamma correcting circuitry such that an extra compression can be introduced by manual control in the video signal range of 75% to 100% of normal peak white level.

This provision will prevent the video-amplifier system from becoming overloaded when the Plumbicon tube is exposed to scenes containing small peaked highlights as caused by reflections of shiny objects.

8. The Plumbicon tube not generating own noise to any noticeable extent. the signal-to-noise ratio will be determined mainly by the entrance noise of the video-amplifier system.


The high sensitivity of the Plumbicon tube warrants pictures with excellent signal-to-noise ratio under normal studio lighting conditions provided its output is fed into a well-designed input stage of the video-amplifier system. In such a system an aperture correction may be incorporated to ensure an attractive gain in resolving power without visually impairing the signal-to-noise ratio.

#### INSTRUCTIONS FOR USE

Instructions for use are packed with each tube



XQ1020 XQ1020L XQ1020R,G,B

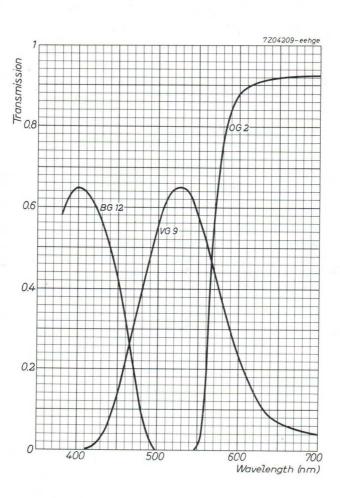



# CAMERA TUBE

 $\label{eq:plumbicon} Plumbicon^*, sensitive\ pick-up\ tube\ with\ lead\ oxide\ photoconductive\ target\ and\ low\ velocity\ stabilization.$  Provided with sepatate mesh construction.

The tubes of this series are mechanically and electrically identical to the tubes of the XQ1020 series, the only difference being the degree of freedom from blemishes of the photoconductive target.

The tubes are intended for industrial and educational black and white and colour cameras. The series comprises the following versions:

for black and white cameras


XQ1021R XQ1021G XQ1021B

for use in the chrominance channels of colour cameras

For all further information see data of the QX1020 series.



<sup>\*</sup>Registered Trade Mark for T.V. camera tube.

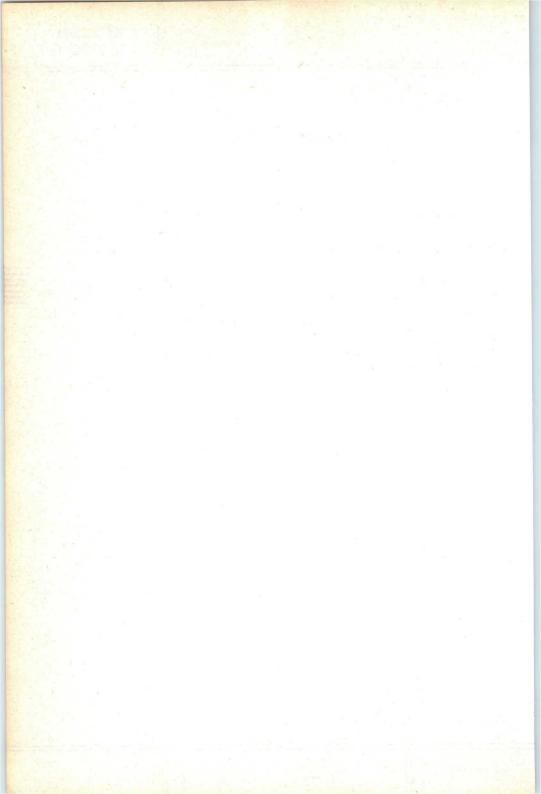

# **CAMERA TUBE**

Plumbicon\*, sensitive high definition pick-up tube with lead-oxide photoconductive target and low velocity stabilisation.

Provided with separate mesh construction.

The XQ1022 is exclusively intended for use with X-ray image intensifiers in medical equipment.

QUICK REFERI	ENCE DATA
Focusing	magnetic
Deflection	magnetic
Diameter	approx. 30 mm
Heater	6.3 V, 300 mA
Without anti halation glass disc	

#### OPTICAL

Dimensions of quality area	
on photoconductive layer	

circle of  $18 \, \mathrm{mm} \, \mathrm{diameter}^1)^2)$ 

Orientation of image on photoconductive layer

By means of index pin  $^2$ )

Sensitivity, measured with a fluorescent light source having  $P_{20}\ distribution$ 

min. 200  $\mu$ A/lumen typ. 275  $\mu$ A/lumen

Gamma of transfer characteristic

 $0.95 \pm 0.05$  <sup>3</sup>)

Spectral response; max. response at

approx. 500 nm

#### HEATING

Indirect by A.C. or D.C.; parallel supply

Heater voltage
Heater current


 $\frac{V_f}{I_f} \qquad \frac{6.3 \quad V \pm 5\%}{300 \quad mA}$ 

<sup>\*</sup>Registered Trade Mark for T.V. camera tube

 $<sup>(1)^2)^3</sup>$ ) See page 5.

## MECHANICAL DATA

Dimensions in mm

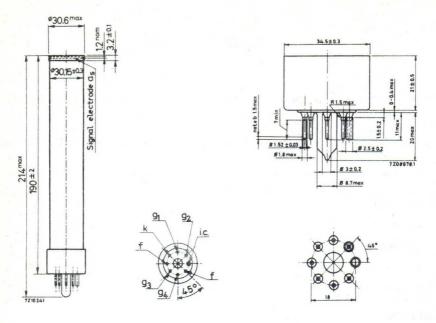

- a) The base passes a flat gauge with a centre hole  $9.00\pm0.01\,$  Ø and holes for passing the pins with the following diameters: 7 holes of  $1.75\pm0.005\,$ Ø and one hole of  $3.00\pm0.005\,$ Ø. The holes may deviate max. 0.01 from their true geometrical position. Thickness of gauge 7 mm.
- b) The ends of the pins are tapered and/or rounded but not brought to a sharp point.

Mounting position: any

Net weight:

approx. 100 g

**ACCESSORIES** 

Socket

type 56021

Focusing and deflection coil assembly

AT1122, AT1132, AT1132/01 4)

CAPACITANCE

Signal electrode to all

 $C_{as}$  3 to 6 pF  $^{5}$ )

FOCUSING

magnetic 6)

DEFLECTION

magnetic 6)

<sup>4)5)6)</sup> See page 5

#### **CHARACTERISTICS**

Grid No.1 voltage for cut-off at $V_{g_2} = 300 \text{ V}$	Vg1	-30 to -100	v <sup>7</sup> ) <sup>8</sup> )
Blanking voltage, peak to peak			
on grid No.1, min. required	Vg <sub>1p</sub> -p	70	V
on cathode, min. required	V <sub>kp-p</sub>	25	V
Grid No. 2 current at normally	P P		
required beam currents	$^{\mathrm{I}}\mathrm{g}_{2}$	max. 1	mA
Dark current	$I_{a_s}$	max. 3	nA )
LIMITING VALUES (Absolute max. rating system	n)		
Signal electrode voltage	$v_{a_s}$	max. 50	V <sup>8</sup> )
	S		0

Grid No. 2 current at normally				
required beam currents	$I_{g_2}$	max.	1	mA
Dark current	$I_{a_s}$	max.	3	nA )
LIMITING VALUES (Absolute max. ratin	ng system)			
Signal electrode voltage	$v_{a_s}$	max.	50	V <sup>8</sup> )
Grid No.4 voltage	$v_{g_4}$	max.	1100	V 8)
Grid No.3 voltage	$v_{g_3}$	max.	800	V 8)
Voltage between grid No.4 and grid No.3		max.	350	V 8)
Grid No. 2 voltage	$v_{g_2}$	max.	350	V <sup>8</sup> )
Grid No.2 dissipation	$w_{g_2}$	max.	1	W
Grid No.1 voltage, positive	$v_{g_1}$	max.	0	V
negative	$-v_{g_1}$	max.	125	V
Cathode current	$I_{\mathbf{k}}$	max.	6	mA
Cathode heating time before drawing cathode current	$T_{\mathbf{h}}$	min.	1	min
Cathode to heater voltage,				
positive peak	$v_{kf_p}$	max.	50	V
negative peak	-V <sub>kf</sub> <sub>p</sub>	max.	50	V
Ambient temperature, storage and operation	tamb	max. min.	50 -30	°C °C
Faceplate temperature, storage and operation	t	max. min.	50 -30	oC oC
Faceplate illumination		max.	100	lx <sup>9</sup> )

 $5)^{6})^{7})^{8})^{9}$ ) See page 5



<sup>)</sup> Target voltage adjusted to the value indicated by the tube manufacturer in the test sheet as delivered with each individual tube.

#### OPERATING CONDITIONS AND PERFORMANCE

Cathode voltage	Vk	0	V
Grid No.2 voltage	$v_{g_2}$	300	V
Grid No.3 voltage	$v_{g_3}$	550-600	$V^{10}$ )
Grid No.4 voltage	$v_{g_4}$	See note 11	
Signal electrode voltage	$v_{a_s}$	15-45	$V^{12}$ )
Beam current	$I_b$	See note 13	
Focusing coil current			
Line coil current and frame coil current		See note 14	
Highlight signal electrode current	$I_{a_s}$	0.1 to 0.5	$\mu$ A
Average signal output		approx. 0.06	$\mu A 15)$
Faceplate temperature	t	25 to 40	°C

#### Resolution

Faceplate illumination

Modulation depth, i.e. uncompensated horizontal amplitude response at MHz (625 lines, 50 field system) in picture centre  $$<$30\ \%$^{17})^{18})$$  Signal to noise ratio at Is = 0.15  $\mu\rm A$  approx. 200 : 1  $^{19})$ 

## Decay (or lag)

Measured with 100% video signal current of  $0.1~\mu\mathrm{A}$  which has been flowing through the layer for a minimum of  $5~\mathrm{s}$  Beam adjusted for correct stabilisation. Fluorescent light source having  $P_{20}$  distribution.

Residual signal after dark pulse of 60 msec max. 10 % typ. 5 % <sup>17</sup>)
Residual signal after dark pulse of 200 msec max. 4 % typ. 2 % <sup>17</sup>)

approx. 2 lux 16)

 $<sup>10^{11}, 12^{13}, 14^{15}, 16^{17}, 18^{19}</sup>$ ) See pages 5 and 6

#### NOTES

- 1. All underscanning of the specified useful target area of 18 mm diameter or failure of scanning should be avoided. Since this may cause permanent damage to the photoconductive layer.
- The area beyond the 18 mm circular optical image preferably to be covered by a mask.
- 3. The near unity gamma of the XQ1022 ensures good contrast when televising low contrast X-ray image-intensifier pictures as encountered in radiology. Further contrast improvement may be obtained when an adjustable gamma expansion circuitry is incorporated in the video amplifier system.
- For optimal screening of the target from the live end of the line deflection coils the use of AT1132/01 is recommended.
- 5. Cas which effectively is the output impedance, increases when the tube is inserted into the deflection/focusing coil assembly.
- 6. See "Accessories".
- 7. With no blanking voltage on g1.
- 8. At  $V_k = 0 V$ .
- 9. For short intervals. During storage the tube face shall be covered with the plastic hood provided.
- $10\,.$  Grid No.  $\!3$  voltage adjusted for optimum picture focus.
- 11. Grid No.4 voltage 50-100 V positive to grid No.3 voltage.
- 12. The target voltage should be adjusted to the value indicated by the tube manufacturer on the test sheet as delivered with each individual tube.
- 13. Operation of the tube with beam currents  $I_{b}$  not sufficient to stabilize the brightest picture elements must be carefully avoided by order to prevent loss of highlight detail and/or "sticking" effects. The incorporation of a separate mesh construction allows excess beam currents  $I_{b}$  up to 0.6  $\mu A$  to be applied without appreciable loss in resolution.
- 14. For AT1122, AT1132, AT1132/01, at  $V_{g_3} = 550$  to 600 V,  $V_{g_4} = 675$  V

The optimum voltage ratio  $V_{g4}/V_{g3}$  depends on the type of focusing/deflection coil used: for types AT1112, AT1132, AT1132/01 ratio of 1.1:1 to 1.15:1 is recommended.

15. Substraction of the dark current is unnecessary because of the extremely small value.

# XQ1022

16. In the case of a black/white camera the illumination on the photoconductive layer, B<sub>ph</sub>, is related to scene illumination, B<sub>sc</sub>, by the formula:

$$B_{ph} = B_{sc} \frac{R.T.}{4F^2 (m+1)^2}$$

in which R represents the average scene reflectivity or the object reflectivity, whichever is relevant, T the lens transmission factor, F the lens aperture, and m the linear magnification from scene to target.

- 17. With a signal current of 0.1  $\mu$ A and a beam current of 0.5  $\mu$ A.
- 18. Horizontal amplitude response can be raised by the application of aperture correction. Such compensation, however, does not affect the vertical resolution, nor does it influence the limiting resolution.
- 19. The stated ratio represents the "visual equivalent signal-to-noise ratio", which is taken as the ratio of highlight video-signal current to R.M.S. noise current, multiplied by a factor of 3. (Assuming an R.M.S. noise current of the video pre-amplifier of  $2.10^{-9}$  A, bandwidth 5 MHz).

#### GENERAL RECOMMENDATIONS

- During transport, handling and storage the axis of the Plumbicon must be either vertical, with faceplate up, or horizontal; the faceplate should be covered with the hood provided.
- To avoid damage to the tungsten basepins, the Plumbicon should be inserted into its socket with care. Shocks, undue force, and bending loads on the pins are to be avoided.
- 3. During long term storage the ambient temperature should not exceed 30 °C.
- 4. The properties of the photoconductive material used in the Plumbicon may deteriorate during long idle periods. To restore them, the tube should be operated for a few hours, in overscanned condition, with an evenly illuminated target and a signal current of  $0.15 \,\mu\text{A}$ , at the voltage settings indicated in its test data.
- The signal electrode connection is made by a springcontact, which is part of the focusing coil assembly, and is kept pressed against the signal electrode ring.
- 6. Electrostatic shielding of the signal electrode is required to avoid interference effects in the picture. Effective shielding is provided by a grounded shield inside the focusing coil at the faceplate end, and one inside the deflecting yoke.

#### INSTRUCTIONS FOR USE

Instructions for use are packed with each tube



# CAMERA TUBE

Plumbicon\*, sensitive pick up tube, with lead-oxide photoconductive target with extended red response and high resolution.

Low velocity target stabilization. Provided with separate mesh construction for good uniformity of signal and resolution and good highlight handling.

The XQ1023 is intended for use in black and white cameras, the XQ1023L for use in the luminance channel of four tube colour cameras, the XQ1023R for use in the red channel of both three and four tube colour cameras.

## QUICK REFERENCE DATA

Focusing : magnetic Heater : 6.3 V, 300 mA

Deflection: magnetic Cut-off of spectral response: over 850 nm

Diameter: approx. 30 mm Provided with anti-halation glass disc

#### OPTICAL

Dimensions of quality rectangle on target (aspect ratio 3:4)

12.8 x 17.1 mm<sup>2</sup> 1)

Orientation of image on target

See note 2)

Sensitivity (colour temperature of light source 2854 °K), typical

	notes	XQ1023	XQ1023L	XQ1023R
white	3), 4)	450 μA/LmF	450 μA/LmF	
red	5)		7	160 μA/LmF

\* Registered trade mark for T.V. camera tube.

1) 2) 3) 4) 5) See page 5

Data based on pre-production tubes.

Gamma of transfer characteristic

 $0.95 \pm 0.05$ 

Spectral response max, response at

See page 11 approx. 500 nm

6)


**HEATING**: Indirect by A.C. or D.C.; parallel supply

#### MECHANICAL DATA

Dimensions in mm

6.3 V + 5%

Distance between axis of anti-reflection glass disc and geometrical centre of signal electrode ring, measured in plane of faceplate: max. 0.2 mm.

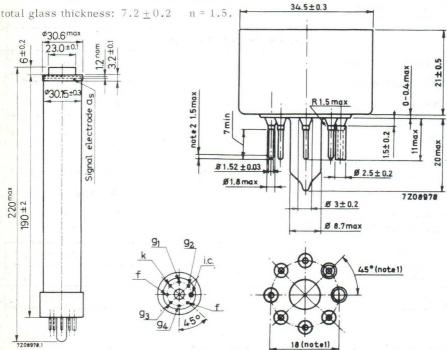

<sup>1)</sup> The base passes a flat gauge with a centre hole  $9.00 \pm 0.01$  Ø and holes for passing the pins with the following diameters: 7 holes of  $1.75 \pm 0.005$  Ø and one hole of  $3.00 \pm 0.005$  Ø.



The holes may deviate max. 0.01 from their true geometrical position. Thickness of gauge 7 mm.

<sup>2)</sup> The ends of the pins are tapered and/or rounded but not brought to a sharp point.

<sup>6)</sup> See page 5

# XQ1023 XQ1023L XQ1023R

## **MOUNTING POSITION** any

# WEIGHT

Net weight

approx. 100 g

#### ACCESSORIES

Socket type 56021

Focusing and deflection coil assembly for XQ1023

AT1132, AT1132/01 7)

AT1112

Vg1

Vglpp

 $V_{k_{pp}}$ 

Ig2

Ias

for XQ1023L, XQ1023R

AT1113 AT1113/01 <sup>7</sup>)

## CAPACITANCES

Signal electrode to all

3 to 6 pF 8)  $C_a$ 

max.

max.

-30 to -100 V 10)

max.  $0.003 \mu A$ 

50

70 V

25 V

1 mA

V 11)

**FOCUSING** magnetic 9)

DEFLECTION magnetic 9)

#### CHARACTERISTICS

Grid No.1 voltage for cut-off

at  $V_{g_2} = 300 \text{ V}$ 

Blanking voltage peak to peak

on grid No.1, minimum required

on cathode , minimum required

Grid No.2 current at normally required beam currents

Dark current at  $V_{a_S} = 45 \text{ V}$ 

LIMITING VALUES (Absolute max. rating system)

Signal electrode voltage

Vas

Grid No.4 voltage Vg4 1160 V 11) max.

 $V_{g_3}$ V 11) Grid No.3 voltage max. 800 V 350 Potential difference between grid No.4 and No.3 max.

Vg4/g3 V 11) 350 Grid No.2 voltage max.

 $v_{g_2}$ 

7) 8) 9) 10) 11) See pages 5 and 6

# XQ1023 XQ1023L XQ1023R

Grid No.2 dissipation	$W_{g_2}$	max.	1	W
Grid No.1 voltage, positive	$v_{g_1}$	max.	0	V
negative	$-v_{g_1}$	max.	125	V
Cathode to heater voltage, positive peak	$V_{\mathrm{kf_p}}$	max.	50	V
negative peak	-V <sub>kf</sub> <sub>p</sub>	max.	50	V
Heating-up time of heater	P	min.	1	min. 12
Ambient temperature, storage and operation	t <sub>amb</sub>	max. min.	50 -30	°C
Faceplate temperature, storage and operation	t	max. min.	50 -30	oC oC
Faceplate illumination		max.	500	lux 13)
OPERATING CONDITIONS AND PERFO	ORMANCE			
Cathode voltage	$v_k$		0	V
Grid No.2 voltage	$v_{g_2}$		300	V
Signal electrode voltage	$v_{a_s}$		45	V 14)
Grid No.3 and No.4 voltage	${ m V}_{{ m g}_3}$ and ${ m V}_{{ m g}_4}$	see no	te <sup>15</sup> )	and $17$ )
Beam current	Ibeam	see note 16)		
Focusing coil current		see no	te <sup>15</sup> )	
Line and frame deflection coil current		see no	te <sup>15</sup> )	
Faceplate illumination		see note $^{18}$ ) and $^{19}$ )		
Faceplate temperature		20	to 45	oC
Resolution Modulation depth, i.e. uncompensated lines (note 20)	d horizontal amplitud	e respoi	nse at	400 T.V
<u>X</u>	Q1023, XQ1023L	XQ102	3R	
Highlight signal current $I_{\rm S}$	0.3 μΑ	0.3	μА	
Beam current Ibeam	0.6 μΑ	0.6	ı, A	

4

Corners

Picture centre

12) 13) 14) 15) 16) 17) 18) 19) 20) 21) 22) See pages 6 and 7

55%

40%

20)

21) 22)

#### OPERATING CONDITIONS AND PERFORMANCE (continued)

Limiting resolution

 $\geq$  700 T.V. lines

XQ1023 XQ1023L

Signal to noise ratio at a signal current of  $0.15 \mu A$ 

approx. 200:1 23)

| Decay (or lag)                                  |               | XQ1023<br>XQ1023L |                | XQ1023R                    |  |  |
|---|---------------|-------------------|----------------|----------------------------|--|--|
|   | $I_{S} = 0.3$ | $I_{S} = 0.04$    | $I_{S} = 0.15$ | $I_{S} = 0.04 \mu\text{A}$ |  |  |
|   | $I_b = 0.6$   | Ib = 0.6          | $I_{b} = 0.3$  | $I_b = 0.3 \ \mu A$        |  |  |
| Residual signal after dark pulse of 60 ms typ.  | 3             | 14                | 5              | 13 %                       |  |  |
| Residual signal after dark pulse of 200 ms typ. | 1.5           | 5                 | 2              | 5 %                        |  |  |

#### NOTES

see note 24

- 1. a) Underscanning of the specified target area of 12.8 x 17.1 mm<sup>2</sup> or failure of scanning, should be avoided since this may cause damage to the photoconductive target.
  - b) In a colour camera the effective useful image dimensions will be slightly smaller, due to small displacements of the guns in the tube from the central position (in that case the centers of the optical images on the faceplates do not coincide exactly with the centers of the useful photoconductive surfaces). An effective useful image area of 12.6 x 16.8 mm<sup>2</sup> is guaranteed.
- 2. For proper orientation of the image on the photoconductive layer the horizontal scan direction should be parallel to the plane passing through the tube axis and the index pin.
- 3. All measurements are made with an infrared absorbing filter, Balzers, Calflex Bl/Kl interposed between light source and target. For typical transmission curve of this filter see page 10.
- 4. Measured with 4.54 lux on the specified target area, when the infrared absorbing filter is removed. The signal current obtained in nA equals the sensitivity in  $\mu A$ per filtered lumen (µA/LmF).
- 5. Measured as indicated in notes 3 and 4 but with additional filter inperposed between light source and target. Filter used is: Schott, OG2 (3 mm). For transmission curve see page 10.
- 6. The use of gamma-stretching circuitry is recommended.
- 7. For optimal screening of target from live end of line deflection coils type AT1113/01 and type AT1132/01 are recommended.
- 8. Capacitance  $C_{a_S}$  to all, which effectively is the output impedance, increases when the tube is inserted into the deflecting/focusing assembly.
- 9. For focusing/deflecting coil assembly, see under "Accessories".

<sup>23)24)</sup> See page 7.

## NOTES (continued)

- 10. With no blanking voltage on g1.
- 11. At  $V_K = 0 V$ .
- 12. A minimum of 1 minute heating-up time for the heater is to be observed before drawing cathode current.
- 13. For short intervals. During storage and idle periods of the camera the tubeface shall be covered with the plastic hood provided, respectively the lens be capped.
- 14. The signal electrode voltage shall be adjusted to 45 V. To compete with excessive highlights in the scene to be televised the signal electrode voltage may be reduced to a minimum of 25 V, this will however result in some reduction in performance.

| 15. Black and white coil assemblies                                 |           | line | frame              |
|---|-----------|------|--------------------|
| AT1132, AT1132/01   | focus     |      | deflection current |
| V = 600 V   | mA        | mApp | mApp               |
| $V_{g_3} = 600 \text{ V}$<br>$V_{g_4} = 650 \text{ V}$ to 700 V app | orox. 25  | 235  | 35                 |
| Colour assemblies   |           | -    |                    |
| AT1112, AT1113, AT1113/01   |           |      |                    |
| $V_{g_3} = 600 \text{ V}$<br>$V_{g_4} = 650 \text{ V}$ to 700 V app | orox. 100 | 235  | 35                 |

The direction of the current through the focusing coil should be chosen such that a north seeking pole will be repelled at the faceplate end of the coil.

The optimum voltage difference between grid No.4 and grid No.3 is depending on the type of focusing/deflection assembly used. For above types a voltage difference of 50~V to 100~V is recommended.

16. To accommodate for peaked highlights (reflections etc.) in the scene to be televised some over-stabilization is recommended.

The figures quoted underneath for resolution relate to a "white" signal  $I_{\rm S}$  of 0.3  $\mu{\rm A}$  and a beam current  $I_{\rm Deam}$  sufficient to just stabilize a peaked "white" signal of 0.6  $\mu{\rm A}$  for XQ1023 and XQ1023L, respectively 0.15  $\mu{\rm A}$  and 0.3  $\mu{\rm A}$  for XQ1023R.

- 17. Grid No.3 voltage adjusted for correct electrical focus.
- 18. Faceplate illumination level for the XQ1023 and XQ1023L typically needed to produce 0.3  $\mu$ A signal current will be approx. 3 lux. The signal current stated for the XQ1023R will be obtained with an incident light-level (2854  $^{\rm O}$ K) on the filter of approx. 10 lux.

The figures stated for modulation depth are based on the use of the filter described in note 5.



## NOTES (continued)

19. Illumination on the photo-conductive layer,  $B_{ph}$ , in the case of a black/white camera is related to scene-illumination,  $B_{sc}$ , by the formula:

$$B_{ph} = B_{sc} \frac{R.T.}{4F^2 (m+1)^2}$$

in which R represents the scene-reflexivity (average or the object under consideration, whichever is relevant), T the lens transmission factor, F the lens aperture and m the linear magnification from scene to target.

A similar formula may be derived for the illumination level on the photoconductive layer of the XQ1023L, XQ1023R tubes in which the effects of the various components of the complete optical system have been taken into account.

20. The figures shown represent the typical horizontal amplitude responses of the tubes proper after correction for losses in resolution introduced by the optical system.

Horizontal amplitude response can be raised by the application of suitable correction circuits. Such compensation, however, does not affect vertical resolution, nor does it influence the limiting resolution.

- 21. Corner resolution is measured on the diagonal, at a distance from the picture center equal to 0.35 times the picture diagonal.
- 22. After readjustment of the electrical focus. For optimal overall resolution the application of dynamic focusing voltages to grid No.3 is recommended.
- 23. The stated radio represents the "visual equivalent signal-to-noise ratio", which is taken as the ratio of highlight video-signal current to R.M.S. noise-current, multiplied by a factor of 3. (Assuming an R.M.S. noise-current of the video-pre-amplifier of  $2.10^{-9}$  A, bandwidth 5 MHz).
- 24. Measured with a signal current  $I_S$  which has been flowing through the target at least 30 s and beam current sufficient to just stabilize a signal current of magnitude  $I_b$ . The figures in the columns 2 and 4 are indicative for the performance of the tubes under low-key conditions when overbeamed.



## GENERAL RECOMMENDATIONS AND INSTRUCTIONS FOR USE

## TRANSPORT, HANDLING, STORAGE

During transport, handling or storage the longitudinal axis must either be in a horizontal position or be kept vertically with the faceplate of the tube up.

During long-term storage the ambient temperature should preferably not exceed 30 °C.

#### GENERAL

- Signal-electrode connection is made by a suitable spring-contact, executed as part of the focusing coil assembly, against the signal electrode ring at the faceend of the tube.
- Electrostatic shielding of the signal-electrode is required in order to avoid interference effects in the picture. Effective shielding is provided by grounding shields on the inside of the face-end of the focusing coil and on the inside of the deflecting yoke.
- 3. The properties of the photoconductive layer of the Plumbicon may be found to have slightly deteriorated during long idle periods such as encountered between the last test in our works and actual delivery to the user.
  - It is therefore recommended to operate the tube directly after receipt under normal voltage settings, in overscanned position with evenly illuminated target and a signal current of 0.15  $\mu\rm A$  for some hours after which the initial properties will have been fully restored.
- 4. The Plumbicon as described in these data has been provided with tungsten base pins. It is recommended to avoid mechanical force and shocks to these pins and to insert the tube into its socket, type 56021, with care.
- 5. The light-transfer characteristic of the Plumbicon being characterised by a gamma near unity, it may be desirable for broadcast applications to incorporate a gamma correcting circuitry in the video-amplifier system with an adjustable gamma of 0.5 to 1.
  - It is suggested to design this gamma correcting circuitry such that an extra compression can be introduced by manual control in the video signal range of 75 to 100% of normal peak white level.
  - This provision will prevent the video amplifier system from becoming overloaded when the Plumbicon with its near unity gamma is exposed to scenes containing small peaked highlights as caused by reflections of shiny objects.
- The Plumbicon not generating own noise to any noticeable extent, the signal to noise ratio will mainly be determined by the entrance noise of the video amplifier system.






The high sensitivity of the Plumbicon warrants pictures with excellent signal-to-noise ratio under normal studio lighting conditions provided its output is fed into a well-designed input stage of the video-amplifier system. In such a system an aperture correction may be incorporated to ensure an attractive gain in resolving power without impairing the signal to noise ratio.


## INSTRUCTION FOR USE

Instructions for use are packed with each tube



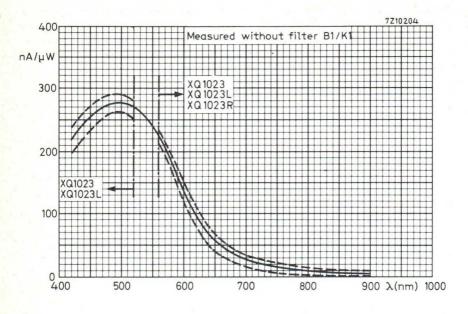


Spectral sensitivity characteristic measured at a constant signal output of  $50~\rm nA$  from  $12.8~\rm x~17~mm^2$  (except at low sensitivity values).

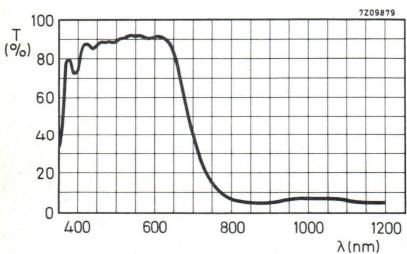

Typical transmission curve of heat-reflecting interference filter, Type CALFLEX-B1/K1



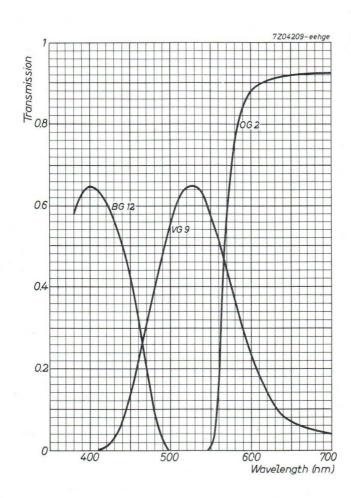

# STATE OF THE PARTY OF THE PARTY

# CAMERA TUBE

Plumbicon\*, sensitive pick-up tube with lead-oxide photoconductive target with extended red response and high resolution. Low velocity target stabilization. Provided with separate mesh construction.

The tubes of this series are mechanically and electrically identical to the tubes of the XQ1023 series, the only difference being the degree of freedom from blemishes of the photoconductive target.

The tubes are intended for industrial and educational black and white and colour cameras. The series comprises the following versions:

XQ1024


for black and white cameras

XQ1024R

for use in the red channel of colour cameras

For all further information see data of XQ1023.

<sup>\*</sup> Registered Trade Mark for T.V. camera tube.

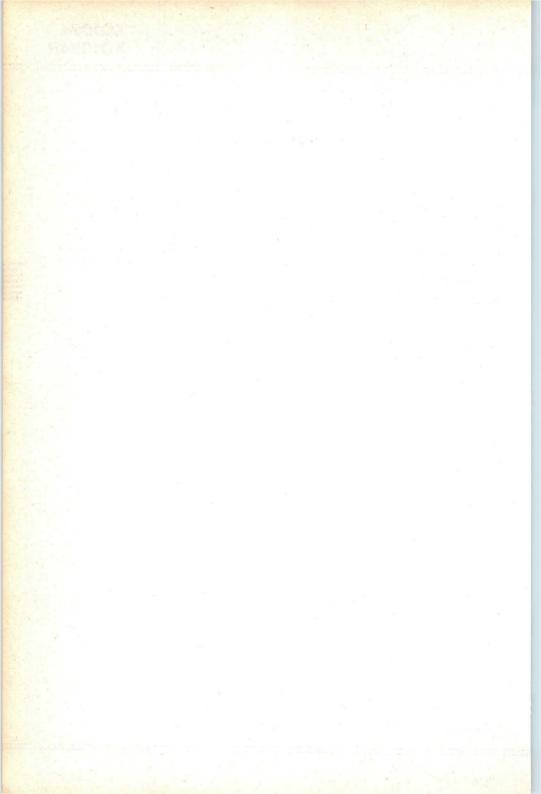

# **CAMERA TUBE**

Plumbicon\*, sensitive pick-up tube with lead-oxide photoconductive target with extended red response and high resolution.

Low velocity target stabilization. Provided with separate mesh for good uniformity of signal and resolution and good highlight handling.

The tubes of the XQ1025 series are identical to the tubes of the XQ1023 series but incorporate an infra-red reflecting filter on the anti-halation glass disc.

## QUICK REFERENCE DATA

Focusing: magnetic Heater: 6.3V, 300 mA

Deflection: magnetic Cut-off of

Diameter: approx. 30 mm spectral response: ~ 750 nm 1)

Provided with anti-halation glass disc with infra-red reflecting filter.

The infra-red reflecting filter eliminates  $^2$ ) the need for additional filters in the colour splitting systems when the XQ1025L and XQ1025R are applied in colour cameras originally designed for tubes of the XQ1020 series.

The manufacturer selects the filters per individual tube such, that the spreads in spectral responses in the long wavelength region as published for the XQ1023 tubes (See data XQ1023, Febr. 1969, page 10) are greatly reduced, warranting minimum differences in colour rendition between colour cameras of identical manufacture.

The XQ1025 will provide black and white pictures with true tonal rendition of colours, the spectral response approaching very nearly the relative spectral sensitivity of the human eye.

The  $\rm XQ1025L$  is intended for use in the luminance channel of four tube colour cameras, the  $\rm XQ1025R$  for use in the red channel of both three and four tube colour cameras.

<sup>\*</sup>Registered Trade Mark for T.V. camera tube

#### OPTICAL


Spectral response see below

Max. response at approx. 500 nm

Cut-off ~ 750 nm 1)

Filter: Hard coating on anti-halation glass disc. Care in handling to avoid scratches is strongly recommended.

For all further data revert to the Published Data of the tubes of the XQ1023 series, Febr. 1969 issue. Note 3, page 5 of these data, referring to the Balzers B1/K1 filter; does not apply.

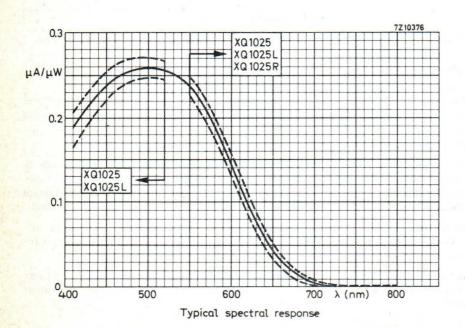

<sup>1)</sup> Defined as the wavelength at which the spectral response has dropped to  $\leq 1\%$  of the peak response (~ 500nm).

<sup>2)</sup> An infra-red absorbing filter for wavelengths in excess of 900 nm is assumed to be incorporated in the optical system of the camera.

# CONTROL OF THE PARTY OF T

# CAMERA TUBE

Plumbicon\*, sensitive pick-up tube with lead-oxide photoconductive target with extended red response and high resolution. Low velocity target stabilization.

Provided with separate mesh construction and anti-halation glass disc with I.R. filter.

The tubes of this series are mechanically and electrically identical to the tubes of the XQ1025 series, the only difference being found in the degree of freedom from blemishes of the photoconductive target.

The tubes are intended for industrial and educational black and white and colour cameras. The series comprises the following versions:

XQ1026


for black and white cameras

XQ1026R

for use in the red channel of colour cameras

For all further information see data of the XQ1025 series.

<sup>\*</sup> Registered Trade Mark for T.V. camera tube.

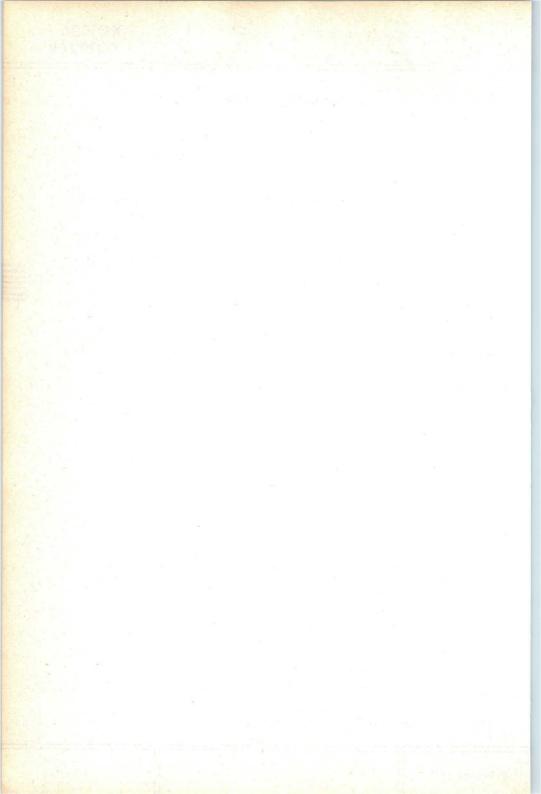

# **CAMERA TUBE**

Vidicon television camera tube with low heater consumption, magnetic focusing, magnetic deflection and 25.4 mm (1 in) diameter intended for use in low-cost industrial cameras, home cameras, and for amateur use.

# QUICK REFERENCE DATA

Integral mesh

Focusing magnetic
Deflection magnetic

Diameter 25.4 mm (1 in)

Length 147 mm (5 7/8 in) Heater 6.3 V, 95 mA

Heater 6.3 V, 95 mA
Resolution >600 TV lines

#### OPTICAL

Diagonal of quality rectangle on photoconductive

layer (aspect ratio 3:4) max. 16 nm

Orientation of image on photoconductive layer:

The direction of the horizontal scan should be essentially parallel to the plane defined by the short index pin and the longitudinal tube axis, unless rotation of the tube is found necessary to minimize the number of blemishes in the picture.

Spectral response, max. response at approx. 550 nm

#### HEATING

Indirect by A.C. or D.C.; parallel and series supply

Heater voltage  $V_{\mathrm{f}}$  6.3  $V\pm$  10%

Heater current I<sub>f</sub> 95 mA

When the tube is used in a series heater chain, the heater voltage must not exceed 9.5  $\rm V_{rms}$  when the supply is switched on.

#### CAPACITANCE

Signal electrode to all Cas 4.5 pH

This capacitance, which effectively is the output impedance of the tube, increases when the tube is inserted into the deflection and focusing-coil unit.


Data based on pre-production tubes.





## MECHANICAL DATA


Dimensions in mm

Base: JEDEC no. E8-11 except for pumping stem

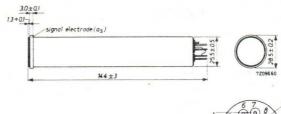

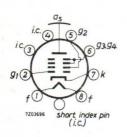

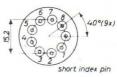

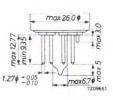

Mounting position: any

Net weight

approx.

50

**FOCUSING** 

magnetic

DEFLECTION

magnetic

ACCESSORIES

Socket

Cinch no. 54A18088 or equivalent

Deflection and focusing coil unit

AT1101, AT1102 or equivalent

LIMITING VALUES (Absolute max. rating system)

for scanned area of 9.6 mm x 12.8 mm (3/8 in x 1/2 in)

"Full-size scanning", i.e. scanning of a 9.6 mm x 12.8 mm area of the photoconductive layer should always be applied. The use of a mask having these dimensions is recommended. Underscanning, i.e. scanning of an area less than 9.6 mm x 12.8 mm, may cause permanent damage to the specified full-size area.

| Signal-electrode voltage           |        | Vas                           | max. | 100  | V             |
|------------------------------------|--------|-------------------------------|------|------|---------------|
| Grid no.4 and grid no.3 voltage    |        | $V_{g_4}, V_{g_3}$            | max. | 800  | V             |
| Grid no.2 voltage                  |        | $V_{g_2}$                     | max. | 450  | V             |
| Grid no.1 voltage, negative        | _      | $v_{g_1}$                     | max. | 125  | V             |
| positive                           |        | $v_{g_1}$                     | max. | 0    | V             |
| Cathode-to-heater voltage, peak po | sitive | $V_{\mathrm{kf_p}}$           | max. | 125  | V             |
| ne                                 |        | $V_{\mathrm{kf_p}}$           | max. | 10   | V             |
| Output current, peak               |        | $I_{as_p}$                    | max. | 0.6  | $\mu A^{1}$ ) |
| Dark current, peak                 |        | I <sub>dark<sub>p</sub></sub> | max. | 0.25 | μΑ            |
| Faceplate illumination             |        | E                             | max. | 5000 | lx            |
| Faceplate temperature, storage an  | d      |                               |      |      |               |
| operation                          |        | t                             | max. | 80   | oC 2)         |
| Cathode current                    |        | <sup>I</sup> k                | max. | 2    | mA            |

<sup>1)</sup> Video amplifiers should be capable of handling signal-electrode currents of this magnitude without overloading the amplifier or distorting the picture.

<sup>2)</sup> Under difficult environmental conditions a flow of cooling air directed at the faceplate is recommended. When televising flames and furnaces appropriate infrared filters should be used.

# XQ1030

## OPERATING CONDITIONS AND PERFORMANCE

For a scanned area of 9.6 mm x 12.8 mm and a faceplate temperature of  $25\,^{\rm o}{\rm C}$  to  $35\,^{\rm o}{\rm C}$ .

## CONDITIONS

| Grid no.4 and grid no.3 (beam focus |                    |  |
|-------------------------------------|--------------------|--|
| electrode) voltage                  | $v_{g_4}, v_{g_3}$ | $250 \text{ to } 300 \text{ V}^{-1}$ )                               |
| Grid no.2 (accelerator) voltage     | $v_{g_2}$          | 300 V  |
| Grid no.1 voltage                   | $v_{g_1}$          | adjusted for sufficient<br>beam current to stabi-<br>lize highlights |
| Planking voltage needs to needs     |                    |  |

|  |   | lize highlight | ts                |  |  |
|--|---|----------------|-------------------|--|--|
| Blanking voltage, peak-to-peak<br>when applied to grid no.1<br>when applied to the cathode |   | ≥ 75<br>≥ 20   | V<br>V            |  |  |
| Field strength at centre of focusing coil  | Н | 40             | Oe 2)             |  |  |
| Field strength of adjustable alignment coils   | Н | 0 to 4         | Oe <sup>3</sup> ) |  |  |
|  |   |                |                   |  |  |

| PERF | DRMA | NCE |
|------|------|-----|
|------|------|-----|

|   |           |     | o) P. |      |                  |
|---|-----------|-----|-------|------|------------------|
| Signal-electrode voltage for output current of $0.3~\mu\mathrm{A}$                  | Vas       | -   | 40    | 70   | V <sup>4</sup> ) |
| Dark current at output current of $0.3\mu\mathrm{A}$                                | Idark     | _   | 40    | 70   | $nA^{4})^{5}$    |
| Decay: residual signal current after dark pulse of 200 ms                           |           | -   | 10    | 15   | % 4)5)6)         |
| Amplitude response at 400 TV lines in picture centre                                |           | 25  | 35    | -    | % <sup>7</sup> ) |
| Limiting resolution in picture centre   |           | 600 |       |      | TV lines         |
| Grid no.1 voltage for picture cut-off with no blanking applied                      | $v_{g_1}$ | -30 | -55   | -110 | V                |
| Average γ of transfer characteristic for signal currents between 0.01 μA and 0.3 μA | 2         |     | 0.7   |      |                  |

Spurious signals

Shading

Camera directed towards a uniformly illuminated white background. See also notes  $^4$ ) and  $^5$ )

The composite video signal when viewed at horizontal rate on a waveform oscilloscope will fall within an envelope having a width of 40% of the peak signal

min. | typ. | max.

See notes 4), 5), and 8)

Spots and blemishes For notes see page 5.



## Notes to page 4

- 1) Beam focus is obtained by the combined effect of grid no.3, the voltage of which should be adjustable over the indicated range, and a focus coil having an average field strength of 40 oerstedt.
- 2) The polarity of the focusing coil should be such that a north-seeking pole is attracted to the image end of the focusing coil, with this pole located outside of and at the image end of the focusing coil.
- <sup>3</sup>) The alignment coil unit should be positioned on the tube so that its centre is at a distance of approx. 94 mm (3 11/16 in) from the face of the tube and that its axis coincides with the axis of the tube, the deflecting yoke and the focusing coil.
- 4) With 8 lux (c.t. = 2854 °K) on faceplate.
- 5) The deflection circuit must provide sufficiently linear scanning for good black-level reproduction. The output current being proportional to the velocity of scanning, any change in this velocity will produce non-uniformity.
- 6) Signal current is defined as the component of the output current after the dark current has been subtracted.
- 7) Square wave response. Measured with a video amplifier system having an appropriate bandwidth.
- 8) Conditions:

The camera focused on a uniformly illuminated two-zone test pattern, the diameter of the centre zone (1) being equal to the raster height. Zone (2) being defined as the remainder of the scanned area.


Scanning amplitudes of rectangular monitor adjusted to obtain a raster with an aspect ratio of  $3:4. \ \ \,$ 

Monitor set-up and contrast control adjusted for faint raster when lens of camera is capped, and for non-blooming bright raster when lens of camera is uncapped.

Under the above conditions the number and size of the spots visible in the monitor picture will not exceed the limits stated below. Both black and white spots must be counted, unless the amplitude is less than 50% of the peak white signal.

| Spot size                | Maximum nu | mber of spots |
|--------------------------|------------|---------------|
| in $\%$ of raster height | zone 1     | zone 2        |
| > 1                      | none       | none          |
| 1 to 0.6                 | 1          | 3             |
| 0.6 to 0.2               | 4          | 6             |
| < 0.2                    | *          | *             |

\* Do not count spots of this size unless their concentration is so high as to cause a smudgy appearance.

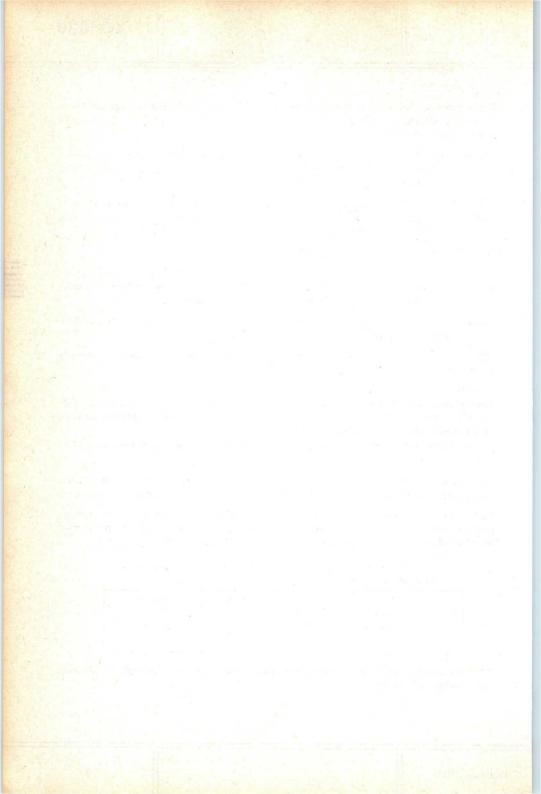

# **CAMERA TUBE**

Vidicon television camera tube with low heater consumption, separate mesh construction, magnetic focusing, magnetic deflection and 25.4 mm (1 in) diameter intended for use in black-and-white and colour television cameras in industrial, medical and broadcast applications.

| QUICK REFERENCE DATA        |                          |  |  |  |  |  |
|-----------------------------|--------------------------|--|--|--|--|--|
| Separate mesh               |                          |  |  |  |  |  |
| Focusing ma                 | gnetic                   |  |  |  |  |  |
| Deflection ma               | gnetic                   |  |  |  |  |  |
| Diameter 25.                | .4 mm (1 in)             |  |  |  |  |  |
| Length 158                  | 8 mm $(6\frac{1}{4} in)$ |  |  |  |  |  |
| Provided with particle trap |                          |  |  |  |  |  |
| Heater 6.3                  | 3 V, 95 mA               |  |  |  |  |  |
| Resolution ≥ 1              | 000 TV lines             |  |  |  |  |  |

The electrical and mechanical properties of the four types are essentially identical, the main differences being found in the degree of freedom from blesmishes of the photoconductive layers.

- XQ1040 for use in colour and black-and-white telecine equipment
- XQ1042 for use in industrial and broadcast applications in which a high picture quality is required
- XQ1043 for use in normal industrial applications
- XQ1044 low-cost tube for non-critical applications, experiments, amateur use etc.

#### OPTICAL

| Diagor | al of | quality | rect | angle | on | photoconductive |
|--------|-------|---------|------|-------|----|-----------------|
| 2 1000 |       |         | -    | 20.0  |    |                 |

layer (aspect ratio 3:4)

max.

16 mm

Orientation of image on photoconductive layer:

The direction of the horizontal scan should be essentially parallel to the plane defined by the short index pin and the longitudinal axis of the tube.

Spectral response, max. response at

approx.

550 nm

#### HEATING

Indirect by A.C. or D.C.; parallel and series supply

Heater voltage  $V_{\rm f}$  6.3  $V\pm10\%$  Heater current  $I_{\rm f}$  95 mA

When the tube is used in a series heater chain, the heater voltage must not exceed 9.5  $V_{\text{rms}}$  when the supply is switched on.

Data based on pre-production tubes



# XQ1040 SERIES

## CAPACITANCE

Signal electrode to all


Cas


This capacitance, which effectively is the output impedance of the tube, increases when the tube is inserted into the deflection and focusing coil unit.


## MECHANICAL DATA


Dimensions in mm

Base: JEDEC no. E8-11

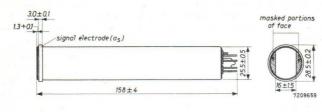

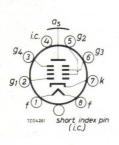

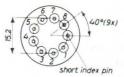

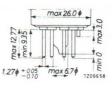

Mounting position: any

Net weight

approx.

55

ACCESSORIES

Socket

Cinch no. 54A18088 or equivalent

Deflection and focusing coil unit

AT1101, AT1102 or equivalent

DEFLECTION magnetic

**FOCUSING** 

magnetic

## LIMITING VALUES (Absolute max. rating system)

for scanned area of 9.6 mm x 12.8 mm (3/8 in x 1/2 in)

"Full-size scanning", i.e. scanning of a 9.6 mm x 12.8 mm area of the photoconductive layer should always be applied. The use of a mask having these dimensions is recommended. Underscanning, i.e. scanning of an area less than 9.6 mm x 12.8 mm, may cause permanent damage to the specified full-size area.

|  |          | _                  |         |    |                                  |
|--|----------|--------------------|---------|----|----------------------------------|
| Signal-electrode voltage                 |          | $v_{as}$           | max. 1  | 00 | V                                |
| Grid no.4 voltage                        |          | $v_{g4}$           | max. 10 | 00 | V                                |
| Grid no.3 voltage                        |          | $V_{g_3}$          | max. 8  | 50 | V                                |
| Grid no.2 voltage                        |          | $v_{g_2}$          | max. 4  | 50 | V                                |
| Grid no.1 voltage, negative              |          | -Vg1               | max. 1  | 25 | V                                |
| positive                                 |          | $v_{g_1}$          | max.    | 0  | V                                |
| Cathode-to-heater voltage, peak          | positive | Vkfp               | max. 1  | 25 | V                                |
|  | negative | -V <sub>kfp</sub>  | max.    | 10 | V                                |
| Dark current, peak                       |          | I <sub>darkp</sub> | max. 0. | 25 | μΑ                               |
| Output current, peak                     |          | I <sub>asp</sub>   | max. 0  | .6 | $\mu$ A 1)                       |
| Cathode current                          |          | Ik                 | max.    | 2  | mA                               |
| Faceplate illumination                   |          |                    | max. 50 | 00 | lx                               |
| Faceplate temperature, storage operation | and      | t                  | max.    | 80 | o <sub>C</sub> 2) <sup>3</sup> ) |



<sup>1)</sup> Video amplifiers should be capable of handling signal-electrode currents of this magnitude without overloading the amplifier or distorting the picture.

<sup>&</sup>lt;sup>2</sup>) Under difficult environmental conditions a flow of cooling air directed at the faceplate is recommended.

<sup>3)</sup> Under conditions of high heat irradiation the use of a infra-red absorbing filter is recommended.

# (Q1040 SERIES

# OPERATING CONDITIONS AND PERFORMANCE

for a scanned area of 9.6 mm x 12.8 mm and a faceplate temperature of 30  $\pm$  2 °C

| CONDITIONS   |                | Normal operation           | Operation<br>for high<br>resolution           |          |     |
|--|----------------|----------------------------|---|----------|-----|
| Mesh voltage   | $V_{g_4}$      | 300 to 450                 | 650 to 1000 <sup>1</sup> )                    |          | V   |
| Focusing electrode voltage   | $v_{g_3}$      | 250 to 300                 | 550 to 650                                    |          | 1   |
| Accelerator voltage  | $v_{g_2}$      | 300                        | 300   |          | 7   |
| Grid no.1 voltage  | $v_{g_1}$      | beam curre                 | for sufficient<br>ent to stabilize<br>hlights |          |     |
| Blanking voltage, peak-to-peak<br>when applied to g1<br>when applied to cathode                  |                | ≥ 75<br>≥ 20               | ≥ 75<br>≥ 20                                  |          | 7   |
| Field strength at centre of focusing coil  | Н              | 40                         | 60 <sup>2</sup> )                             | A F      | C   |
| Field strength of adjustable alignment coils   | Н              | 0 to 4                     | 0 to 4  |          | C   |
| PERFORMANCE  | XQ1<br>XQ1043, | 1042 <b>,</b><br>XQ1044    | XQ1040  |          |     |
| Signal-electrode voltage for<br>dark current of 20 nA<br>typical<br>for XQ1044 only              | $V_{as}$       | 20 to 55<br>30<br>15 to 55 | 20 to 55<br>30<br>15 to 55                    |          | VVV |
| Signal current faceplate illumination 8 lx, c.t. 2854 OK   | $I_{S}$        | 0.17                       | 0.17  | *:       | μ   |
| Decay: residual signal current<br>after dark pulse of 200 ms.<br>8 lx, c.t. 2854 °K on faceplate |                | 8                          | 8   |          | %   |
| Signal electrode voltage for dark current of 5 nA  | Vas            |                            |   | 15 to 30 | V   |
| Faceplate illumination to produce $0.3 \mu A$ output current                                     | E              |                            |   | 100      | l   |
| Decay: residual signal current after dark pulse of 200 ms.  Output current 0.3 μA,               |                |                            |   |          |     |
| dark current 5 nA  |                |                            |   | 4        | 9   |

For notes see page 5.

|  |           | XQ1<br>XQ1042, XQ1 |             |                  |
|--|-----------|--------------------|-------------|------------------|
| Grid no.1 voltage for picture cut-off, with no blanking applied                                      | $v_{g_1}$ | -30 to -100        | -30 to -100 | V                |
| Limiting resolution at picture centre  | 3.00      | 750                | 1000        | 7)<br>TV lines   |
| Modulation depth at 400 TV lines at picture centre   |           | 50                 | 65          | % <sup>8</sup> ) |
| Average $\gamma$ of transfer characteristic for signal currents between 0.01 $\mu$ A and 0.3 $\mu$ A |           | 0.7                | 0.7         |                  |

<sup>1)</sup> The optimal grid no.4 voltage for maximum resolution and optimal uniformity of black and white level depends on the type of coil unit used and will be within the range 1.2 to 1.5 times  $V_{g_3}$ . Under no circumstances should grid no.4 (mesh) be allowed to operate at a voltage level below the  $V_{g_3}$  level as needed for beam focus, since this may damage the target.

<sup>2)</sup> Because of the higher deflecting and focusing power required to produce adequate field strength the tube temperature will increase and adequate provisions for cooling should be made.

<sup>3)</sup> The polarity of the focusing coil should be such that a north-seeking pole is attracted to the image end of the focusing coil, with this pole located outside of and at the image end of the focusing coil.


<sup>4)</sup> The alignment coil unit should be positioned on the tube so that its centre is at a distance of approx. 94 mm (3 11/16 in) from the face of the tube and that its axis coincides with the axis of the tube, the deflecting yoke and the focusing coil.

<sup>5)</sup> Signal-electrode voltage adjusted for a dark current of 20 nA (XQ1040: 5 nA)

<sup>6)</sup> Signal current is defined as the component of the output current after the dark current has been subtracted.

<sup>7)</sup> Square wave response. Measured with a video amplifier system having an appropriate bandwidth.

<sup>&</sup>lt;sup>8</sup>) Square wave response. Typical values for the tube proper, after correction for faults introduced by the optical system, measured under conditions of a peak signal current  $I_{Sp}$  = 0.15  $\mu$ A and a beam current sufficient to stabilize a signal current of 0.5  $\mu$ A.

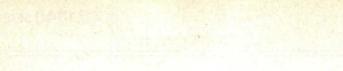

de an high deposit provider in the

# CAMERA TUBE

Vidicon television camera tube with low heater consumption, separate mesh construction, magnetic focusing, magnetic deflection and 25.4 mm (1 in) diameter intended for use in medical and industrial X-ray equipment in combination with an X-ray image intensifier tube.

| QUICK REFERENCE DA          | TA  |
|-----------------------------|---|
| Separate mesh<br>Focusing   | magnetic                                      |
| Deflection Diameter         | magnetic                                      |
| Length                      | 25.4 mm (1 in)<br>158 mm ( $6\frac{1}{4}$ in) |
| Provided with particle trap |   |
| Heater                      | 6.3 V, 95 mA                                  |
| Resolution                  | ≥ 1000 TV lines                               |

The electrical and mechanical properties of the XQ1041 are essentially identical to those of the other tubes of the XQ1040 series, the main differences being found in the degree of freedom from blemishes of the photoconductive layer and from mesh deficiencies.

#### OPTICAL

Quality area on photoconductive layer circular area diam. max. 15 mm

Direction of scan.

The direction of the horizontal scan should be essentially parallel to the plane defined by the short index pin and the tube axis.

Spectral response, max. response at

approx. 550 mm

#### HEATING

Indirect by A.C. or D.C.; parallel and series supply

Heater voltage 6.3 V + 10%Heater current

When the tube is used in a series heater chain, the heater voltage must not exceed 9.5 V<sub>rms</sub> when the supply is switched on.

Data based on pre-production tubes

# XQ1041

#### CAPACITANCE

Signal electrode to all


4.5 pF


This capacitance, which effectively is the output impedance of the tube, increases when the tube is inserted into the deflection and focusing coil unit.


## MECHANICAL DATA


Dimensions in mm

Base: JEDEC no. E8-11

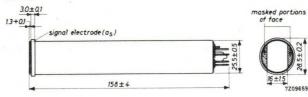

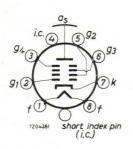

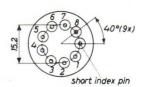

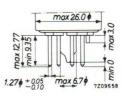

Mounting position: any

Net weight

approx.

55 g

#### ACCESSORIES

Socket

Deflection and focusing coil unit

Cinch no. 54A18088 or equivalent AT1101, AT1102 or equivalent

DEFLECTION magnetic

**FOCUSING** 

magnetic

**LIMITING VALUES** (Absolute max. rating system) for scanned area of  $15 \times 15 \text{ mm}^2$ 

| Signal-electrode voltage                     | Vas        | max. | 100  | V             |
|--|------------|------|------|---------------|
| Grid no. 4 voltage                           | $V_{g4}$   | max. | 1000 | V             |
| Grid no. 3 voltage                           | $V_{g3}$   | max. | 850  | V             |
| Grid no. 2 voltage                           | $V_{g2}$   | max. | 450  | V             |
| Grid no. 1 voltage, negative                 | $v_{g1}$   | max. | 125  | V             |
| positive                                     | $V_{g1}$   | max. | 0    | V             |
| Cathode-to-heater voltage, peak positive     | $V_{kfp}$  | max. | 125  | V             |
| negative                                     | $v_{kf_p}$ | max. | 10   | V             |
| Dark current, peak                           | Idarkp     | max. | 0.25 | μΑ            |
| Output current, peak                         | Iasp       | max. | 0.6  | $\mu A^{1}$ ) |
| Cathode current                              | Ik         | max. | 2    | mA            |
| Faceplate illumination                       | E          | max. | 5000 | lx            |
| Faceplate temperature, storage and operation | t          | max. | 80   | °C 2)         |

<sup>1)</sup> Video amplifiers should be capable of handling signal-electrode currents of this magnitude without overloading the amplifier or distorting the picture.

 $<sup>^{2}</sup>$ ) Under difficult environmental conditions a flow of cooling air directed at the faceplate is recommended.

## OPERATING CONDITIONS AND PERFORMANCE


For a scanned area of  $15 \times 15 \text{ mm}^2$ , the area beyond the quality area of 15 mm Ø covered with a mask, and a faceplate temperature of  $30 \text{ }^{\circ}\text{C} \pm 2 \text{ }^{\circ}\text{C}$ .

| CONDITIONS   |           | Normal operation | Operation for high resolution               |                        |
|--|-----------|------------------|---|------------------------|
| Mesh voltage   | $v_{g_4}$ | 300 to 450       | 650 to 1000 <sup>1</sup> )                  | V                      |
| Focusing electrode voltage   | $v_{g_3}$ | 250 to 300       | 550 to 650                                  | V                      |
| Accelerator voltage  | $v_{g_2}$ | 300              | 300   | V                      |
| Grid no.1 voltage  | $v_{g_1}$ | beam curre       | or sufficient<br>nt to stabilize<br>nlights |                        |
| Blanking voltage, peak-to-peak when applied to g <sub>1</sub> when applied to cathode                |           | ≥ 75<br>≥ 20     | ≥ 75<br>≥ 20                                | V<br>V                 |
| Field strength at centre of focusing coil  | Н         | 40               | 60 <sup>2</sup> )                           | Oe <sup>3</sup> )      |
| Field strength of adjustable alignment coils   | Н         | 0 to 4           | 0 to 4                                      | Oe 4)                  |
| PERFORMANCE  |           |                  |   |                        |
| Signal-electrode voltage for dark current of 35 nA typical   | Vas       | 20 to 55<br>30   | 20 to 55<br>30                              | V 5)                   |
| Signal current<br>faceplate illumination 2 lx,<br>light source with P20 distribution                 | Is        | 0.075            | 0.075                                       | μA 6) <sup>7</sup> )   |
| Decay: residual signal current<br>after dark pulse of 200 ms.<br>8 lx, P20 light source on faceplate |           | 8                | 8   | 7)<br>% <sup>6</sup> ) |
| Grid no. 1 voltage for picture cut-off, with no blanking applied                                     | $v_{g_1}$ | -30 to -100      | -30 to -100                                 | V                      |
| Limiting resolution at picture centre  |           | 750              | 1000  | 8)<br>TV lines         |
| Modulation depth at 5 Mc/s (625 lines, 50 fields system)lines at picture centr                       |           | 50               | 65  | % 9)                   |
| Average γ of transfer characteristic for signal currents   |           |                  |   |                        |
| between 0.01 $\mu$ A and 0.3 $\mu$ A   |           | 0.7              | 0.7   |                        |

## NOTES to page 4.

- 1) The optimal grid no.4 voltage for maximum resolution and optimal uniformity of black and white level depends on the type of coil unit used and will be within the range 1.2 to 1.5 times  $V_{g_3}$ . Under no circumstances should grid no.4 (mesh) be allowed to operate at a voltage level below the  $V_{g_3}$  level as needed for beam focus, since this may damage the target.
- 2) Because of the higher deflecting and focusing power required to produce adequate field strength the tube temperature will increase and adequate provisions for cooling should be made.
- 3) The polarity of the focusing coil should be such that a north-seeking pole is attracted to the image end of the focusing coil, with this pole located outside of and at the image end of the focusing coil.
- 4) The alignment coil unit should be positioned on the tube so that its centre is at a distance of approx. 94 mm (3 11/16 in) from the face of the tube and that its axis coincides with the axis of the tube, the deflecting yoke and the focusing coil.
- 5) Corresponds to 20 nA for 9.6 mm x 12.8 mm beam.
- 6) Signal electrode voltage adjusted for a dark current of 35 nA.
- 7) Signal current is defined as the component of the output current after the dark current has been subtracted.
- $^{8}$ ) Measured with a video amplifier system having an appropriate bandwidth.
- <sup>9</sup>) Square wave response. Typical values for the tube proper, after correction for faults introduced by the optical system, measured under conditions of a peak signal current  $I_{Sp}$  = 0.15  $\mu$ A and a beam current sufficient to stabilize a signal current of 0.5  $\mu$ A.

March 1969

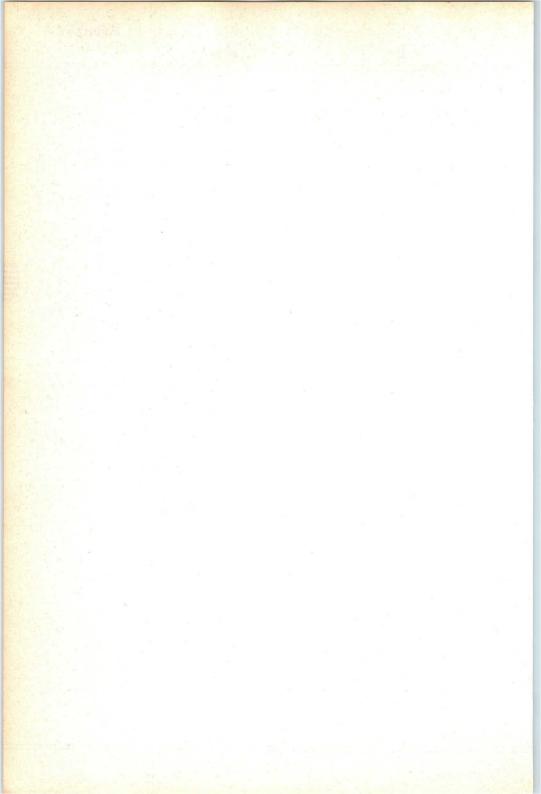

XQ1050, 1051 XQ1052, 1053 XQ1054

# CAMERA TUBE

The vidicon television camera tubes of the XQ1050 series are identical to the tubes of the XQ1040 series except for the heater current.

## HEATING

Indirect by A.C. or D.C.; parallel and series supply

Heater voltage  $$\rm V_{f}$$  6.3  $\rm V\pm10\%$ 

Heater current  $I_{
m f}$  300 mA

When the tube is used in a series heater chain, the heater voltage must not exceed 9.5  $\rm V_{rms}$  when the supply is switched on.

For all other data refer to the data of the tubes of the XQ1040 series.



# **CAMERA TUBES**

Plumbicon\*, sensitive high-definition pick-up tube with lead-oxide photoconductive target. Provided with: separate mesh construction for good overall resolution; Anti-Comet Tail electron gun for improved highlight handling; lightpipe for reduced lag under low-key conditions; fibre optic faceplate. The tubes of the XQ1220 and XQ1230 series can be used in medical, scientific and low light level T.V. systems in which they can be coupled direct to, e.g., X-ray image intensifiers and light intensifiers with fibre optic output windows.

| QUICK | REFERENCE | DATA |
|-------|-----------|------|
|-------|-----------|------|

Focusing magnetic

Deflection magnetic

Diameter approx. 30 mm

Available types:

Length

| Quality area              | 12.8 x 17.1 mm <sup>2</sup> |        | 18 mm φ |        | 21 mm φ |        |
|---------------------------|-----------------------------|--------|---------|--------|---------|--------|
| Grade                     | A                           | В      | A       | В      | A       | В      |
| Non-cladded fibre optic   | XQ1220                      | XQ1223 | XQ1221  | XQ1224 | XQ1222  | XQ1225 |
| Black-cladded fibre optic | XQ1230                      | XQ1233 | XQ1231  | XQ1234 | XQ1232  | XQ1235 |

Resolution ≥ 25 lp/mm

Heater 6.3 V, 300 mA

Cut-off of spectral response approx. 650 nm

Data based on pre-production tubes.



approx. 210 mm

<sup>\*</sup> Registered Trade Mark for television camera tube.

# XQ1220 SERIES XQ1230 SERIES

## **OPTICAL**

Quality rectangle on photoconductive target (aspect ratio 3:4)

 $12.8 \times 17.1 \text{ mm}^2$  1)

Orientation of image on photoconductive target

For correct orientation of the image on the target the horizontal scan should be essentially parallel to the plane passing through the tube axis and the index pin (grid no. 3)

Faceplate

Diameter of fibres
Flat within

approx. 7  $\mu m$  1  $\mu m$ 

## ELECTRICAL

Heating: Indirect by A.C. or D.C.; parallel supply

Heater voltage Heater current  $\begin{array}{ccc} V_{f} & \text{6.3 V$\pm 5\,\%} \\ I_{f} & \text{approx.300 mA} \end{array}$ 

## Electron gun characteristics

Grid no. 2 and no. 4 current

Cut-off

Grid no. 1 voltage for cut-off at  $\rm V_{g2,\,4}$  = 300 V, without blanking nor A.C.T. pulses

-45 to -110 V

Blanking

Applied to grid no. 1, at  $V_{g2,4} = 300 \text{ V}$ 

 $50 \pm 10 \text{ V}_{pp}^{6})^{9})$ max. 0.2 mA <sup>7</sup>)

Focussing (see under Accessories)

magnetic

Deflection (see under Accessories)

magnetic

Capacitance

Signal-electrode to all

 $C_{a_S}$  3 to 6 pF

This capacitance, which is effectively the output impedance, increases when the tube is inserted in the  $\operatorname{coil}$  unit.

## LIMITING VALUES (Absolute max. rating system)

All voltages are referred to the cathode, unless otherwise stated.

| O .   |                        |    |                |      |             |                   |  |
|---|------------------------|----|----------------|------|-------------|-------------------|--|
| Signal electrode voltage                        |                        | V  | as             | max. | 50          | V                 |  |
| Grid no. 6 (mesh) voltag                        | ge                     | V  | g6             | max. | 1100        | V                 |  |
| Grid no. 5 (collector) vo                       | oltage                 |    | g <u>5</u>     | max. | 800         | V                 |  |
| Voltage between grid no                         | . 6 and grid no. 5     | V  | g6/g5          | max. | 350         | V                 |  |
| Grid no. 4 (limiter) and (accelerator, or first | O                      |    | g2,4           | max. | 350         | V                 |  |
| Grids no. 4 and no. 2 di                        | ssipation              |    | g2,4           | max. | 1           | W                 |  |
| Grid no. 3 (auxiliary gr                        | id) voltage            | ·V | g3             | max. | 350         | V                 |  |
| Grid no. 1 (control grid                        | ) voltage,<br>positive | V  | g <sub>1</sub> | max. | 0           | V                 |  |
|   | negative               | -V | g1             | max. | 125         | V                 |  |
| Grid no. 1 A.C.T. puls                          | e                      |    |                | max. | 40          | Vp 6)             |  |
| Cathode to heater voltage                       | ge,                    |    |                |      |             |                   |  |
|   | positive peak          | V  | kfp            | max. | 50          | V                 |  |
|   | negative peak          | -V | kfp            | max. | 50          | V                 |  |
| Faceplate temperature,                          | storage and operation  | t  |                | max. | 50          | <sup>o</sup> C    |  |
|   |                        |    |                | min. | <b>-</b> 30 | oC                |  |
| Faceplate illumination                          |                        | E  |                | max. | 500         | 1x <sup>2</sup> ) |  |
|   |                        |    |                |      |             |                   |  |

## ACCESSORIES

| Com unit | Coil | unit |  |
|----------|------|------|--|
|----------|------|------|--|

Socket

AT1132, AT1132/01

,

modified version of 56021 (under development)





#### MECHANICAL


Dimensions in mm


Mounting position: any

Weight: approx. 110 g

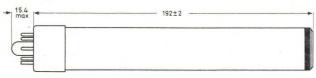

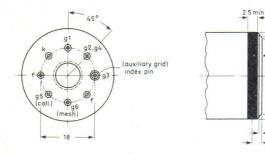

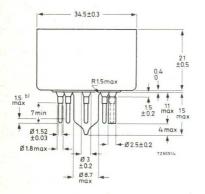

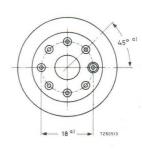

→ 0.6±0.3 → 3.9±0.6

Ø27.0 Ø30.6

- a) The base passes a flat gauge with a centre hole  $9.00 \pm 0.01 \phi$  and holes for passing the pins with the following diameters: 7 holes of  $1.750 \pm 0.005 \phi$  and one hole of  $3.000 \pm 0.005 \phi$ . The holes may deviate max. 0.01 from their true geometrical position. Thickness of gauge 7 mm.
- b) The ends of the pins are tapered and/or rounded but not brought to a sharp point.



# COMMENSATION OF THE PERSON OF T

#### OPERATING CONDITIONS AND PERFORMANCE

TYPICAL OPERATING CONDITIONS (with Anti-Comet Tail action)  $^4$ ) All voltages are specified with respect to cathode.

| Cathode voltage,   |                      |                       |  |
|--|----------------------|-----------------------|--|
| during read-out mode   | $v_k$                |                       | V <sup>5</sup> ) <sup>6</sup> ) <sup>7</sup> ) |
| during A.C.T. mode   | $V_{\mathbf{k}}$     | 0 to 10               | V  |
| Signal electrode voltage   | $v_{a_S}$            | 45                    | V  |
| Grid no. 6 (mesh) voltage  | $v_{g6}$             | 675                   | V <sup>7</sup> )                               |
| Grid no. 5 (collector) voltage   | $v_{g_5}$            | 600                   | V <sup>7</sup> )                               |
| Grid no. 4 (limiter) and grid no. 2 (accelerator, or first anode) voltage          | $v_{g_{2,4}}$        | 300                   | v <sup>7</sup> )                               |
| Grid no. 3 (auxiliary grid) voltage,<br>during read-out mode<br>during A.C.T. mode | $_{ m Vg3}^{ m Vg3}$ | 240 to 260<br>0 to 10 |  |
| Grid no. 1 (control grid) voltage<br>blanking voltage to grid no. 1                | $v_{g_1}$            | see note 8)           | V <sub>p</sub> <sup>6</sup> ) <sup>9</sup> )   |
| Scanned area on target   |                      | 12.8 x 17.1           | $mm^2$   |
| Temperature of faceplate   |                      | 20 to 45              | °C   |
| Coil unit  |                      | AT1132/01             |  |

Deflection, focusing and alignment currents

| Focus current                                  | Line deflection                | Frame deflection               |
|--|--------------------------------|--------------------------------|
| (adjusted for correct electrical focus) $(mA)$ | current<br>(mA <sub>pp</sub> ) | current<br>(mA <sub>pp</sub> ) |
| 25   | 235                            | 35                             |

Line and frame alignment coil currents max. 5 mA, corresponding to a flux density of approx.  $4 \times 10^{-4} \, \text{T}$  ( 4 Gs )

## XQ1220 SERIES XQ1230 SERIES

#### PERFORMANCE

Dark current (without bias lighting via lightpipe)

3 nA

Sensitivity

to white light of c.t. 2854 K

375 μA/lm XQ1220 series typ. 300 μA/lm XQ1230 series typ.

to light with P11 distribution

 $20 \times 10^{-3} \mu A/\mu W^{10}$ XQ1220 series typ. μΑ/μW 10)  $13 \times 10^{-3}$ XQ1230 series typ.

to light with P20 distribution

 $15 \times 10^{-3} \mu A/\mu W^{10}$ XQ1220 series typ. μA/μW 10) 10 x 10<sup>-3</sup> XQ1230 series typ.

Transfer characteristics

see page 12

Gamma of transfer characteristic below knee

 $0.95 \pm 0.05$ 

Spectral response

Max. response at approx. 550 nm 650 nm Cut-off at approx. see page 13

Response curve

8) 11)

P11 P20 XQ1220 series 15 lp/mm (385 T.V. lines) typ. 40 30 % XQ1230 series 15 lp/mm (385 T.V. lines) typ. 45 40

Modulation transfer characteristic

Resolution ( $I_s/I_b = 150/300 \text{ nA}$ )

see page 14

Lag (typical values), white light (2854K), P11, and P20

|                              | l            | ouild-up 1<br>12) | lag        |             | de         | ecay la<br>13 <sub>)</sub> | ıg         |             |   |
|------------------------------|--------------|-------------------|------------|-------------|------------|----------------------------|------------|-------------|---|
|                              | $I_s/I_b=20$ | 0/300 nA          | 150/3      | 00 nA       | 20/30      | 0 nA                       | 150/3      | 00 nA       | 8 |
| 1                            | 60<br>(ms)   | 200<br>(ms)       | 60<br>(ms) | 200<br>(ms) | 60<br>(ms) | 200<br>(ms)                | 60<br>(ms) | 200<br>(ms) |   |
| without bias lighting        | 70           | 100               | 98         | 100         | 16         | 5                          | 3.5        | 1.2         |   |
| with 2.5nA bias lighting 14) | 98           | 100               | 99         | 100         | 11         | 2.5                        | 2.8        | 0.9         |   |
| with 5 nA bias lighting 14)  | 99           | 100               | 100        | 100         | 8          | 2                          | 2.4        | 0.7         |   |



#### NOTES

- All figures quoted in these data sheets refer to a scanned area of 12.8x17.1 mm<sup>2</sup>.
   Underscanning of the once chosen area or failure of scanning should be avoided since this may cause damage to the photoconductive target.
- 2) For short intervals. During storage and idle periods the tube face must be covered with the plastic hood provided for the purpose, or the lens be capped.
- 3) For optimal screening of the signal-electrode from the live end of the line deflection coils the AT1132/01 is recommended.
- <sup>4</sup>) When the tube is to be used without Anti-Comet Tail action, grid no. 3 (auxiliary grid) should be connected to grids no. 2 and no. 4 and no A.C.T. pulses should be applied to the cathode and grid no. 1 (control grid). The performance of the tube will then be as described herein with the exception of the highlight handling.
- 5) a. Read-out mode: defined as the operating conditions during the active line scan (full line period line blanking interval).
  For the CCIR system this will amount to 64 μs 12 μs = 52 μs.
  - b. A.C.T. mode: defined as the operating conditions during that part of the line blanking interval during which the A.C.T. electrode gun is fully operative.

    The A.C.T. interval is equal to or slightly overlaps the line flyback time.
- 6. Pulse timing and amplitudes for A.C.T. action (CCIR system)

(blanking on grid no. 1)


- For proper operation of the A.C.T. electrode gun three pulses are required, being: a. a positive-going pulse on the cathode with an adjustable amplitude of 0 to 10 V.
- b. a positive-going pulse on grid no. 1 (control grid) of fixed amplitude of 30 to 35 V. The duration of this pulse should be chosen such that it just includes the flyback period (≈5 μs) of the line deflection (e.g. 6 μs).
- c. a negative-going pulse on grid no. 3 (auxiliary grid) with an amplitude of approx. 240 V, adjusted for a  $\rm V_{g3}$  voltage during the A.C.T. interval of 0 to 10 V.

Duration and timing of this pulse should be equal to those of the grid no. 1 pulse.



## XQ1220 SERIES XQ1230 SERIES

The timing diagram is as follows:

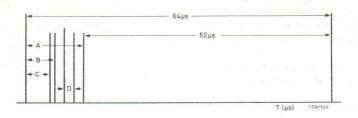

A = Line blanking period: ≈12 μs, V<sub>k</sub> pulse

B = A.C.T. period:  $\approx 6 \,\mu s$ , grids no. 1 and no. 3 pulses

C = Line flyback period: ≈5 μs

D = Clamping time: 2 to  $3 \mu s$ 

7) The D.C. voltage supply and/or pulse supply to these electrodes should have a sufficiently low impedance to prevent distortion caused by the peak currents drawn during the A.C.T. mode.

These peak currents may amount to:

8) Adjusted, with the A.C.T. switched off, to produce a beam current  $I_b$  = 300 nA.  $I_b$  is not the actual current available in the scanning beam, but is defined as the maximum amount of signal current,  $I_s$ , that can be obtained with this beam.

In the performance figures e.g. for resolution and lag the signal current and beam current conditions are given as  $\rm I_S/I_b$  = 20/300 nA.

This hence means: with a signal current of 20~nA and a beam setting which just allows a signal current of 300~nA.

N.B. The signal currents are measured with an integrating instrument connected in the signal-electrode lead, and an uniform illumination on the scanned area. The peak signal currents as measured on a waveform oscilloscope will be a factor  $\alpha \operatorname{larger}(\alpha = \frac{100}{100 - \beta})$ ,  $\beta$  being the total blanking time in %; for CCIR system  $\alpha$  amounts to 1.33).



- 9) Blanking can also be applied to the cathode:
- a. without A.C.T. action (see note 4): required cathode pulse approx. 25 V.
  - b. with A.C.T. action: timing, polarity and amplitudes of the A.C.T. pulses will have to be adapted.
- 10) The figures shown represent the signal output current in  $\mu A$  obtained per  $\mu W$  of electrical input power into a P11 or P20 phosphor on a fibre optic output window of e.g. an image intensifier or a converter tube.

Such an output window will usually be provided with non-cladded fibre optics when it feeds into an XQ1220 and with black-cladded fibre optics when it is coupled to an XQ1230.

The figures were obtained as the products S x  $T_1^2$  x  $\eta$  or S x  $T_2^2$  x  $\eta$  (see table below) whichever applied.

|                     | 8 B B B B B B B B B B B B B B B B B B B     | symbol           | P11  | P20  | unit  |
|---------------------|---|------------------|------|------|-------|
|                     | Sensitivity of photoconductive target       |                  | 1800 | 290  | μA/lm |
| Plumbicon<br>target | Conversion factor Watt to lumen             |                  | 140  | 480  | lm/W  |
| uiget               | Sensitivity of photoconductive target       | S                | 0.25 | 0.14 | μΑ/μ\ |
| Fibre               | Transmission of a non-cladded fibre plate   | T <sub>1</sub> * | 90   | 90   | %     |
| optics              | Transmission of a black-cladded fibre plate | T2 *             | 70   | 70   | %     |
| Phosphor            | Luminous efficiency of phosphor             | η **             | 10   | 14   | %     |

- \* For the sake of simplicity it is assumed that the fibre optics in the output window and in the Plumbicon faceplate have identical transmissions.
- \*\* The phosphors being usually metal-backed, the figures for the luminous efficiencies have been corrected for the effects of the backing.



## XQ1220 SERIES XQ1230 SERIES

- 11) Measured with a test transparency with the emulsion side in direct contact with the faceplate and which is illuminated with diffused light (lambertian illumination). The test transparency has square wave patterns in a white background. The figures given relate to a low frequency reference obtained from a square wave pattern of 1.0 lp/mm (330 kHz).
- 12) After 10 seconds of complete darkness. The figures given represent typical percentages of the ultimate signal current obtained 60 ms respectively 200 ms after the illumination has been applied.
- 13) After a minimum of 5s of illumination on the target. The figures given represent typical residual signals in % of the original signal current 60 ms respectively 200 ms after the illumination has been removed.
- 14) The special socket incorporates a small incandescentlight bulb (6 V, 1 W), which projects its light on the pumping stem via a blue-green transmitting filter. The light is conducted via a fine glass rod (lightpipe) to cause a bias illumination on the target. The desired amount of bias light can be obtained by adjusting the current through the filament of the small bulb.



#### GENERAL AND RECOMMENDATIONS


- 1. During transport, handling and storage the axis of the Plumbicon must be either vertical, with faceplate up, or horizontal; the faceplate must be kept covered with the hood provided for the purpose.
- 2. To avoid damage to the tungsten basepins, the Plumbicon should be inserted into its socket with care, avoiding undue forces and bending loads on the pins.
- 3. During long-term storage the ambient temperature should preferably not exceed 30  $^{
  m oC}$ .
- 4. In isolated cases the properties of a Plumbicon may deteriorate slightly when it is kept idle for long periods such as may occur:
  - . between the factory's pre-shipment test and the actual delivery to the customer.
  - . between receipt of the tube and its installation.
  - . if the camera is not used for a long time.

Although the chances of such deterioration are remote it is advisable to operate the tube for some hours at intervals not more than 4 weeks apart.

The following procedure and conditions are recommended:

- . Set grid no. 1 bias-control to maximum negative bias (beam cut-off).
- . Allow a heating-up time of the cathode of at least one minute before turning up the grid no. 1 bias-control to produce a beam.
- . Set scanning amplitudes to overscan condition.
- . Apply an even illumination to the target to obtain a signal current of approx.  $0.15\,\mu\text{A}$  and adjust the beam current for correct stabilization.
- 5. The signal electrode connection is made by a spring contact, which is part of the focusing coil unit and is kept pressed against the signal electrode ring.
- 6 Electrostatic shielding of the signal electrode is required to avoid interference effects in the picture. Effective shielding is provided by one grounded shield inside the focusing coil at the faceplate end, and one inside the deflecting yoke.
- 7. The Plumbicon tube not generating own noise to any noticeable extent, the signal-to-noise ratio will be determined mainly by the input noise of the video-amplifier system.

The high sensitivity of the Plumbicon tube warrants pictures with excellent signal-to-noise ratio under normal lighting conditions provided its output is fed into a well-designed input stage of the video-amplifier system. In such a system an aperture correction may be incorporated to ensure an attractive gain in resolving power without visually impairing the signal-to-noise ratio.

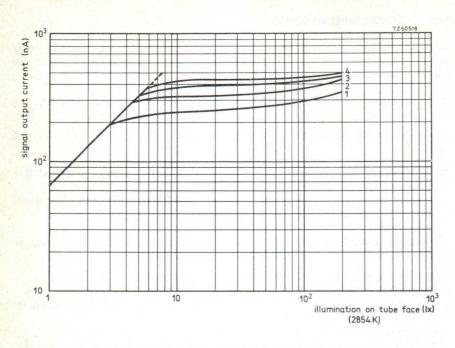

Typical signal output characteristics in A.C.T. operation

Scanning area: 12.8 x 17.1 mm<sup>2</sup>

Beam current : just sufficient to stabilize

500 nA signal current


Cathode voltage during flyback:

curve 1:4.5 V

curve 2:6 V

curve 3:7.5 V


curve 4:9 V

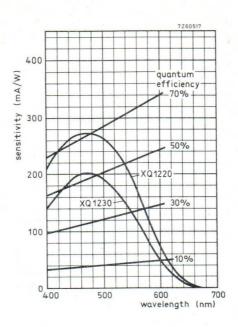


Typical spectral response characteristics



## XQ1220 SERIES XQ1230 SERIES

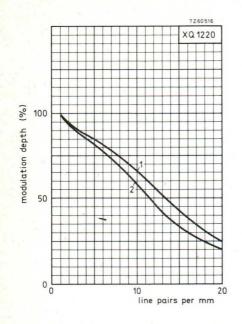

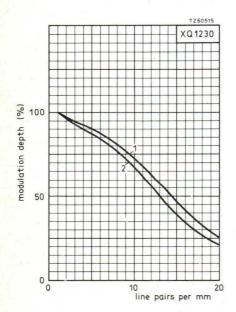

Typical square wave modulation transfer characteristics in tube centre.

- (1) for blue light (P11)
- (2) for green light ( P20 )

Measuring conditions: see note 11

### IMAGE INTENSIFIER TUBE

Self-focusing electrostatic diode image intensifier tube with fibre-optic windows for general purpose applications.

| QUICK | REFERENCE | DATA |
|-------|-----------|------|
|-------|-----------|------|

Luminance gain > 50

Photocathode S20 with enhanced red response

Screen phosphor P20

Useful cathode and screen diameters 25 mm

Anode voltage 15 kV

Overall dimensions (approx.) 60 x 50 dia. mm

#### **PHOTOGATHODE**

Surface S20 with enhanced red response

Wavelength at maximum response 500 nm

Useful diameter > 25 mm

External surface of cathode window Flat to within 2 µm over entire diameter

over entire diam

#### **SCREEN**

Surface Metal-backed P20

Fluorescent colour Yellow green

Persistence Medium short

The screen luminance falls to 36% (e<sup>-1</sup>) of the initial peak value 200  $\mu$ s after the excitation is removed.

Useful diameter > 25 mm

External surface of screen window Flat to within 2  $\mu$ m over entire diameter

#### **FOCUSING**

Self-focusing electrostatic with image inversion.




#### MECHANICAL DATA

Dimensions in mm

Mounting position: any

Net weight : approx. 145 g

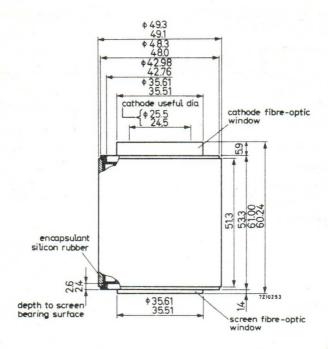

Contacts to cathode and screen should be made to the respective bearing surfaces. Contact rings should be kept well clear of the fibre-optic windows. Maximum contact force must not exceed 1 kg.



 $100 \mu A/lm$ 

CHARACTERISTICS (Measured at V<sub>a</sub> = 15 kV, t<sub>amb</sub> = -50 to +30 °C)

Luminance gain (see note 1) 50

Photocathode sensitivity

(measured using a tungsten lamp of colour temperature 2854 oK)

Radiant sensitivity at  $\lambda = 800 \text{ nm}$ 2.0 mA/W

at  $\lambda = 850 \text{ nm}$ 0.5 mA/W

Centre magnification, Mc (see note 2) 0.935 + 0.010

Distortion (see note 3)  $7.00 \pm 1.65$ %

Centre resolution (see note 4) 60 line pairs/mm

Edge resolution (see note 5) 50 line pairs/mm

Background equivalent illumination (see note 6)  $1.0 \mu lux$ 

Axial eccentricity

A point at the centre of the photocathode will form an image within a concentric circle of 1.5 mm diameter on the screen.

OPERATING CONDITIONS

Va (see note 7) 15 kV

LIMITING VALUES (Absolute max. rating system)

Anode voltage max. 16 kV

Anode voltage (useful continuous operation) 10 kV min.

Photocathode illumination, continuous

(see note 8) max. 2.0 lux

tamb max. +50 °C Ambient temperature




## XX1052

#### NOTES


- 1. Luminance gain is defined as  $\frac{\pi \cdot L_0}{E_1}$ 
  - where  $L_0$  = luminance (cd/m²) in a direction normal to the screen, measured with an eye-corrected photometer having an acceptance angle of less than 2 degrees.
  - and E  $_{\rm i}$  = illumination (lux) incident on a 19 mm diameter concentric area of the cathode, produced by a tungsten lamp at a colour temperature of 2850  $^{\rm o}{\rm K}$  .
- 2. This is the magnification of a  $2\ \mathrm{mm}$  diameter concentric circle on the photocathode, as measured on the screen.
- 3. Percentage distortion =  $(\frac{M_d}{M_C} \times 100)$ , where  $M_d$  is the magnification at a distance of 10 mm from the centre of the photocathode and  $M_C$  is the magnification at a distance of 1 mm from the centre of the photocathode.
- 4. Measured at the centre of the photocathode.
- 5. Measured at the photocathode at a distance of 7 mm from the centre.
- 6. This is the value of input illumination required to give an increase in screen luminance equivalent to the background luminance.
- 7. Permanent damage may result from a temporary reversal of polarity.
- 8. This figure assumes uniform illumination of the photocathode. Permanent damage may result if the tube is exposed to radiant power sogreat as to cause excessive heating of the photocathode.



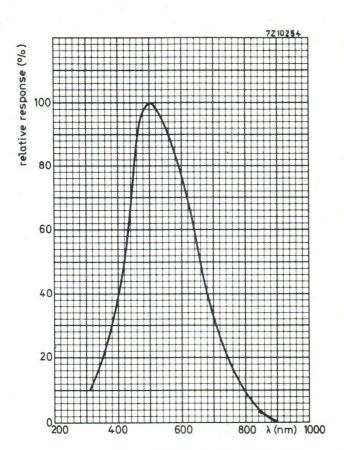

PHOTOCATHODE SPECTRAL RESPONSE CURVE



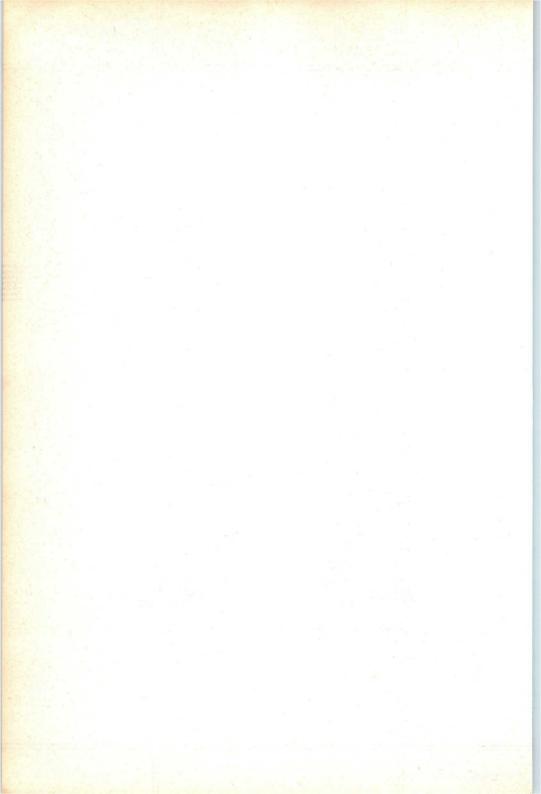

## ESCHOOL SET

## **CAMERA TUBE**

Plumbicon\*, sensitive high-definition pick-up tube with photoconductive target and low velocity stabilization.

The 55875 is intended for use in black and white, the L, R, G, and B versions for use in four and three tube colour studio cameras.

| QUICK R    | EFERENCE DATA |
|------------|---------------|
| Focusing   | magnetic      |
| Deflection | magnetic      |
| Diameter   | approx. 30 mm |
| Heater     | 6.3 V, 90 mA  |

#### OPTICAL

| photoconductive layer (aspect ratio 3:4) | 12.8 mm x 17.1 | mm 1) |  |
|--|----------------|-------|--|
| Orientation of image on photoconductive  |                |       |  |

layer By means of mark on tube base  $^2$ ) Sensitivity at colour temperature of illumination = 2850  $^{\circ}$ K

type: 55875, 55875L min.  $275 \mu A / lumen$  55875R min.  $60 \mu A / lumen$  3) 55875G min.  $125 \mu A / lumen$  3) 55875B min.  $32 \mu A / lumen$  3

Gamma of transfer characteristic  $0.95 \pm 0.05$ Spectral response; max. response at approx. 500 nm

### HEATING

Indirect by A.C. or D.C.; parallel supply

Dimensions of quality rectangle on

 $\begin{array}{cccc} \text{Heater voltage} & \text{V}_{f} & \text{6.3 V} \pm 5\% \\ \text{Heater current} & \overline{l_{f}} & \text{90 mA} \end{array}$ 

4)

<sup>\*</sup> Registered Trade Mark for T.V. camera tube


 $<sup>(1)^{2}(3)^{4}</sup>$ ) See page 5.


#### MECHANICAL DATA

Dimensions in mm

Distance between axis of anti-reflection glass disc and geometrical centre of signal electrode ring, measured in plane of faceplate: max. 0.2 mm.

total glass thickness  $7.2 \pm 0.2$  n = 1.5

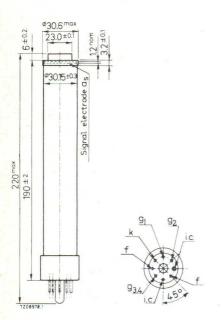

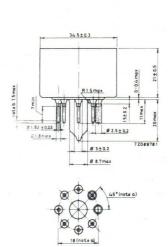

a) The base passes a flat gauge with a centre hole  $9.00\pm0.01~\text{M}$  and holes for passing the pins with the following diameters: 7 holes of  $1.75\pm0.005~\text{M}$  and one hole of  $3.00\pm0.005~\text{M}$ .

The holes may deviate max. 0.01 from their true geometrical position. Thickness of gauge 7 mm.

b) The ends of the pins are tapered and/or rounded but not brought to a sharp point.

Mounting position: any

Net weight

approx. 100 g

#### ACCESSORIES

Socket

type 56021

Focusing and deflection coil assembly

for 55875

for 55875L, R, G, B

type AT1132

type AT1112 or type AT1113

## 55875 55875 L 55875 R.G.B

3 to 6 pF 5)

70 V

0.5 mA

50 V 8)

750 V 8)

450 V 8)

0 V

125 V

125 V

10 V

50 °C

-30 °C

50 °C

-30 oc

500 lx 9)

3 mA

1 min

25

max. 0.003 μA

### CAPACITANCE

Signal electrode to all

FOCUSING magnetic 6)

magnetic 6)

DEFLECTION

## CHARACTERISTICS

 $-30 \text{ to } -100 \text{ V}^{7})^{8}$ Grid No.1 voltage for cut-off at  $V_{g_2} = 300 \text{ V}$  $Vg_1$ 

 $C_{a_s}$ 

Vg<sub>lp-p</sub>

 $v_{k_{p-p}}$ 

 $I_{g_2}$ 

Ias

Vas

 $V_{g_2}$ 

 $V_{g_1}$ 

-Vg1

Ik.

Vga, Vga

max.

min.

max.

max.

max.

max.

max.

max.

max.

min.

max.

max.

max.

Blanking voltage, peak to peak on grid No.1

on cathode

Grid No. 2 current at normally

required beam currents

Dark current at Vas = 45 V

Grid No.1 voltage, positive

LIMITING VALUES (Absolute max. rating system) Signal electrode voltage

Grid No.4 and No.3 voltage

Grid No.2 voltage

negative Cathode current

Cathode heating time before drawing cathode current Th Cathode to heater voltage,

positive peak

negative peak

Ambient temperature, storage and operation

tamb min. max.

 $V_{kfp}$ 

-V<sub>kfp</sub>

Faceplate temperature, storage and operation min. max.

5) 6) 7) 8) 9) See page 5.



Faceplate illumination

## 55875 55875 L 55875 R,G,B

#### OPERATING CONDITIONS AND PERFORMANCE

| Cathode voltage  | $V_k$ 0 V                     |
|--|-------------------------------|
| Grid No.2 voltage  | $v_{g_2}$ 300 V               |
| Signal electrode voltage   | $V_{a_s}$ 45 V 10)            |
| Beam current   | I <sub>beam</sub> See note 11 |
| Focusing coil current at given values of grid No.4 and grid No.3 voltage | See note 12                   |
| Line coil current and frame coil current                                 | See note 12                   |
| Faceplate illumination   | See notes 13 and 14           |
| Faceplate temperature  | t 20 to 45 °C                 |

Resolution

Modulation depth i.e. uncompensated horizontal amplitude response at  $400\,\mathrm{TV}$  lines, at centre of picture.

The figures shown represent the typical horizontal amplitude response of the tube after correction for faults introduced by the optical system.  $^{15}$ )

|  | 55875<br>55875L | 55875R | 55875G | 55875B  |
|--|-----------------|--------|--------|---------|
| Highlight signal current I <sub>S</sub>  | 0.3             | 0.15   | 0.3    | 0.15 μΑ |
| V <sub>g4</sub> , V <sub>g3</sub> = 550 to 600 V<br>(adjusted for optimum focus) | 40              | 35     | 40     | 50 %    |
| (adjusted for optimum focus)   |                 |        |        |         |

See also note 12

Limiting resolution ≥ 600 TV lines

Signal to noise ratio 16) approx. 200:1

Decay (or lag)

The decay is basically independent of the illumination level.

Measured with 100% signal current = 0.1  $\mu\rm A$  and a light source with a colour temperature of 2850  $^{\rm O}\rm K$  .

Appropriate filter inserted in light-path for tubes 55875R, G, B.

|  | 55875L, | R, C | 3 | 55875 | В |   |
|--|---------|------|---|-------|---|---|
| Residual signal after dark pulse of 60 ms  | max.    | 5    |   | max.  | 6 | % |
| Residual signal after dark pulse of 200 ms | max.    | 2    |   | max.  | 3 | % |

 $<sup>^{10}</sup>$ )  $^{11}$ )  $^{12}$ )  $^{13}$ )  $^{14}$ )  $^{15}$ )  $^{16}$ ) See pages 5 and 6.

#### NOTES

- 1) Underscanning of the specified useful target area of 12.8 mm x 17.1 mm, or failure of scanning, should be avoided since this may cause damage to the photoconductive layer.
- 2) For correct orientation of the image on the photoconductive layer the vertical scan should be essentially parallel to the plane passing through the tube axis and the mark on the tube base.
- <sup>3</sup>) Measuring conditions:

Illumination 4.54 lx at black body colour temperature of 2850 °K; the appropriate filter inserted in the light path. The signal current obtained in A is a measure of the colour sensitivity expressed in  $\mu A$  per lumen of white light before the filter.

Filters used:

| 55875R   | Schott     | OG2     | thickness | 3 mm |
|----------|------------|---------|-----------|------|
| 55875G   | Schott     | VG9     | thickness | I mm |
| 55875B   | Schott     | BG12    | thickness | 3 mm |
| See page | 8 for trai | smissio | n curves. |      |

- 4) a) Gamma is, to a certain extent, dependent on the wavelength of the illumination applied.
  - b) The use of gamma-stretching circuitry is recommended.
- 5) The capacitance  $C_{a_S}$  to all, which effectively is the output impedance, increases when the tube is inserted into the deflecting/focusing coil assembly.
- 6) For focusing/deflection coil assembly, see under "Accessories".
- 7) Without blanking voltage on grid No.1.
- 8) At  $V_k = 0 V$ .
- <sup>9</sup>) For short intervals. During storage the tube face shall be covered with the plastic hood provided; when the camera is idle the lens shall be capped.
- 10) The signal electrode voltage shall be adjusted to 45 V. To enable the tube to handle excessive highlights in the scene to be televised the signal electrode voltage may be reduced to a minimum of 25 V, this will, however, result in some reduction in performance, especially in respect of sensitivity.
- 11) The beam current shall be adjusted for correct stabilization of the highlight signal currents stated in the table.

| <br>)  |
|--|
| Black/white coil assembly AT1132                                       |
| $V_{g_4}$ , $V_{g_3}$ = 600 V<br>Colour coil assemblies AT1112, AT1113 |
| $V_{g_4}, V_{g_3} = 600 \text{ V}$                                     |

| Focus<br>current<br>mA | Line<br>current<br>mA <sub>pp</sub> | Frame current mA <sub>pp</sub> |
|------------------------|-------------------------------------|--------------------------------|
| 25                     | 235                                 | 35                             |
| 100<br><b>(</b> app    | 235<br>prox. valu                   | 35 nes)                        |

121

 $^{14}$ ) In the case of a black/white camera the illumination on the photoconductive layer,  $B_{\rm ph}$ , is related to scene illumination.  $B_{\rm sc}$ , by the formula:

$$B_{ph} = B_{sc} \frac{R.T}{4F^2 (m+1)^2}$$

in which R represents the average scene reflectivity or the object reflectivity, whichever is relevant, T the lens transmission factor, F the lens aperture, and m the linear magnification from scene to target.

A similar formula may be derived for the illumination level on the photoconductive layers of the R, G, and B tubes in which the effects of the various components of the complete optical system have been taken into account.

- 15) The horizontal amplitude response can be raised by the application of suitable correction circuits, which affects neither the vertical resolution, nor the limiting resolution.
- 16) The stated ratio represents the "visual equivalent signal-to-noise ratio", which is taken as the ratio of highlight video-signal current to RMS noise current, multiplied by a factor of 3, assuming an RMS noise current of the video pre-amplifier of 2 nA, bandwidth 5 MHz.

#### GENERAL RECOMMENDATIONS

- 1. During transport, handling and storage the axis of the Plumbicon must be either vertical, with faceplate up, or horizontal; the faceplate should be covered with the hood provided.
- 2. To avoid damage to the tungsten basepins, the Plumbicon should be inserted into its socket with care. Shocks, undue force, and bending loads on the pins are to be avoided.
- 3. During long term storage the ambient temperature should not exceed 30 °C.
- 4. The properties of the photoconductive material used in the Plumbicon may deteriorate during long idle periods. To restore them, the tube should be operated for a few hours, in overscanned condition, with an evenly illuminated target and a signal current of  $0.15 \,\mu\text{A}$ , at the voltage setttings indicated in its test data.
- 5. The signal electrode connection is made by a springcontact, which is part of the focusing coil assembly, and is kept pressed against the signal electrode ring.
- 6. Electrostatic shielding of the signal electrode is required to avoid interference effects in the picture. Effective shielding is provided by a grounded shield inside the focusing coil at the faceplate end, and one inside the deflecting yoke.



7. The light transfer characteristic of the Plumbicon tube being characterized by a gamma near unity, it may be desirable for broadcast applications to incorporate a gamma correcting circuitry in the video-amplifier system with an adjustable gamma of 0.5 to 1.

It is suggested to design this gamma correcting circuitry such that an extra compression can be introduced by manual control in the video signal range of 75% to 100% of normal peak white level.

This provision will prevent the video-amplifier system from becoming overloaded when the Plumbicon tube is exposed to scenes containing small peaked highlights as caused by reflections of shiny objects.

 The Plumbicon tube not generating own noise to any noticeable extent, the signalto-noise ratio will be determined mainly by the entrance noise of the video-amplifier system.


The high sensitivity of the Plumbicon tube warrants pictures with excellent signal-to-noise ratio under normal studio lighting conditions provided its output is fed into a well-designed input stage of the video-amplifier system. In such a system an aperture correction may be incorporated to ensure an attractive gain in resolving power without visually impairing the signal-to-noise ratio.

#### INSTRUCTIONS FOR USE

Instructions for use are packed with each tube.



55875 55875 L 55875 R,G,B

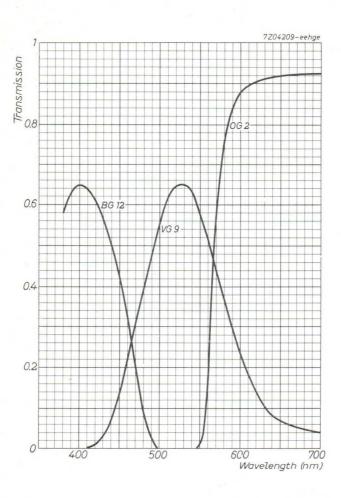



### CAMERA TUBE

 $\label{plumbicon} Plumbicon^*, sensitive pick-up \ tube \ with \ lead-oxide \ photoconductive \ target\ and \ low \ velocity \ stabilization.$ 

The tubes of this series are mechanically and electrically identical to the tubes of the 55875 series, the only difference being the degree of freedom from blemishes of the photoconductive target.

The tubes are intended for industrial and educational black and white and colour cameras. The series comprises the following versions:

55875-IG

for black and white cameras

55875R-IG

55875G-IG


for use in the chrominance channels of colour cameras

55875B -IG

For all further information see data of the 55875 series.



<sup>\*</sup>Registered Trade Mark for T.V. camera tube.

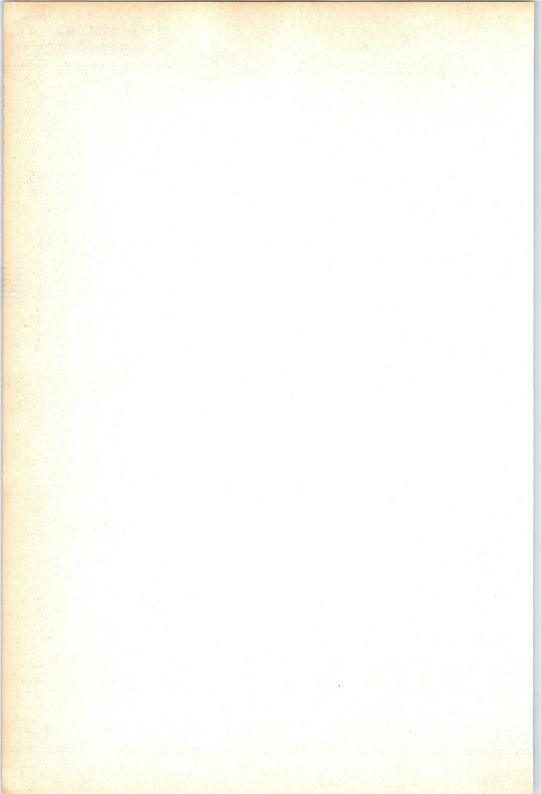

### **CAMERA TUBE**

Plumbicon\*, pick-up tube with photoconductive target and low velocity stabilisation exclusively intended for use with X-ray image intensifier in medical equipment.

| QUICK REFERENCE DA               | ATA          |
|----------------------------------|--------------|
| Focusing                         | magnetic     |
| Deflection                       | magnetic     |
| Diameter                         | 30 mm        |
| Heater                           | 6.3 V, 90 mA |
| Without anti-halation glass disc |              |

#### OPTICAL

| Image dimensions on photoconductive layer                                     | circ | le of 18.0 mm | n diam | neter $(1)^2)^3$ )   |
|---|------|---------------|--------|----------------------|
| Sensitivity, measured with a fluorescent light source having P20 distribution |      | min.          |        | μA/lumen<br>μA/lumen |
| Gamma of transfer characteristic  |      | 0.95 <u>+</u> | 0.05   | 4)                   |
| Spectral response, max. response  |      | = at approx   | . 500  | nm                   |

#### HEATING

Indirect by A.C. or D.C.; parallel supply

| Heater voltage | $V_{f}$ | 6.3 | $V \pm 10\%$ |
|----------------|---------|-----|--------------|
| Heater current | If      | 90  | mA           |

- 1) All underscanning of the specified useful target-area of 18.0 mm diameter or failure of scanning, should be carefully avoided, since this may cause permanent damage to the photoconductive layer.
- 2) The area beyond the 18.0 mm circular optical image preferably to be covered by a mask.
- 3) Direction of vertical scan should be essentially parallel to the plane passing through the tube axis and the mark on the tube base.
- 4) The near unity gamma of the 55876/01 ensures good contrast when televising low contrast X-ray image-intensifier pictures as encountered in radiology. Further contrast improvement may be obtained when an adjustable gamma expansion circuitry is incorporated in the video amplifier system.
- \*) Registered T.M. for TV camera tube.

#### CAPACITANCES


Signal electrode to all

## $C_{a_s}$ 3 to 6 pF $^1$ )

.

#### MECHANICAL DATA



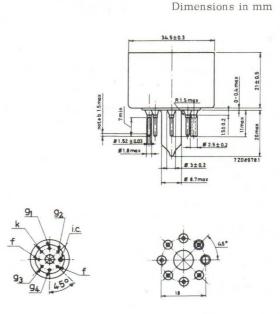

**FOCUSING** 

magnetic

DEFLECTION

magnetic

MOUNTING POSITION

any

#### ACCESSORIES

Socket

type 56021

Focusing and deflection coil assembly

type AT1122, AT1132, AT1132/01

NET WEIGHT

approx.100 g

 $<sup>^{1}</sup>$ ) Cap.  $a_{s}$ -rest, which effectively is the output impedance, increases when the tube is inserted into the deflection/focusing coil assembly.

#### CHARACTERISTICS

| $v_{g_1}$                               | -30 to -100  | v <sup>1</sup> )                                     |
|---|--|--|
| Vg <sub>1p-p</sub><br>V <sub>kp-p</sub> | min. 70<br>min. 25   | V<br>V   |
| $I_{g_2}$                               | max. 1   | mA   |
| Ias                                     | max. 0.003   | $\mu A^2$ )  |
| system)                                 |  |  |
| $V_{a_s}$                               | max. 50  | $V^3$ )  |
| $V_{g_4}, V_{g_3}$                      | max. 750   | $V^3$ )  |
| $v_{g_2}$                               | max. 450   | $V^3$ )  |
|   | max. 0   | v <sup>3</sup> )                                     |
|   | max. 125   | $V^3$ )  |
| $I_{\mathbf{k}}$                        | max. 3   | mA   |
|   |  |  |
|   | $V_{g_{1p-p}}$ $V_{k_{p-p}}$ $I_{g_{2}}$ $I_{a_{s}}$ $V_{g_{4}}$ $V_{g_{3}}$ $V_{g_{2}}$ $V_{g_{1}}$ $V_{g_{1}}$ | $\begin{array}{cccccccccccccccccccccccccccccccccccc$ |

 $V_{kf_D}$ 

tamb

Ambient temperature

positive peak

negative peak

125 V

10 V

50 °C

-30 °C

100

-30 °C

1ux 4)

50 °C

max.

max.

max.

min.

max.

max.

min.

<sup>(</sup>storage and operation)

Face-plate illumination

<sup>1)</sup> With no blanking voltage on g1

<sup>2)</sup> Target voltage adjusted to the value indicated by the tube manufacturer on the test sheet as delivered with each individual tube.

<sup>3)</sup> At  $V_k = 0 V$ .

<sup>4)</sup> For short intervals. During storage the tube face shall be covered with the plastic hood provided.

#### OPERATING CONDITIONS AND PERFORMANCE

| Cathode voltage                    | $V_{\mathbf{k}}$   | 0           | V          |
|------------------------------------|--------------------|-------------|------------|
| Grid No.2 voltage                  | $V_{g_2}$          | 300         | V          |
| Grid No.4 and grid No.3 voltage    | $V_{g_4}, V_{g_3}$ | 550 to 600  | $V^{1}$ )  |
| Signal electrode voltage           | Vas                | 15 to 45    | $V^2$ )    |
| Beam current .                     | Ibeam              | See note 3  |            |
| Focusing coil current              |                    |             |            |
| Line coil and frame coil current   |                    | See note 4  |            |
| Highlight signal electrode current | $I_{a_s}$          | 0.1 to 0.5  | $\mu A$ 5) |
| Average signal output              | a                  | pprox. 0.06 | $\mu A 5)$ |
| Face-plate temperature             | t                  | 25 to 40    | oC         |
| Face-plate illumination            | a                  | pprox. 2    | lux 6)     |

Operation at excessively high beam currents will result in loss of resolution.

### 4) For AT1122, AT1132, AT1132/01:

Focus coil current : 25 mA

Line deflection current : 250 mApp approx. values at  $V_{g_{3}g_{4}}$  = 550-600 V for 18 mm x 18 mm scanning

Frame deflection current: 50 mApp

5) Substraction of dark current is unnecessary because of the extremely small value.

6) Illumination on the photoconductive layer,  $B_{ph}$ , is related to scene-illumination,  $B_{sc}$ , by the formula:

$$B_{ph} = B_{sc} \frac{R.T.}{4.F^2. (m+1)^2}$$

in which R represents the scene-reflexivity (average or of the object under consideration, whichever is relevant), T the lens transmission factor, F the lens aperture and m the linear magnification from scene to target.

<sup>1)</sup> Grid No.4 and No.3 voltage adjusted for optimum picture focus.

<sup>2)</sup> The target voltage should be adjusted to the value indicated by the tube manufacturer on the test sheet as delivered with each individual tube.

<sup>3)</sup> Operation of the tube with beam currents I<sub>b</sub> not sufficient to stabilize the brightest highlight picture elements must be carefully avoided in order to prevent loss of highlight-detail and/or "sticking" effects.

## OPERATING CONDITIONS AND PERFORMANCE(continued)

Resolution

Modulation depth, i.e. uncompensated horizontal amplitude response (see note 1) at 5 MHz in picture centre (625 lines, 50 fields system)

> 30 % <sup>2</sup>)

Signal to noise ratio at a signal current of  $0.15 \mu A$ 

approx. 200:1 3)

Persistence (or lag)

Low persistence renders tube very suitable for medical X-ray applications in combination with X-ray image intensifier Persistence is basically independent of illumination level

Decay

Measured with 100% video signal current of 0.1  $\mu A$  to zero signal after 5 s peak video signal. Beam current adjusted for correct stabilisation. Fluorescent light source having P20 distribution.

Residual signal after dark pulse of 60 ms Residual signal after dark pulse of 200 ms max. 10 % typ. 5 % max. 4 % 2 %



<sup>&</sup>lt;sup>1</sup>) With a signal current of 0.10  $\mu$ A and a beam current of 0.20  $\mu$ A.

<sup>2)</sup> Horizontal amplitude response can be raised by the application of suitable phaseand-aperture correction circuits. Such compensation, however, does not affect vertical resolution, nor does it influence the limiting resolution.

<sup>3)</sup> The specified ratio represents the "visual equivalent signal-to-noise ratio", which is taken as the ratio of highlight video-signal current to R.M.S. noise-current, multiplied by a factor of 3. (Assuming an R.M.S. noise-current of the video preamplifier of 2.10<sup>-9</sup> A, bandwidth 5 MHz.)

#### GENERAL RECOMMENDATIONS AND INSTRUCTIONS FOR USE

#### MOUNTING, WORKING POSITION

- 1. Any
- 2. During transport, handling or storage the longitudinal axis must either be in a horizontal position or be kept vertically with the face-plate of the tube up.
- 3. During long term storage the ambient temperature should not exceed 30 °C.

#### GENERAL


- 1. Signal-electrode connection is made by a suitable spring-contact which is executed as part of the focusing coil.
- Electrostatic shielding of the signal-electrode is required in order to avoid interference effects in the picture. Effective shielding is provided by grounding shields on the inside of the face-plate end of the focusing coil and on the inside of the deflecting yoke.
- 3. The Plumbicon as described in these data has been provided with tungsten base pins. It is recommended to avoid mechanical force and shocks to these pins and to insert the tube into its socket with care.
- 4. In some cases the properties of the photoconductive layer as used in the Plumbicon may be found to have slightly deteriorated during long idle periods, such as encountered between the last test in our works and actual delivery to the user. It is therefore recommended to operate the tube directly after receipt under normal voltage settings, in overscanned position with evenly illuminated target and a signal current of  $0.15~\mu\mathrm{A}$  for some hours after which the initial properties will have been fully restored.
- The Plumbicon not generating own noise to any noticeable extent, the signal-tonoise ratio will mainly be determined by the entrance noise of the video amplifier system.
  - The high sensitivity of the Plumbicon warrants pictures with excellent signal-to-noise ratio, provided its output is fed into a well-designed input stage of the video-amplifier system. In such a system an aperture correction may be incorporated to ensure an attractive gain in resolving power without impairing the visual signal-to-noise ratio.

#### INSTRUCTIONS FOR USE

Instructions for use are packed with each tube




## Photo tubes

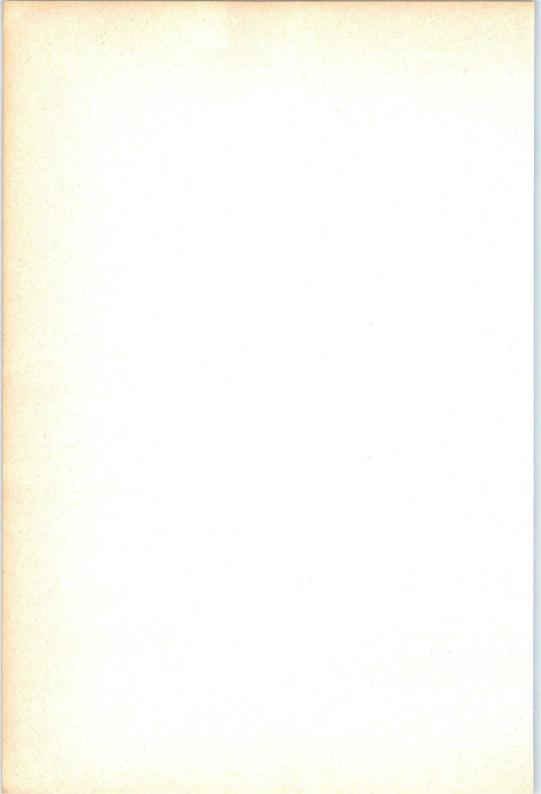

## LIST OF SYMBOLS

| Supply voltage                |  | V <sub>b</sub> |
|-------------------------------|--|----------------|
| Cathode current               |  | $I_k$          |
| Anode series resistance       |  | Ra             |
| Sensitivity                   |  | N              |
| Capacitance, anode to cathode |  | Cak            |
| Ambient temperature           |  | tamb           |
| Envelope temperature          |  | tenv           |
|                               |  |                |

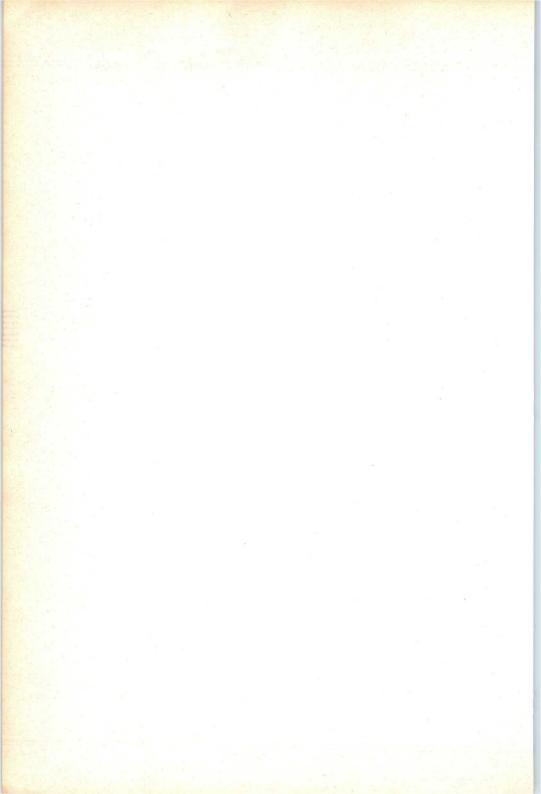

# GENERAL OPERATIONAL RECOMMENDATIONS PHOTOTUBES

#### 1. GENERAL

- 1.1 Photo tubes are photo-electric devices of the emissive type, as distinct from the barrier-layer and photo-conductive cells. They may be divided into two groups:
  - 1. High-vacuum photo tubes,
  - 2. Gas-filled photo tubes

Each of these groups can be subdivided into red sensitive and blue sensitive photo tubes; the spectral response depending upon the photocathode material. For the blue sensitive photo tubes the "A" type of cathode is used (caesium-antimony).

For the red sensitive photo tubes the "C" type of cathode is used (caesium-oxidised silver).

Spectral response curves for each type of cathode are given at the end of these recommendations.

#### 2. OPERATING CHARACTERISTICS

For a vacuum photo tube, the anode current for a fixed quantity of light, is reasonably constant at anode voltages above a certain low value known as the "saturation voltage".

The gas-filled photo tube contains a quantity of inert gas, the ionising potential of which is generally somewhat higher than the saturation voltage of an equivalent vacuum photo tube so that the anode current is substantially constant between the saturation voltage and the voltage at which ionisation commences. Above this voltage range, ionisation increases, resulting in a progressive increase in anode current.

Since a gas-filled photo tube operates at a higher voltage than the ionising potential it will have a greater sensitivity than a similar vacuum photo tube.

Within the operating ranges of both groups of photo tubes the anode current is directly proportional to the quantity of light incident on the cathode surface.

2.1 <u>Luminous sensitivity</u>. The response of a photo tube to light falling on its cathode is termed its <u>luminous sensitivity</u>; this is expressed in micro-amperes per lumen.

The sensitivity of all types is dependent upon the colour temperature of the light source and in some cases upon the portion of the cathode that is illuminated.

The sensitivity of gas-filled photo tubes moreover is dependent upon the anode voltage; the sensitivity of vacuum photo tubes in the "saturation region" in which region the tube mainly operates, is practically independent of the anode voltage.

Unless otherwise stated, the values given in the data sheets have been obtained by illuminating the total useful cathode area with an incandescent lamp having a colour temperature of 2700  $^{\rm O}{\rm K}$ .

The values given for sensitivity on the data sheets are the initial values for average photo tubes. The ratio between the maximum and minimum initial sensitivity of photo tubes of a given type will not exceed 3 to 1.

- 2.2 <u>Dark current</u>. This is the current which flows between photocathode and anode when the photo tube is in total darkness. The tube is in total darkness when no radiation within the spectral sensitivity curve of the photocathode is present. This current is caused mainly by electrical leakage and thermionic emission from the photocathode and will therefore increase with temperature and voltage.
- 2.3 Frequency response. The sensitivity of a vacuum photo tube is constant for frequencies of light modulation up to those generally met in practice. Only at very high frequencies, at which transit time limitations occur, the sensitivity becomes dependent upon the frequency.

The sensitivity of gas-filled photo tubes, however, decreases with the frequency. At a frequency of 15000 Hz this decrease is about 3 dB, as is shown in the accompanying curve.

#### 3. THERMAL DATA

Ambient temperature. The temperature of the photocathode may not be too high otherwise evaporation of the emissive cathode layer may result, with consequent reduction in sensitivity and life. As it is difficult to measure this temperature a limiting value for the ambient temperature is given on the published data sheets.

It must be considered, however, that even in case the ambient temperature in the immediate vicinity of the photo tube is not beyond the limit, an excessive temperature rise of the photocathode can be caused e.g. by infrared heat radiation. If the possibility of this radiation exists, a suitable filter should be inserted in the optical path to minimize this effect.

#### 4. OPERATIONAL NOTES

<u>Stability during life</u>. Where a gas-filled photo tube is continuously operated at its maximum rated voltage its sensitivity may fall by as much as 50%, during 500 hours.

Vacuum photo tubes on the other hand are inherently more stable.



The stability of both types of photo tubes will be improved if the current density of the photocathode is reduced (e.g. by reducing the incident light or enlarging the illuminated area of the photocathode).

Particularly in the case of gas-filled photo tubes reduction of the anode voltage will improve the stability.

Also in the inoperative periods photo tubes must not be exposed to strong radiation such as direct sunlight.

A loss of sensitivity of both vacuum and gas-filled photo tubes during operation will be wholly or partially restored during the inoperative periods.

Prevention of glow discharge. Gas-filled photo tubes must not be operated above the published maximum voltage since a glow discharge, indicated by a faint blue glow in the bulb, may occur which adversely affects the good operation of the photo tube and even can result in rapid destruction of the photocathode. If accidental over-running can be expected the anode resistance should have a value of at least  $0.1~\mathrm{M}\Omega$ .

Where it is necessary to use the maximum operating voltage a stabilized supply is recommended.

#### 5. MOUNTING

If no restrictions are made on the individual published data sheets photo tubes may be mounted in any position.

#### 6. STORAGE

It is necessary that phototubes be always stored in the dark.

#### 7. LIMITING VALUES


The limiting values of photo tubes are given in the absolute max. rating system.

#### 8. OUTLINE DIMENSIONS


The outline dimensions are given in mm.

3



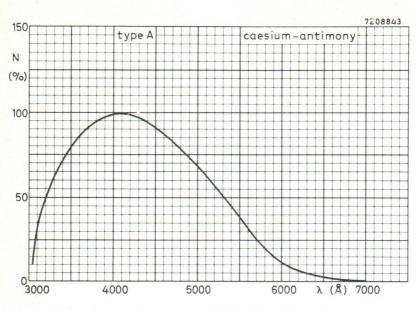


Reletive spectral response curve type A

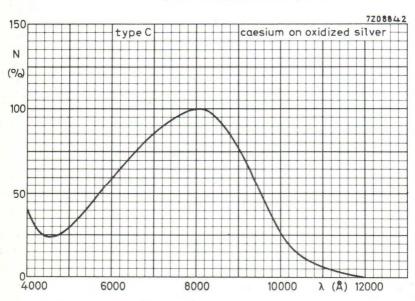


Relative spectral response curve type C



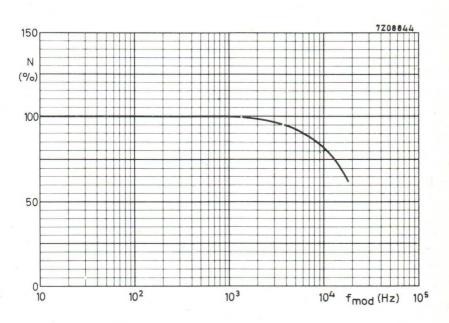

Frequency response curve (see also 2.3)



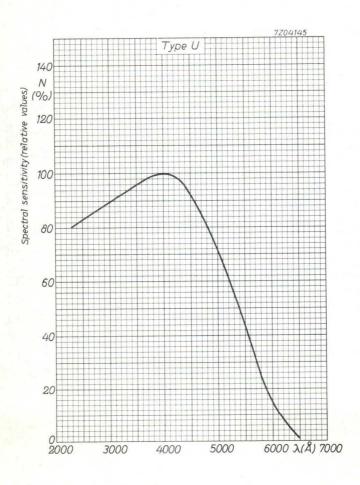

### VACUUM PHOTOTUBE


Vacuum phototube, particularly sensitive to daylight and to light radiation with a blue predominance.

| QUICK REFERENCE DATA    |         |      |              |          |  |
|-------------------------|---------|------|--------------|----------|--|
| Anode supply voltage    | $V_{b}$ | max. | 100          | V        |  |
| Luminous sensitivity    | N       |      | 45           | μA/lumen |  |
| Spectral response curve |         | type | A            |          |  |
| Outline dimensions      |         | max. | 19 dia. x 54 | mm       |  |

#### MECHANICAL DATA

Dimensions in mm

Base: Miniature

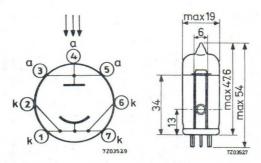

The arrows show the direction of the incident radiation

The cathode connection should be made to pins 1, 2, 6 and 7 connected together and the anode connection to pins 3, 4 and 5 together

### Photo cathode

Surface caesium antimony

Projected sensitive area 4 cm<sup>2</sup>

### ELECTRICAL DATA

### Operating characteristics

| Anode supply voltage  | $v_b$ | 100 | V         |  |
|-----------------------|-------|-----|-----------|--|
| Anode series resistor | Ra    | 1   | $M\Omega$ |  |

Luminous sensitivity
measured with the whole cathode area
illuminated by a lamp of colour
temperature 2700 <sup>O</sup>K

temperature 2700  $^{\rm O}$ K N 45  $\mu$ A/lumen


Dark current  $I_{dark}$  max. 0.05  $\mu A$ 

### Capacitance

Anode to cathode Cak 0.7 pF

### LIMITING VALUES (Absolute max. rating system)

Anode supply voltage  $$V_b$$  max. 100 \$V\$ Cathode current  $$I_k$$  max. 5  $$\mu A$$  Ambient temperature  $$t_{amb}$$  max. 70  $^o$ C

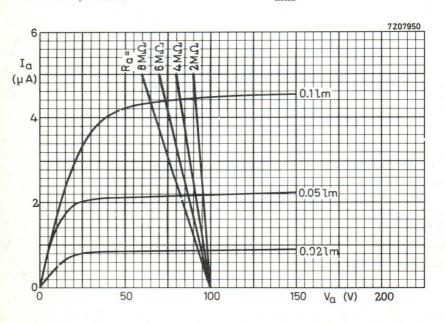

### **GAS FILLED PHOTOTUBE**


Gas filled phototube particularly sensitive to incandescent light sources, and to near infra-red radiation.


| QUICK REFERENCE DATA    |  |                |      |           |     |          |
|-------------------------|--|----------------|------|-----------|-----|----------|
| Anode supply voltage    |  | V <sub>b</sub> | max. |           | 90  | V        |
| Luminous sensitivity    |  | N              |      |           | 125 | μA/lumen |
| Spectral response curve |  |                | type | C         |     |          |
| Outline dimensions      |  |                | max. | 19 dia. x | 54  | mm       |

#### MECHANICAL DATA

Dimensions in mm

Base: Miniature

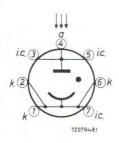

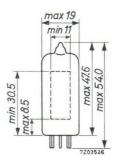

The arrows show the direction of the incident radiation

The cathode connection may be made to pins  $1,\ 2,\ 6$  and 7 connected together and the anode connection to pins  $3,\ 4$  and 5 connected together.

### Photocathode

Surface

Caesium on oxidized silver

Projected sensitive area

 $3.0 \text{ cm}^2$ 

### ELECTRICAL DATA


Operating characteristics

| Anode supply voltage  | $V_b$      | 90  | V             |
|---|------------|-----|---------------|
| Anode series resistor   | Ra         | 1   | $M\Omega$     |
| Luminous sensitivity measured with<br>the whole cathode area illuminated<br>by a lamp of colour temperature 2700 °K | N          | 125 | $\mu$ A/lumen |
| Dark current  | Idark max. | 0.1 | μΑ            |
| Capacitance   |            |     |               |

 $C_{ak}$ 1.1 pF Anode to cathode

### LIMITING VALUES (Absolute max. rating system)

| Anode supply voltage | $V_b$            | max. | 90  | V       |
|----------------------|------------------|------|-----|---------|
| Cathode current      | $I_{\mathbf{k}}$ | max. | 2.0 | $\mu A$ |
| Ambient temperature  | tamb             | max. | 100 | °C      |

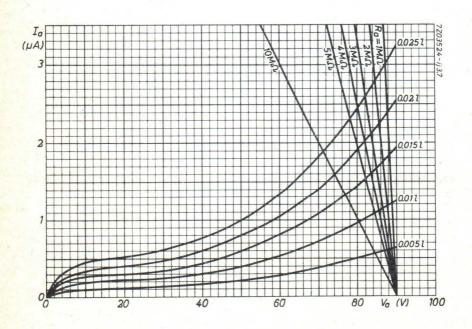

## VACUUM PHOTOTUBE


Vacuum phototube, particularly sensitive to incandescent light sources, and to near infra-red radiation.


| QUICK REFERENCE DATA    |    |      |         |      |          |
|-------------------------|----|------|---------|------|----------|
| Anode supply voltage    | Vb | max. | -       | 250  | V        |
| Luminous sensitivity    | N  |      |         | 20   | μA/lumen |
| Spectral response curve |    | type | C       |      |          |
| Outline dimensions      |    | max. | 19 dia. | x 54 | mm       |

#### MECHANICAL DATA

Dimensions in mm

Base: Miniature

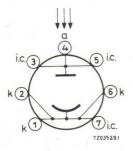

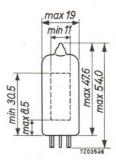

The arrows show the direction of the incident radiation.

The cathode connection may be made to pins  $1,\ 2,\ 6$  and 7 connected together and the anode connection to pins  $3,\ 4$  and 5 connected together.

### Photo cathode

Surface Ceasium on oxidised silver

Projected sensitive area 3.0 cm<sup>2</sup>

#### ELECTRICAL DATA

### Operating characteristics

Anode supply voltage 50 Vb

Anode series resistor Ra  $M\Omega$ 

Luminous sensitivity measured with the whole cathode area illuminated by a lamp of colour temperature 2700 °K

N

Dark current (at V<sub>a</sub> = 100 V)  $I_{dark}$  max. 0.05  $\mu A$ 


### Capacitance

Anode to cathode Cak 0.8 pF

### LIMITING VALUES (Absolute max. rating system)

Anode supply voltage 250  $V_{b}$ max. Cathode current Ik max. 10 μΑ

max. 100 OC Ambient temperature tamb

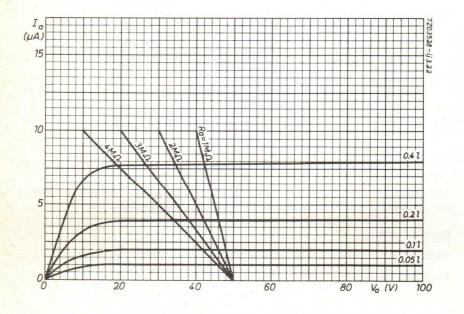

μA/lumen

## GAS FILLED PHOTOTUBE


Gas-filled phototube particularly sensitive to daylight and to radiation having a blue predominance.


| QUICK REFERENCE DATA    |  |  |                |            |         |          |
|-------------------------|--|--|----------------|------------|---------|----------|
| Anode supply voltage    |  |  | V <sub>b</sub> | max.       | 90      | V        |
| Luminous sensitivity    |  |  | N              |            | 130     | μA/lumen |
| Spectral response curve |  |  |                | type A     |         |          |
| Outline dimensions      |  |  |                | max. 19 di | a. x 54 | mm       |

#### MECHANICAL DATA

Dimensions in mm

Base: Miniature

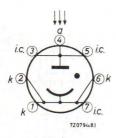

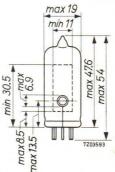

The arrows show the direction of the incident radiation

The cathode connection may be made to pins 1, 2, 6 and 7 connected together and the anode connection to pins 3, 4 and 5 connected together.

### Photocathode

Surface Caesium antimony

Projected sensitive area 2.1 cm<sup>2</sup>



### **ELECTRICAL DATA**

| Operating | characteristics |
|-----------|-----------------|
|-----------|-----------------|

Anode supply voltage  $$V_b$$   $$85\ V$$  Anode series resistor  $$R_a$$   $1\ M\Omega$  Luminous sensitivity measured with

the whole cathode area illuminated by a lamp of colour temperature 2700 °K

Dark current I<sub>dark</sub> max. 0.1 μA

Capacitance


Anode to cathode Cak 0.9 pF

### LIMITING VALUES (Absolute max. rating system)

Anode supply voltage V<sub>b</sub> max. 90 V

Cathode current  $I_k$  max.  $0.0125 \mu A/mm^2$ 

Ambient temperature t<sub>amb</sub> max. 70 °C

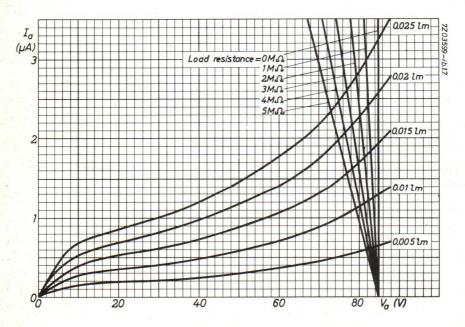

130  $\mu$ A/lumen

## VACUUM PHOTOTUBE


Vacuum phototube particularly sensitive to daylight and to light radiation with a blue predominance.


| QUICK REFERENCE DATA    |       |           |          |          |  |
|-------------------------|-------|-----------|----------|----------|--|
| Anode supply voltage    | $v_b$ | max.      | 100      | V        |  |
| Luminous sensitivity    | N     |           | 45       | μA/lumen |  |
| Spectral response curve |       | type A    |          |          |  |
| Outline dimensions      |       | max. 19 d | ia. x 54 | mm       |  |

### MECHANICAL DATA

Dimensions in mm

Base: Miniature

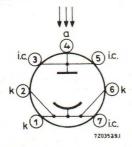

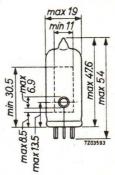

The arrows show the direction of the incident radiation.

The cathode connection may be made to pins 1, 2, 6 and 7 connected together and the anode connection to pins 3, 4 and 5 connected together.

### Photocathode

Surface

caesium antimony

Projected sensitive area

 $2.1 \text{ cm}^2$ 



### ELECTRICAL DATA

### Operating characteristics

Anode supply voltage  $$V_b$$   $85\ V$  Anode series resistor  $R_a$   $1\ M\Omega$ 

Luminous sensitivity measured with the whole cathode area illuminated by a lamp of colour temperature 2700  $^{\rm O}{\rm K}$ 

Dark current  $I_{dark}$  max. 0.05  $\mu A$ 


N

Capacitance

Anode to cathode Cak 0.9 pF

### LIMITING VALUES (Absolute max. rating system)

Anode supply voltage  $V_b \qquad \max. \ 100 \quad V$   $Cathode current \qquad I_k \qquad \max. 0.025 \quad \mu A/mm^2$   $Ambient temperature \qquad t_{amb} \qquad \max. \quad 70 \quad ^{o}C$ 

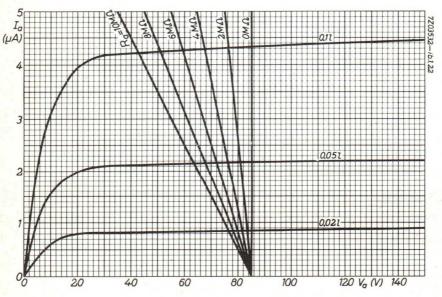

45  $\mu$ A/lumen


### PHOTO TUBE

Vacuum phototube with high stability and linearity intended for use in high precision photometry (maximum intensity 1 lux) and for measurements of quickly changing light phenomena (maximum light intensity approx. 1000 lux).

| QUICK REFERENCE DATA |       |                          |                   |  |  |  |
|----------------------|-------|--------------------------|-------------------|--|--|--|
| Anode voltage        | Va    | 6 to 90                  | V <sub>D.C.</sub> |  |  |  |
| Average current      | I     | max. $50 \times 10^{-9}$ | A                 |  |  |  |
| Peak current         | $I_p$ | max. $35 \times 10^{-6}$ | A                 |  |  |  |
| Sensitivity          | N     | $60 \times 10^{-6}$      | A/lumen           |  |  |  |
| Rise time            |       | 14                       | ns                |  |  |  |
| Spectral response    |       | type A                   |                   |  |  |  |
| Outline dimensions   |       | max. 52 x 82             | mm                |  |  |  |

### MECHANICAL DATA

Dimensions in mm

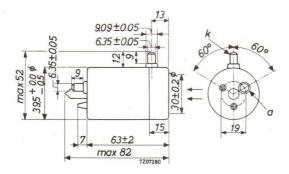

Mounting position: any



### Photocathode

Cathode material

Caesium-antimony

The cathode material has been deposed on the inner surface of the window. This window is optically plane and polished.

It therefore allows the luminous source to be at close and narrowly reproducable distance from the cathode.

Useful cathode area

dia.

30 mm

Spectral response

type A

The spectral response curve shown is a nominal curve and considerable variation between individual tubes may be expected.

Sensitivity measured with a tungsten ribbon lamp having a c.t. of 2850 °C

typical  $60 \times 10^{-6}$  A/lumen

min.  $35 \times 10^{-6}$  A/lumen

Each tube is marked with its sensitivity

An angle of  $15^{\rm O}$  between the axis of the tube and the direction of the incident light decreases the sensitivity not more than  $5\,\%$ .

#### CAPACITANCE

Anode to cathode

Cak

13 pF

#### TYPICAL CHARACTERISTICS

| Saturation voltage, luminous flux 0.05 lumen luminous flux 1 lumen |      | < 6<br>< 70     | V <sub>D.C.</sub> |
|--|------|-----------------|-------------------|
| Anode voltage  | Va   | 6 to 90         | VD.C.             |
| Dark current   | Iao  | max. $10^{-12}$ | A                 |
| Linearity 1)   |      | 0.1             | %0                |
| Insulation resistance  | rins | min. $10^{15}$  | Ω                 |
| Risetime   | Т    | 14              | ns                |



<sup>1)</sup> The relation between the incident luminous flux and the tube current is linear within measuring errors, provided the anode voltage is higher than the saturation voltage.

### LIMITING VALUES (Absolute max. rating system)

| Anode voltage                 |  | Va                | max.         | 100   | VD.C.                               |
|-------------------------------|--|-------------------|--------------|---|-------------------------------------|
| Cathode current cathode area, |  | $I_{kp}$          | max.         | 50 x 10 <sup>-9</sup><br>70 x 10 <sup>-12</sup> | A/mm <sup>2</sup> A/mm <sup>2</sup> |
| Cathode current,              | peak <sup>1</sup> )<br>average (T <sub>av</sub> = 1 s) | $I_{kp}$ $I_{k}$  | max.         | $35 \times 10^{-6}$<br>$50 \times 10^{-9}$      | A<br>A                              |
| Envelope temper               | rature   | t <sub>bulb</sub> | min.<br>max. | -90<br>+60                                      | °C<br>°C                            |

#### LIFE EXPECTANCY

With an average cathode current of  $50 \times 10^{-9}$  A, the sensitivity will not decrease more than 10% of its initial value between zero and 500 operating hours.

At lower cathode currents a higher stability may be expected.

#### REMARKS

- The cathode should not be exposed to direct sunlight.
- In cases where low frequency noise influences the measuring results, this source of noise may be reduced by cooling the tube to  $-90~^{\circ}\text{C}$ .

#### APPLICATION

The currents allowed through 150AV are so low that amplification will always be necessary. To maintain the precision of the signal coming from the phototube is often the main problem.

This problem may be divided into four parts:

### 1. Distortion due to capacitive shunting:

The signal on the input of the amplifier is

$$v = \sqrt{\frac{1}{R^2 + \omega^2 C^2}}$$

in which v = signal in V

i = current through phototube in A

R = part of series-resistance (in  $\Omega$ ) from which the signal is taken

 $\omega = 2\pi X$  frequency of the signal in Hz

C = total capacitance of cathode of phototube + input-capacitance of amplifier + stray capacitance of wiring in F. The value of C will not easily be kept below 20 pF.

1) With the cathode uniformly illuminated.

If a certain distortion only is accepted the maximum frequency of the signal to be transferred will limit the value of the resistance from which the signal will be taken and by this limit the value of the signal on the input of the amplifier.

#### 2. Noise:

The level of the signal on the input of the amplifier shall be above the noise level.

The 3 main sources of noise are:

a. Shot noise in the phototube which follows the formula:

$$I_{\text{noise}} = \sqrt{2ei \times B'} in A_{R.M.S.}$$

$$V_{noise} = RxI_{noise}$$

in which  $e = 1.6 \times 10^{-19}$  in As

i = the current through the phototube in A

B = the bandwidth in Hz

R = value of resistor from which signal is taken in  $\Omega$ 

b. Resistance noise of that part of the series-resistor from which the input signal for the amplifier is taken.

This part of the noise follows the formula:

$$V_{\text{noise}} = \sqrt{4 \text{ k T R B}}$$

in which  $k = 1.35 \times 10^{-23}$ 

T = temperature in OK

R = value of resistor in  $\Omega$ 

B = bandwidth in Hz

c. Input-noise of the amplifier

In such cases where an electron tube is used in the input of the amplifier, the noise-voltage follows the formula

$$V_{\text{noise}} = \sqrt{\sum V_{\text{eq}}^2 \Delta B}$$

The value of  $V_{\mbox{eq}}$  as a function of frequency is different for each type of tube, but for frequencies above 1000 Hz  $V_{\mbox{eq}}$  does not change much with the frequency allowing the formula to be reduced to

$$V_{\text{noise}} = V_{\text{eq}} \sqrt{B}$$

In that case  $V_{\mbox{\footnotesize eq}}$  can be approximated within a factor 2 to 3 by

$$V_{eq} = \frac{3 \times 10^{-9} \sqrt{I_a}}{S}$$

in which  $\mathbf{I}_a$  is the anode current of the tube in A and S is the transconductance in  $A/V_{\:\raisebox{1pt}{\text{\circle*{1.5}}}}$ 

### 3. Input current of the amplifier

The input-current of the amplifier should be low compared with the signal current through the phototube.


### 4. Linearity of the amplifier

The amplifier should have a feedback so that the stability and the distortion of the signal is not impaired.

If the circumstances are such that the signal to noise ratio cannot be kept within acceptable limits - usually there where low incident illumination levels combine with high frequencies - use of this type of phototube should be abandoned in preference to photomultipliers where the distortion due to capacitive shunting and noise sources other than shot noise are of smaller relative importance.

### Examples:

An example for a simple circuit which is useful for many purposes of static light measurements is shown in fig.1.

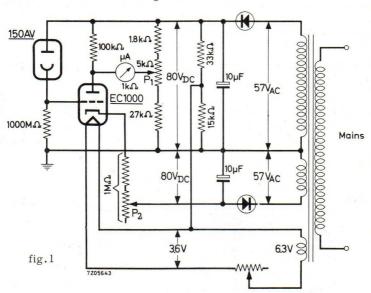

In this circuit the  $\mu A$  meter with 50  $\mu A$  f.s.d. may be calibrated in milli-lumen or - if the whole of the cathode is illuminated - in lux. Assuming that the pointer of the  $\mu A$  meter will not move with frequencies above 20 Hz, for calculation of the noise level frequencies below 20 Hz are of interest only.

For currents of  $5 \times 10^{-9}$  A through the phototube the signal on the input of the amplifier is of a level of 5 V, the shot noise on a level of  $10^{-4}$  V, the resistance noise on a level of  $10^{-5}$  V, the equivalent noise voltage on the input of EC1000 on a level of  $10^{-6}$  V.



The feedback of this system is about 1000 times, so the accuracy is solely determined by the accuracy of the  $\mu$ A meter, all other sources being small.

Mains voltage variations of +10% and -15% are of no influence on the measuring result.

The circuit of Fig.1 is calibrated as follows: Adjust P2 so that the total cathode resistance of the EC1000 is  $\frac{A \times R_1}{50 \times 1000} \Omega$ 

in which  $R_1$  is the value of the series resistance of the 150AV and A is the actual sensitivity in  $\mu A/lumen$  of the 150AV as marked on the tube.

Disconnect the connection between the phototube and the grid of the EC1000 and connect the grid of EC1000 to earth. Connect the circuit to the mains and adjust  $P_1$  so that the  $\mu A$  meter indicates zero.

The circuit is now restored and has been calibrated for 0.02 mlumen per  $\mu A$  deflection of the  $\mu A$  meter.

For measurements of rapidly changing phenomena the series-resistor in Fig.1 of 150AV should be adapted for an acceptable signal to noise ratio and acceptable distortion while the  $\mu A$  meter should be replaced by a resistor shunted by the input of an oscilloscope.

Depending on the frequency further adaptations of the circuit may be necessary, e.g. further smoothing of the D.C. voltages and a D.C. heater supply for the EC1000.

For extremely rapid changes when all time constants of the circuit have to be reduced as far as possible a circuit as shown in fig.2 may be used on which laser light flashes can be recorded with a rise time of the signal on the oscilloscope of 20 ns.

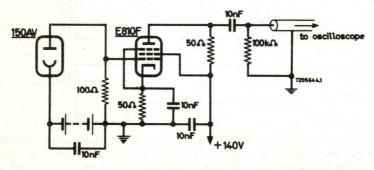


fig.2

Remark P1 and P2 should be wirewound resistors.




### PHOTO TUBE

Vacuum phototube with high stability and linearity intended for use in high precision/photometry (maximum intensity 1 lux) and for measurements of quickly changing light phenomena (maximum light intensity approx. 1000 lux).

| QUICK REFERENCE DATA |       |        |                       |                   |  |
|----------------------|-------|--------|-----------------------|-------------------|--|
| Anode voltage        | Va    |        | 6 to 90               | V <sub>D.C.</sub> |  |
| Average current      | I     | max. 3 | $35 \times 10^{-9}$   | A                 |  |
| Peak current         | $I_p$ | max. 2 | 25 x 10-6             | A                 |  |
| Sensitivity          | N     | > 1    | 20 x 10 <sup>-6</sup> | A/lumen           |  |
| Rise time            |       |        | 14                    | ns                |  |
| Spectral response    |       |        | type C                |                   |  |
| Outline dimensions   |       | max.   | 52 x 82               | mm                |  |

### MECHANICAL DATA

Dimensions in mm

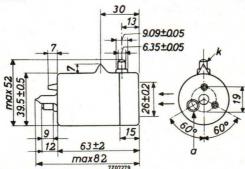

Mounting position: any

#### Photocathode

Cathode material

Caesium on oxidized silver

The cathode material has been deposed on the inner surface of the window. This window is optically plane and polished.

It therefore allows the luminous source to be at close and narrowly reproducable distance from the cathode.

Useful cathode area

dia.

26 mm

Spectral response

type C

The spectral response curve shown is a nominal curve and considerable variation between individual tubes may be expected.

Sensitivity measured with a tungsten ribbon lamp having a c.t. of 2850 °K

typical 20 x 10<sup>-6</sup> A/lumen

14 x 10<sup>-6</sup> A/lumen min.

Each tube is marked with its sensitivity.

An angle of 150 between the axis of the tube and the direction of the incident light decreases the sensitivity not more than 5%.

#### CAPACITANCE

Anode to cathode

 $C_{ak}$ 

13 pF

#### TYPICAL CHARACTERISTICS

| Saturation voltage, luminous flux 0.05 lumen |                  |      | < 6   | VD.C. |
|--|------------------|------|-------|-------|
| luminous flux 1 lumen                        |                  |      | < 70  | VD.C. |
| Anode voltage                                | Va               | 6    | to 90 | VD.C. |
| Dark current                                 | Iao *            | max. | 10-9  | A     |
| Linearity 1)                                 |                  |      | 0.1   | %。    |
| Insulation resistance                        | rins             | min. | 1015  | Ω     |
| Rise time                                    | $T_{\mathbf{r}}$ |      | 14    | ns    |



<sup>1)</sup> The relation between the incident luminous flux and the tube current is linear within measuring errors, provided the anode voltage is higher than the saturation voltage.

| Anode voltage                 |   | Va   | max.         | 100   | V <sub>D.C</sub> .                  |
|-------------------------------|---|--|--------------|---|-------------------------------------|
| Cathode current cathode area, | per mm <sup>2</sup> of<br>peak<br>average (T <sub>av</sub> = 1 s) | $I_{\mathbf{k}_{\mathbf{p}}}$ $I_{\mathbf{k}}$ | max.         | 50 x 10 <sup>-9</sup><br>70 x 10 <sup>-12</sup> | A/mm <sup>2</sup> A/mm <sup>2</sup> |
| Cathode current,              |   | I <sub>kp</sub>                                | max.         | 25 x 10 <sup>-6</sup><br>35 x 10 <sup>-9</sup>  | A                                   |
| Envelope temper               | ature   | t <sub>bulb</sub>                              | min.<br>max. | -90<br>+60                                      | °C                                  |

#### LIFE EXPECTANCY

With an average cathode current of  $35 \times 10^{-9}$  A, the sensitivity will not decrease more than  $10\,\%$  of its initial value between zero and 500 operating hours.

At lower cathode currents a higher stability may be expected.

#### REMARKS

- The cathode should not be exposed to direct sunlight.
- In cases where low frequency noise influences the measuring results, this source of noise may be reduced by cooling the tube to -90  $^{\rm o}{\rm C}$ .

#### APPLICATION

Please refer to data of 150AV.



The state of the s

The second secon

नक्षात्र भी वर्ष

Contract to the second of the second of


### PHOTO TUBE

Vacuum phototube with high stability and linearity intended for use in high precision photometry (maximum intensity 1 lux) and for measurements of quickly changing light phenomena (maximum light intensity approx. 1000 lux).

| QUICK REFERENCE DATA |       |      |                       |         |  |
|----------------------|-------|------|-----------------------|---------|--|
| Anode voltage        | Va    |      | 6 to 90               | VD.C.   |  |
| Average current      | I     | max. | $50 \times 10^{-9}$   | A       |  |
| Peak current         | $I_p$ | max. | $35 \times 10^{-6}$   | A       |  |
| Sensitivity          | N     |      | 60 x 10 <sup>-6</sup> | A/lumen |  |
| Rise time            |       |      | 14                    | ns      |  |
| Spectral response    |       |      | type U                |         |  |
| Outline dimensions   |       | max. | 52 x 110              | mm      |  |

#### MECHANICAL DATA

Dimensions in mm

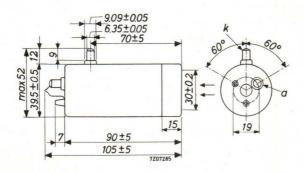

Mounting position: any



### Photocathode

Cathode material

Caesium-antimony

The cathode material has been deposed on the inner surface of the quartz window. This window is optically plane and polished.

It therefore allows the luminous source to be at close and narrowly reproducable distance from the cathode.

Useful cathode area

dia.

30 mm

Spectral response

type U

The spectral response curve shown is a nominal curve and considerable variation between individual tubes may be expected.

Sensitivity measured with a tungsten ribbon lamp having a c.t. of 2850 <sup>O</sup>K

typical  $60 \times 10^{-6}$  A/lumen min.  $35 \times 10^{-6}$  A/lumen

Each tube is marked with its sensitivity.

An angle of  $15^{\rm O}$  between the axis of the tube and the direction of the incident light decreases the sensitivity not more than 5~%.

#### CAPACITANCE

Anode to cathode

Cak

13 pF

#### TYPICAL CHARACTERISTICS

| Saturation voltage, luminous flux 0.05 lumen luminous flux 1 lumen |           |                        | V <sub>D.C</sub> . |
|--|-----------|------------------------|--------------------|
| Anode voltage  | $v_a$     | 6 to 90                | VD.C.              |
| Dark current   | $I_{a_0}$ | max. 10 <sup>-12</sup> | A                  |
| Linearity 1)   |           | 0.1                    | %。                 |
| Insulation resistance  | rins      | min. $10^{15}$         | Ω                  |
| Rise time  | $T_r$     | 14                     | ns                 |



The relation between the incident luminous flux and the tube current is linear within measuring errors, provided the anode voltage is higher than the saturation voltage.

| Anode voltage                 |   | Va               | max. | 100   | VD.C.                                  |
|-------------------------------|---|------------------|------|---|--|
| Cathode current cathode area, | per mm <sup>2</sup> of<br>peak<br>average (T <sub>av</sub> = 1 s) | $I_{kp}$ $I_{k}$ | max. | 50 x 10 <sup>-9</sup><br>70 x 10 <sup>-12</sup> | A/mm <sup>2</sup><br>A/mm <sup>2</sup> |
| Cathode current,              | peak <sup>1</sup> )<br>average (T <sub>av</sub> = 1 s)            | $I_{k}^{I_{k}}$  | max. | 35 x 10 <sup>-6</sup><br>50 x 10 <sup>-9</sup>  | A<br>A                                 |
| Envelope temper               | ature   | tbulb            | min. | -90<br>+60                                      | °C<br>°C                               |

#### LIFE EXPECTANCY

With an average cathode current of  $50 \times 10^{-9}$  A, the sensitivity will not decrease more than 10% of its initial value between zero and 500 operating hours.

At lower cathode currents a higher stability may be expected.


#### REMARKS

- The cathode should not be exposed to direct sunlight.
- In cases where low frequency noise influences the measuring results, this source of noise may be reduced by cooling the tube to -90  $^{\circ}\text{C}$ .

#### APPLICATION

Please refer to data of 150AV.



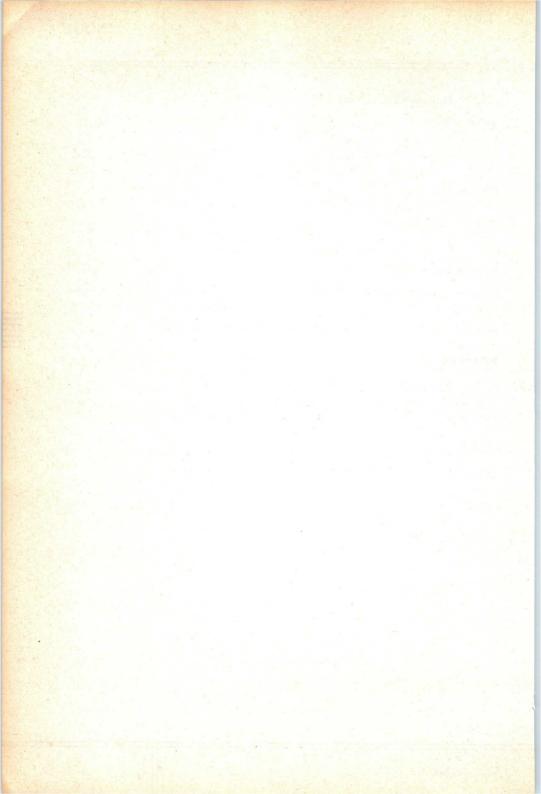

### PHOTO TUBE

Top sensitive gas-filled phototube, sensitive to ultra-violet radiation, intended for use as an on-off device in flame failure circuits.

| QUICK REFERENCE DATA |                |     |      |  |
|----------------------|----------------|-----|------|--|
| Supply voltage       | V <sub>b</sub> | 220 | VRMS |  |

#### OPERATING PRINCIPLE

When photons of sufficient energy strike the cathode of the device electrons may be released. Provided the tube voltage is sufficiently high, these electrons may initiate a discharge. The probability that this will occur is dependent amongst other things on the value of the supply voltage and the ultra-violet radiation intensity.

The discharge will extinguish as soon as the instantaneous value of the tube voltage falls below the maintaining voltage.


It should be noted that most sources of visible light (e.g. the sun, fluorescent lamps) are at the same time sources of U.V. radiation.


Where the level of such radiation affects the reliable operation of the circuit, adequate shielding or filtering should be provided.

#### DIMENSIONS AND CONNECTIONS

Dimensions in mm

Base: Noval 4 pins

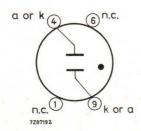

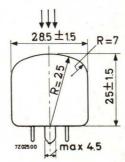

The arrows show the required direction of incident radiation for highest sensitivity.

Mounting position: any

#### MOUNTING

A noval socket with a centre hole diameter of at least  $5.4~\mathrm{mm}$  should be used. Pins 1 and 6 should be connected to pins 9 and 4 respectively on the socket.

#### CHARACTERISTICS


Spectral response 0.2 to 0.29  $\mu m$  (2000 to 2900 Å)

See also page 7

Maintaining voltage V<sub>m</sub> 180 to 220 V

#### RECOMMENDED CIRCUITS

I. DIRECT RELAY CIRCUIT ( $t_{amb} = max. 70$  °C)

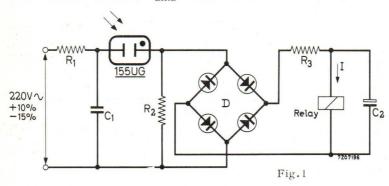

| RI             | $100 \Omega \pm 10 \%$          | Relay:           |   |                                |
|----------------|---------------------------------|------------------|---|--------------------------------|
| $R_2$          | $220 \text{ k}\Omega \pm 10 \%$ | R                |   | $12 \text{ k}\Omega \pm 10 \%$ |
| R <sub>3</sub> | $270 \Omega \pm 10 \%$          | Ion              | < | 3 mA                           |
| D              | 4 diodes                        | Ioff             |   | 0.5 to 1.5 mA                  |
| $C_1$          | $12 \text{ nF} \pm 15 \%$       | W <sub>max</sub> | > | 1.2 W.                         |
| $C_2$          | $25 \mu F \pm 15 \%$            |                  |   |                                |

#### Notes

- 1. The filter  $R_1$   $C_1$  reduces the effects of high voltage transients on the mains.
- 2. Incidental discharges of the tube will not activate the relay for any value of the mains voltage within the range 220 V +10 % to -15 %.

### Sensitivity

Under the worst probable conditions of supply voltage (190 V) component variation and characteristic variation of the tube during 10.000 hours, the tube will activate the relay when a "standard radiation source" (candle, see fig.4) is at a distance < 50 mm from the tube.



II. INDIRECT RELAY CIRCUITS (tamb = max. 100 °C)

IIa

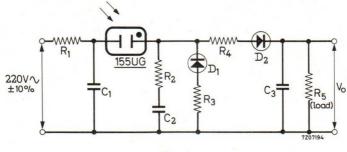


Fig. 2

| $R_1$          | $100 \Omega \pm 10\%$ | $C_1$      | 12 nF $\pm 15\%$       |
|----------------|-----------------------|------------|------------------------|
| R <sub>2</sub> | $100 \Omega \pm 10\%$ | $C_2$      | 12 nF $\pm 15\%$       |
| $R_3$          | 120 kΩ $\pm$ 10%      | $C_3^2$    | $2.2 \ \mu F \pm 15\%$ |
| R <sub>4</sub> | 120 kΩ $\pm$ 10%      | $D_1, D_2$ | diodes                 |
| D-             | 170 kg + 100          |            |                        |

#### Note

The filter  $R_1 \ C_1$  reduces the effects of high voltage transients on the mains.

### Sensitivity


The curve on page 8 shows the relationship between the output voltage  $V_{\rm O}$  and the distance between the tube and the "standard radiation source" (see fig.4) under the worst probable conditions of supply voltage (198 V) and component variation for the least sensitive new tube.

After the first 10 000 hours of operation the sensitivity will have decreased, but will in all cases be better than indicated by the curve on page 8 provided the radiation source is doubled (two candles according to fig.4).



### RECOMMENDED CIRCUITS (continued)

IIb

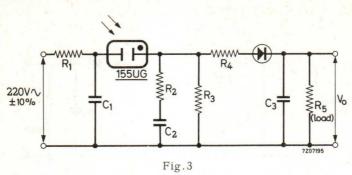

| $R_1$          | 100 | $\Omega \pm 10\%$  |  |
|----------------|-----|--------------------|--|
| R <sub>2</sub> | 100 | $\Omega \pm 10\%$  |  |
| $R_3$          | 330 | $k\Omega \pm 10\%$ |  |
| R <sub>4</sub> | 150 | $k\Omega \pm 10\%$ |  |
| R <sub>5</sub> | 470 | $k\Omega \pm 10\%$ |  |
|                |     |                    |  |

$$\begin{array}{ccc} C_1 & 12 \text{ nF} \pm 15\% \\ C_2 & 12 \text{ nF} \pm 15\% \\ C_3 & 2.2 \text{ } \mu\text{F} \pm 15\% \\ D_1 & \text{diode} \end{array}$$

### Note

The filter  $R_1$   $C_1$  reduces the effects of high voltage transients on the mains.

### Sensitivity

The curve on page 8 shows the relationship between the output voltage  $V_{\rm O}$  and the distance between the tube and the "standard radiation source" (see fig.4) under the worst probable conditions of supply voltage (198 V) and component variation for the least sensitive new tube.

After the first 10000 hours of operation the sensitivity will have decreased, but will in all cases be better than indicated by the curve on page 8 provided the radiation source is doubled (two candles according to fig.4).

#### LIMITING VALUES

| Ambient temperature, operating | t <sub>amb</sub> | min25<br>max. 70 |    | when used in cir-<br>cuit fig.1        |
|--------------------------------|------------------|------------------|----|--|
|                                |                  | max. 100         | °C | when used in cir-<br>cuits fig.2 and 3 |
| storage                        | t <sub>stg</sub> | min50 max. +50   |    |  |

### Warning

Designers of flame failure detectors are strongly advised not to depart from the recommended circuits. Any such departure may result in an unsafe operating mode which is likely to cause an internal short in the tube before its rated useful life has expired.

### Application notes

To ensure that the intensity of radiation incident on the built-in tube will be sufficient throughout its service life (10000 hours in the case of a new tube) the following procedure should be observed:

### For circuit fig.1

Place a "standard radiation source" at a distance of  $50\ \mathrm{mm}$  from the tube and measure the average voltage across the relay.

In actual operation the same tube should be mounted at a distance from the flame such that the average voltage across the relay is  $\underline{\text{at least}}$  equal to that obtained under irradiation from the "standard radiation source" at 50 mm.

Care should be taken that the value of the mains voltage is the same during both measurements.

The flame used during this measurement should be the minimum flame which has to be detected. No further readjustment of the distance between tube and flame will be necessary when the tube has to be replaced.

### For circuits fig.2 and fig.3

The output power from the circuits in fig.2 and 3 is too low for direct tripping of a relay. For effective discrimination, the voltage on the input of the added amplifier must attain a certain threshold value when the U.V. energy emitted by the flame attains a certain critical intensity.

The implication is that steps must be taken to ensure that the output voltage  $V_0$  from the recommended circuit will remain above this threshold value throughout the life of the tube. This is done in the following way.

Read from the dotted curve on page 8 the distance d corresponding to the required minimum output voltage  $\boldsymbol{V}_{\text{O}}\text{.}$ 

Place two "standard radiation sources" at the distance d from the tube and connect the circuit output to a d.c. voltmeter with a high input resistance; observe the average output voltage  $V_{\rm O}$ . (The mean value around which the needle swings.)

In actual operation the same tube should be mounted at a distance from the flame such that the average output voltage  $V_O$  is at <u>least</u> equal to that obtained under irradiation from the two "standard irradiation sources" at the distance d.

### 155UG

Care should be taken that the value of the mains voltage is the same during both measurements.

The flame used during this measurement should be the minimum flame which has to be detected.

No further readjustment of the distance between tube and flame is necessary when the tube has to be replaced.

Above procedures do of course not include allowance for dirt deposited on the tube during life.


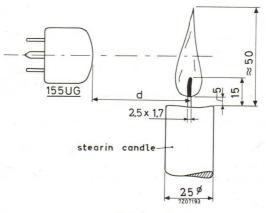


Fig.4


"Standard radiation source"



## 155UG

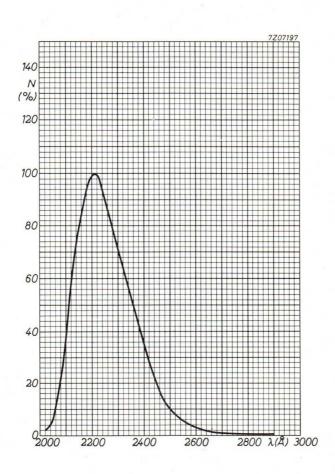




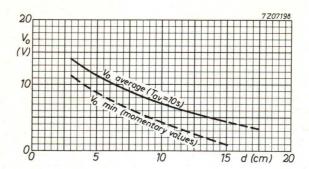

The output voltage as a function of the distance between radiation source and the least sensitive tube in the circuit of fig.3.

The curve is valid at 0 hours when the tube is irradiated by one "standard radiation source" and at 10000 hours when irradiated by two "standard radiation sources".

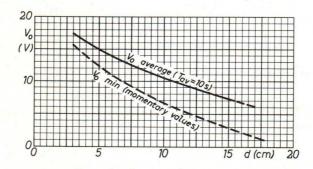


The output voltage as a function of the distance between radiation source and the least sensitive tube in the circuit of fig.2.

The curve is valid at 0 hours when the tube is irradiated by one "standard radiation source" and at 10 000 hours when irradiated by two "standard radiation sources".



## Photoconductive devices




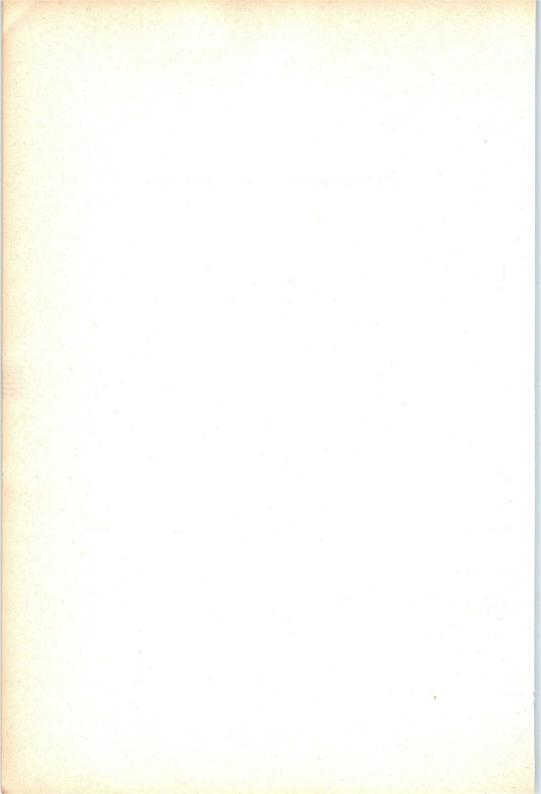

The Photoconductive Devices included in the previous edition of this Part will be in future be incorporated in Part 4 of the Semiconductor Handbooks (edition December 1970)

| ORP30N | RPY13 |
|--------|-------|
| ORP50  | RPY18 |
| ORP52  | RPY19 |
| ORP60  | RPY20 |
| ORP61  | RPY27 |
| ORP62  | RPY33 |
| ORP63  | RPY41 |
| ORP69  | RPY43 |
| ORP90  | RPY55 |
|        | RPY58 |



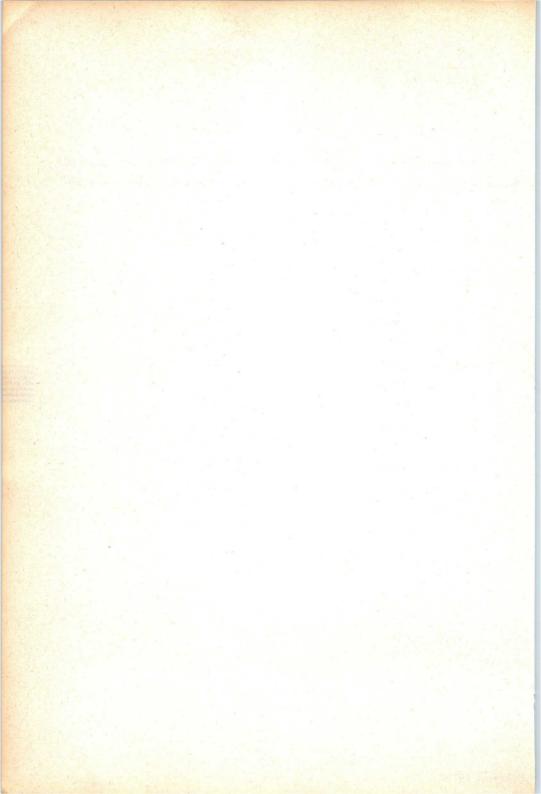

## INDEX OF TYPENUMBERS

| Type No.         | Section | Type No.        | Section | Type No.               | Section  |
|------------------|---------|-----------------|---------|------------------------|----------|
| AT1997<br>AT5010 | Acc.    | D.7-6<br>D.7-11 | CRT     | XQ1021series<br>XQ1022 | CT<br>CT |
| D7-190           | CRT     | D. 7-31         | CRT     | XQ1023series           | CT       |
| D10-11           | CRT     | D.7-32          | CRT     | XQ1024series           | CT       |
| D10-12           | CRT     | D.7-36          | CRT     | XQ1025series           | CT       |
| D10-160          | CRT     | D.7-78          | CRT     | XQ1026series           | CT       |
| D10-161          | CRT     | D.10-6          | CRT     | XQ1030                 | CT       |
| D10-170          | CRT     | D.10-74         | CRT     | XQ1040series           | CT       |
| D10-200/07       | CRT     | D.10-78         | CRT     | XQ1041                 | CT       |
| D13-15           | CRT     | D. 13-2         | CRT     | XQ1050series           | CT       |
| D13-16           | CRT     | D.13-32         | CRT     | XQ1220series           | CT       |
| D13-16/01        | CRT     | D.13-34         | CRT     | XQ1230series           | CT       |
| D13-19           | CRT     | E10-12          | CRT     | XX1052                 | CT       |
| D13-21           | CRT     | E10-130         | CRT     | 90AV                   | PT       |
| D13-23           | CRT     | M17-140W        | CRT     | 90CG                   | PT       |
| D13-26           | CRT     | M17-141W        | CRT     | 90CV                   | PT       |
| D13-26/01        | CRT     | M21-11W         | CRT     | 92AG                   | PT       |
| D13-27           | CRT     | M21-12W         | CRT     | 92AV                   | PT       |
| D13-49           | CRT     | M24-100W        | CRT     | 150AV                  | PT       |
| D13-450/01       | CRT     | M28-12W         | CRT     | 150CV                  |          |
| D13-480          | CRT     | M31-120W        | CRT     | 150UV                  | PT       |
| D13-481          | CRT     | M36-11W         | CRT     | 155UG                  | PT       |
| D13-500/01       | CRT     | M36-13W         | CRT     | 40467                  | Acc.     |
| D14-120          | CRT     | M36-16W         | CRT     | 55530                  | Acc.     |
| D14-121          | CRT     | M38-120W        | CRT     | 55531                  | Acc.     |
| D14-122          | CRT     | MG/U/Y13-38     | CRT     | 55532                  | Acc.     |
| D14-123          | CRT     | MW13-38         | CRT     | 55534                  | Acc.     |
| D14-160/09       | CRT     | M.13-16         | CRT     | 55540                  | Acc.     |
| D. 3-91          | CRT     | Q13-110         | CRT     | 55541                  | Acc.     |
| D.7-5            | CRT     | XQ1020series    | CT      | 55545                  | Acc.     |


Acc = Accessories CRT = Cathode-ray tubes CT = Camera tubes PT = Photo tubes

## INDEX

| Type No. | Section |
|----------|---------|
| 55547    | Acc.    |
| 55548    | Acc.    |
| 55548A   | Acc.    |
| 55550    | Acc.    |
| 55551    | Acc.    |
| 55554    | Acc.    |
| 55555    | Acc.    |
| 55557    | Acc.    |
| 55560    | Acc.    |
| 55561    | Acc.    |
|          |         |

| Type No.       | Section |
|----------------|---------|
| 55563          | Acc.    |
| 55566          | Acc.    |
| 55580          | Acc.    |
| 55580A         | Acc.    |
| 55581          | Acc.    |
| 55581A         | Acc.    |
| 55585          | Acc.    |
| 55875series    | CT      |
| 55875-IGseries | CT      |
| 55875R/G/B-IG  | CT      |
|                |         |

| Section    |
|------------|
| CT<br>Acc. |
|            |
|            |
|            |
|            |

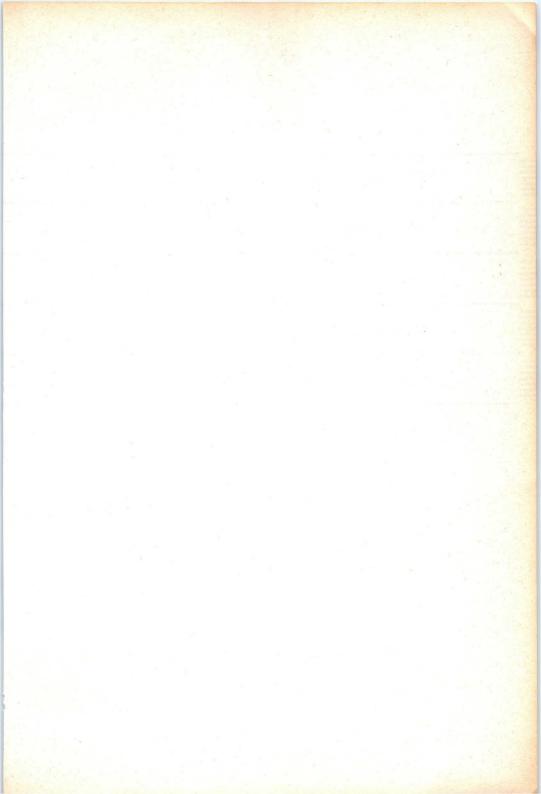

| Cathode-ray tube | es      |
|------------------|---------|
| Associated acces | ssories |
| Camera tubes     |         |
| Photo tubes      |         |
| Photoconductive  | devices |
|                  |         |
|                  |         |
|                  |         |
|                  |         |
|                  |         |

